

Jocca Brocchi Shaver/Hair Clipper Model 6

JOCCA Brocchi Shaver/Hair Clipper User Manual

Model: Brocchi Shaver/Hair Clipper Model 6

INTRODUCTION

Thank you for choosing the JOCCA Brocchi Shaver/Hair Clipper. This device is designed for efficient and comfortable hair trimming and shaving. It features a powerful 300mAh motor, ceramic blades, cordless operation, and is waterproof. Please read this manual carefully before first use to ensure safe operation and optimal performance. Keep this manual for future reference.

PRODUCT OVERVIEW

Familiarize yourself with the components of your JOCCA Brocchi Shaver/Hair Clipper.



Image 1: The main unit of the JOCCA Brocchi Shaver/Hair Clipper, showing the ceramic blade, power button, and digital display.



Image 2: The shaver/clipper unit, charging base, blade oil, and cleaning brush neatly arranged in its packaging.



Image 3: A close-up of one of the adjustable comb attachments, designed to control hair length during trimming.

Package Contents:

- JOCCA Brocchi Shaver/Hair Clipper Unit
- USB Charging Base
- 4 Adjustable Comb Attachments
- Blade Oil
- Cleaning Brush
- User Manual (this document)

SETUP

1. Initial Charging

Before first use, fully charge the device.

1. Place the shaver/clipper unit onto the USB charging base.
2. Connect the USB charging base to a compatible USB power source (e.g., computer, wall adapter 5V 1A).
3. The digital display on the shaver/clipper will show the battery percentage, indicating charging status.
4. A full charge provides approximately 120 minutes of use.



Image 4: The USB charging base, providing a convenient way to recharge the shaver/clipper.

2. Attaching Comb Attachments

To trim hair to a desired length, attach one of the four adjustable comb attachments.

1. Ensure the shaver/clipper is turned off.
2. Align the chosen comb attachment with the shaver head.
3. Gently push the attachment until it clicks securely into place.
4. To remove, gently pull the attachment away from the shaver head.

OPERATING INSTRUCTIONS

1. Turning On/Off

- Press the power button (marked with a universal power symbol) to turn the device on.
- Press the power button again to turn the device off.



Image 5: A detailed view of the power button, located on the body of the shaver/clipper.

2. Shaving and Trimming

- For a close shave, use the device without any comb attachment.
- For trimming, select the appropriate comb attachment for your desired hair length.
- Hold the shaver/clipper at a slight angle against the skin and move it slowly against the direction of hair growth.
- The integrated LED light can assist in identifying areas that may be missed during shaving.
- The ergonomic design and diamond texture provide a non-slip grip for easy and safe handling.



Image 6: The digital display showing "99 POWER", indicating battery level and operational status.

MAINTENANCE

1. Cleaning the Blades

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the shaver/clipper and remove any comb attachment.
2. Use the provided cleaning brush to remove loose hairs from the blades.
3. Since the device is waterproof, you can rinse the blade head under running water. Ensure the device is off before rinsing.
4. Allow the blades to air dry completely before reattaching any comb or storing the device.

2. Oiling the Blades

To maintain the sharpness and smooth operation of the ceramic blades, oil them regularly.

1. After cleaning and drying the blades, apply a small drop of the provided blade oil to the teeth of the blades.
2. Turn on the shaver/clipper for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth.

3. Storage

Store the shaver/clipper in a dry place, away from direct sunlight and out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the USB charging base.
Poor trimming performance.	Blades are clogged with hair or not oiled.	Clean the blades thoroughly and apply blade oil.
Device makes unusual noise.	Blades may be misaligned or require oiling.	Check blade alignment, clean, and oil the blades. If the issue persists, contact customer support.

SPECIFICATIONS

- Model:** Brocchi Shaver/Hair Clipper Model 6
- Motor:** 300mAh powerful motor
- Battery:** 3.7V 600 mAh Lithium-Ion
- Usage Time:** Up to 120 minutes per charge
- Charging:** USB 5V 1A
- Blades:** Ceramic
- Features:** Cordless, Waterproof, Digital Battery Indicator, LED Light, Ergonomic Design, Non-slip Grip
- Dimensions:** 15 x 15 x 15 cm
- Weight:** 500 g
- Manufacturer:** Jocca

SAFETY INFORMATION

- Do not immerse the charging base in water. The shaver unit is waterproof, but the charging base is not.
- Keep the device away from children.
- Do not disassemble or attempt to repair the device yourself. Contact qualified personnel for service.
- Use only the provided charging base and accessories.
- Avoid using the device on irritated or damaged skin.
- If the device shows signs of damage, discontinue use immediately.

WARRANTY AND SUPPORT

Your JOCCA Brocchi Shaver/Hair Clipper comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official Jocca website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Jocca customer service.

Jocca Customer Service: Please refer to the contact information provided on the product packaging or the official Jocca website.

© 2023 Jocca. All rights reserved.

This manual is subject to change without notice.

Related Documents

	<p><u>Oferta de Aspirador Escoba JOCCA</u></p> <p>Descubra la oferta especial para el aspirador escoba JOCCA, con cabezal para rincones, disponible por 89,95€. Detalles de La Voz de Galicia.</p>
	<p><u>Jocca Kitchen Scale Instruction Manual</u></p> <p>This manual provides instructions and safety warnings for the Jocca Kitchen Scale, model ref: 1588. Learn how to use, clean, and maintain your scale for accurate measurements.</p>
	<p><u>JOCCA Sport Mini Exercise Bike - User Manual and Instructions</u></p> <p>Comprehensive user manual for the JOCCA Sport Mini Exercise Bike, covering setup, operation, safety guidelines, and maintenance. Learn how to use your pedaler for effective home workouts.</p>
	<p><u>JOCCA 1228 Air Cooler User Manual and Instructions</u></p> <p>User manual for the JOCCA 1228 personal air cooler. Find instructions on operation, safety, cleaning, technical specifications, and environmental recycling information. Keep your space cool and comfortable with JOCCA.</p>