

Manuals.plus /

› **Hearth & Harbor** /

› Hearth & Harbor Mini Sewing Machine HH-MINISWNGSET User Manual

## Hearth & Harbor HH-MINISWNGSET

# Hearth & Harbor Mini Sewing Machine User Manual

Model: HH-MINISWNGSET

## INTRODUCTION

---

Thank you for choosing the Hearth & Harbor Mini Sewing Machine. This compact and portable sewing machine is designed for beginners, adults, and children, offering dual speed settings and a comprehensive accessory kit for various sewing projects. Please read this manual thoroughly before operating the machine to ensure safe and efficient use.

## PRODUCT CONTENTS

---

The Hearth & Harbor Mini Sewing Machine Basic Set includes the following items:

- Mini Sewing Machine
- Expandable Sewing Machine Table
- Foot Pedal
- AC/DC Adapter
- 16 Threaded Bobbins
- 4 Spare Bobbins
- 5 Sewing Machine Needles
- 16 Spools of Thread
- 10 Hand Sewing Needles
- Thimble
- Needle Threader
- Seam Ripper
- Scissors
- Tape Measure
- DIY Sewing Guide Book



Image: Overview of the Hearth & Harbor Mini Sewing Machine and its complete accessory kit, including bobbins, threads, needles, scissors, and a guide book.

## SAFETY INSTRUCTIONS

---

- Always disconnect the machine from the power source when not in use, before cleaning, or when changing needles.
- Keep fingers away from the needle, especially during operation.
- Do not allow children to operate the machine unsupervised.
- Use only the recommended power adapter.
- Ensure the machine is placed on a stable, flat surface during use.
- Do not operate the machine if it is wet or damaged.

## SETUP

---

### 1. Machine Parts Overview

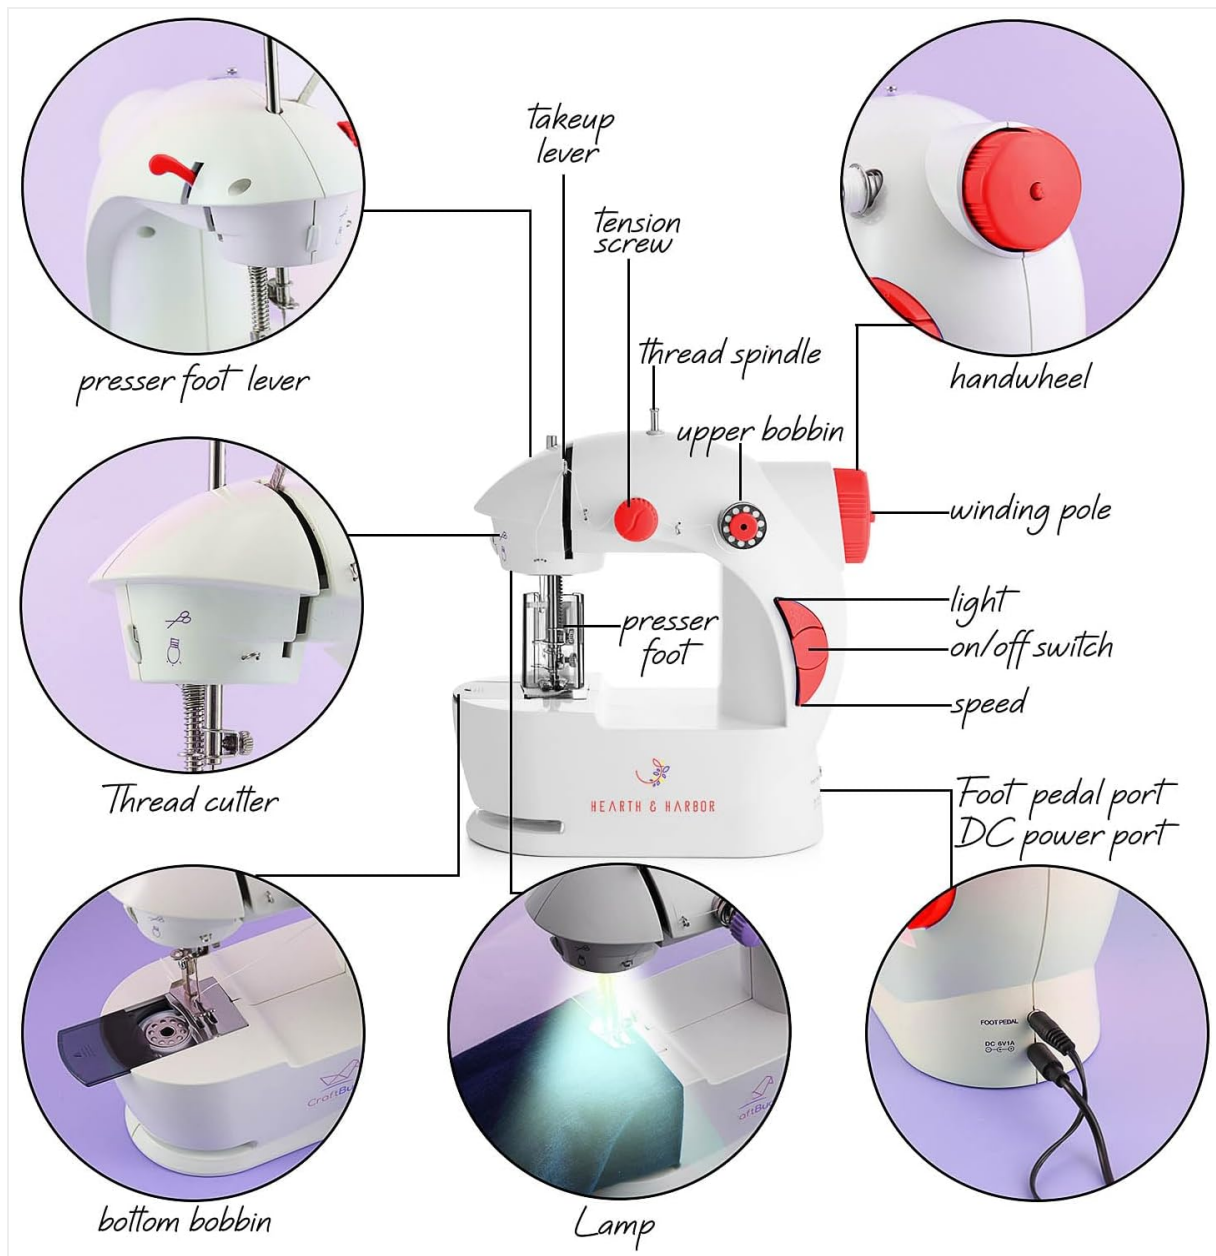


Image: A detailed diagram labeling key components of the mini sewing machine, including the handwheel, tension screw, presser foot, thread cutter, and power ports.

## 2. Powering the Machine

The machine can be powered by the included AC/DC adapter or by 4 AA batteries (not included) for portable use. Insert the adapter into the DC power port on the back of the machine. If using batteries, open the battery compartment on the bottom and insert 4 AA batteries, ensuring correct polarity.

## 3. Attaching the Extension Table

Align the pegs of the extension table with the corresponding holes on the sewing machine base and gently push to secure it. This provides a larger working area for your projects.

## 4. Threading the Machine

1. **Upper Thread:** Place a spool of thread on the thread spindle. Guide the thread through the tension screw, then through the take-up lever, and finally through the needle eye. Use the needle threader for assistance.
2. **Bobbin Thread:** Open the bottom bobbin cover. Insert a pre-wound bobbin into the bobbin case, ensuring the thread unwinds in the correct direction. Pull the thread through the small slot in the bobbin case.

Ensure both upper and bobbin threads are pulled under the presser foot before starting to sew.

## OPERATING INSTRUCTIONS

### 1. Turning On/Off and Speed Adjustment

Use the on/off switch located on the side of the machine to power it on. The machine features dual speed settings (low and high), which can be selected using the speed switch. The built-in LED light will illuminate your sewing area when the machine is on.

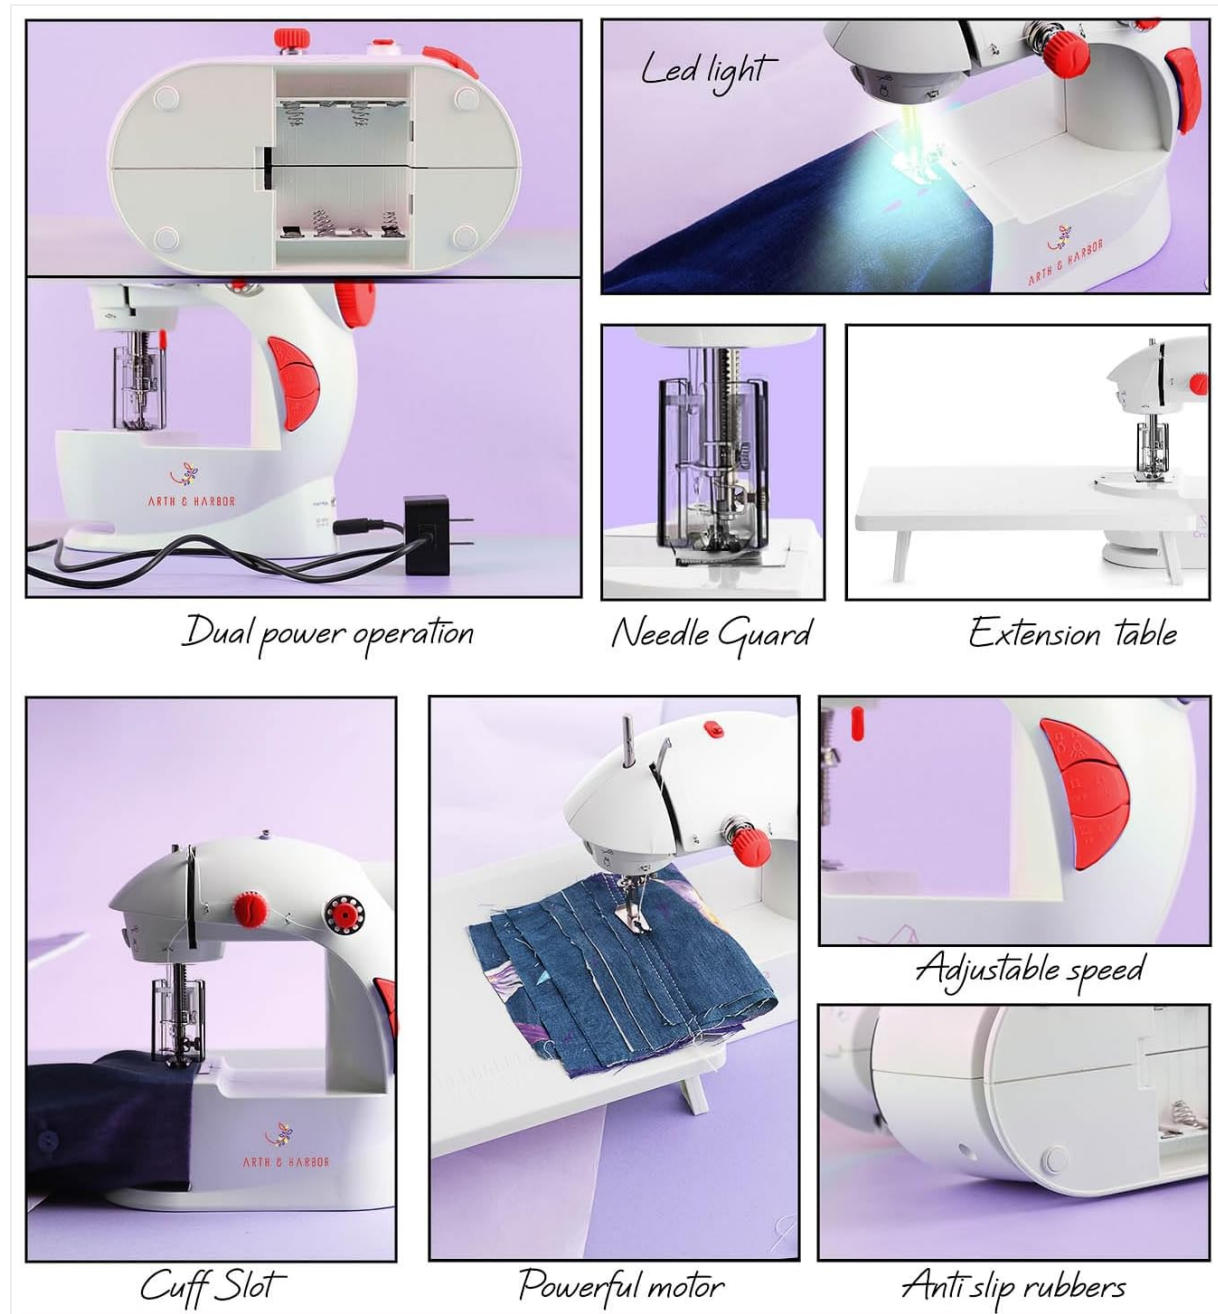


Image: A collage showcasing various features of the mini sewing machine, such as the LED light, dual power operation, needle guard, extension table, cuff slot, powerful motor, and anti-slip rubbers.

### 2. Using the Foot Pedal

Connect the foot pedal to the foot pedal port on the machine. Press the foot pedal to start sewing and release to stop. This allows for hands-free speed control.

### 3. Stitching

Place your fabric under the presser foot. Lower the presser foot lever. Select your desired speed. Gently press the foot pedal or use the handwheel to begin stitching. Guide the fabric smoothly as the machine sews.

#### 4. Finishing a Seam

Once your seam is complete, lift the presser foot lever and gently pull the fabric away from the machine. Use the integrated thread cutter to snip the threads.

### MAINTENANCE

---

- **Cleaning:** Regularly clean lint and dust from the bobbin area and under the needle plate using a small brush. Ensure the machine is unplugged before cleaning.
- **Needle Replacement:** If the needle becomes dull or bent, replace it with a new one from the accessory kit. Loosen the needle clamp screw, remove the old needle, insert the new needle with the flat side facing the back, and tighten the screw.
- **Storage:** Store the machine in a dry, clean place away from direct sunlight when not in use.

### TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Machine not turning on	No power, batteries drained, adapter not connected	Check power adapter connection, replace batteries, ensure power switch is ON.
Thread breaks frequently	Incorrect threading, tension too tight, dull needle, poor quality thread	Re-thread the machine carefully, adjust tension, replace needle, use good quality thread.
Skipped stitches	Incorrect needle insertion, bent needle, wrong needle type for fabric	Ensure needle is inserted correctly and fully, replace with a new, sharp needle suitable for your fabric.
Fabric not feeding	Presser foot not lowered, feed dogs obstructed	Lower the presser foot, clear any obstructions from the feed dog area.

### SPECIFICATIONS

---

**Brand:** Hearth & Harbor

**Model Number:** HH-MINISWNGSET

**Product Dimensions:** 3 x 6.75 x 7.9 inches

**Item Weight:** 2 pounds

**UPC:** 840284538802

**Power Source:** AC/DC Adapter or 4 AA Batteries

**Features:** Dual Speed, Built-in LED Light, Foot Pedal Operation, Extension Table

### WARRANTY INFORMATION

---

For detailed warranty information, please refer to the documentation included with your product packaging or visit the official Hearth & Harbor website. Warranty terms and conditions may vary.

## CUSTOMER SUPPORT

---

If you encounter any issues or have questions not covered in this manual, please contact Hearth & Harbor customer support. Contact details can typically be found on the product packaging or the official brand website.