

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [EMTOP](#) /
- › [EMTOP ESNE10301 Plastic Water Gun Trigger Nozzle User Manual](#)

## EMTOP ESNE10301

# EMTOP ESNE10301 Plastic Water Gun Trigger Nozzle

## USER INSTRUCTION MANUAL

### Introduction

Thank you for choosing the EMTOP ESNE10301 Plastic Water Gun Trigger Nozzle. This manual provides essential information for the safe and efficient use, setup, operation, and maintenance of your new nozzle. Please read these instructions carefully before first use and retain them for future reference.

The EMTOP ESNE10301 is designed for various watering and cleaning tasks, featuring a durable plastic construction, a comfortable grip, and three distinct spray patterns for versatile application.

### Product Overview



*Image: The EMTOP ESNE10301 plastic water gun trigger nozzle, featuring a red spray head, blue ergonomic handle with a soft grip, and a black trigger lever. The nozzle is shown detached from packaging, highlighting its design and components.*

The nozzle consists of a robust plastic body with an ergonomic handle for comfortable use. It features a trigger mechanism for water flow control and a rotating head to select between three spray patterns.

## Setup

- Inspect Components:** Ensure all parts of the nozzle are present and undamaged.
- Connect to Hose:** Attach the threaded end of the nozzle to a standard garden hose. Twist clockwise until securely tightened. Hand-tighten only; do not overtighten with tools, as this may damage the plastic threads.
- Check for Leaks:** Turn on the water supply slowly and check for any leaks at the connection point. If leaks occur, tighten the connection slightly or ensure a rubber washer is properly seated within the hose fitting.

## Operating Instructions

- Turn On Water:** Ensure your garden hose is connected to a water source and the water supply is turned on.
- Control Water Flow:** Squeeze the trigger lever on the handle to initiate water flow. Release the trigger to stop the water flow.
- Select Spray Pattern:** The EMTOP ESNE10301 offers three spray patterns: Cone, Rinse, and Jet. Rotate the red nozzle head to cycle through these patterns until the desired spray is achieved.
  - Cone:** A wide, gentle spray suitable for watering delicate plants or broad coverage.
  - Rinse:** A medium-strength, dispersed spray ideal for general rinsing and cleaning.
  - Jet:** A powerful, concentrated stream for tough cleaning tasks or reaching distant areas.
- Adjust Flow (if applicable):** Some models may feature a flow control knob near the trigger. If present, rotate this knob to adjust the water pressure and volume.

## Maintenance

- Cleaning:** After each use, rinse the nozzle with clean water to remove any dirt, debris, or chemical residues.
- Storage:** Store the nozzle in a cool, dry place away from direct sunlight and extreme temperatures. Disconnect it from the hose when not in use for extended periods.
- Winterization:** In freezing climates, ensure all water is drained from the nozzle and hose before storing to prevent damage from ice expansion.
- Gasket Check:** Periodically inspect the rubber washer (gasket) inside the hose connection for wear or damage. Replace if necessary to prevent leaks.

## Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Water leaks from connection.	Loose connection, worn or missing rubber washer.	Tighten connection. Inspect and replace rubber washer if damaged or missing.
No water flow or low pressure.	Water supply off, kinked hose, clogged nozzle head.	Ensure water supply is on. Straighten hose. Check nozzle head for debris and clean if necessary.
Difficulty changing spray patterns.	Mineral buildup or debris in the nozzle head mechanism.	Rinse the nozzle head thoroughly. If stubborn, soak the head in a vinegar solution to dissolve mineral deposits.

## Specifications

- **Manufacturer:** EMTOP
- **Model Number:** ESNE10301
- **Material:** Plastic
- **Color:** Red and Blue
- **Product Dimensions:** 22 x 20 x 6 cm (8.66 x 7.87 x 2.36 inches)
- **Number of Spray Patterns:** 3 (Cone, Rinse, Jet)
- **Included Components:** Water Gun Trigger Nozzle
- **Country of Origin:** China

## Warranty and Support

For warranty information or technical support, please refer to the packaging or contact your retailer directly. Keep your purchase receipt as proof of purchase.

If you encounter any issues not covered in this manual, please reach out to the customer service department of your place of purchase for assistance.