

TLSUNNY Holzkohlegrill-02

TLSUNNY XXL Charcoal Grill with Cart and Wheels - Model Holzkohlegrill-02 User Manual

Model: Holzkohlegrill-02 | Brand: TLSUNNY

1. INTRODUCTION

Thank you for choosing the TLSUNNY XXL Charcoal Grill with Cart and Wheels. This manual provides essential information for the safe assembly, operation, and maintenance of your new grill. Please read all instructions carefully before use and retain this manual for future reference.

This XXL charcoal grill is designed for outdoor use, offering a large grilling surface and convenient features for an enjoyable barbecue experience. Its robust construction and thoughtful design ensure durability and ease of use, perfect for gatherings of 6 to 10 people.

2. SAFETY INFORMATION

- **Outdoor Use Only:** This grill is intended for outdoor use only. Do not operate indoors or in enclosed spaces.
- **Keep Away from Combustibles:** Always place the grill on a stable, non-combustible surface, away from flammable materials, structures, and vegetation.
- **Supervise Children and Pets:** Keep children and pets away from the hot grill.
- **Use Caution with Charcoal:** Use only charcoal briquettes or lump charcoal. Do not use wood in a charcoal grill, as high temperatures from open flames can damage the paint.
- **Proper Ventilation:** Ensure adequate ventilation when using the grill. The integrated chimney helps direct smoke away.
- **Hot Surfaces:** The grill surfaces become extremely hot during use. Use heat-resistant gloves and appropriate tools.
- **Ash Disposal:** Allow charcoal to cool completely before disposing of ashes.
- **Assembly:** Ensure all parts are correctly assembled and tightened before use. This product is shipped in two packages.

3. PACKAGE CONTENTS

Your TLSUNNY XXL Charcoal Grill is shipped in two packages. Please verify that all components are present before beginning assembly.

- Grill Body (main chamber, lid)
- Grilling Grates (main and warming rack)
- Charcoal Tray (height-adjustable)
- Ash Collection Box
- Side Tables (2, foldable)
- Bottom Storage Shelf
- Wheels (2)
- Legs and Support Frames
- Chimney
- Built-in Thermometer
- Bottle Opener
- Handles (for lid, charcoal tray, ash box)
- Assembly Hardware (screws, nuts, washers, pins)

Note: Some small parts may be pre-attached to larger components.

4. ASSEMBLY INSTRUCTIONS

Estimated assembly time for two people is 30 minutes. Follow these steps carefully. Refer to the assembly video for visual guidance.

Your browser does not support the video tag.

Video 1: Step-by-step assembly guide for the TLSUNNY XXL Charcoal Grill.

4.1. Unpacking and Part Identification

Carefully unpack all components and lay them out. Identify each part using the provided parts list (if included) and the images below.



Image 1: Fully assembled TLSUNNY XXL Charcoal Grill in an outdoor setting.



Image 2: Detailed diagram of grill dimensions and key components.

4.2. Main Body Assembly

1. Attach the side panels to the front and back panels of the main grill body using the provided screws. Ensure all connections are secure.
2. Install the air vents on the sides of the main body. These allow for precise heat control.
3. Secure the legs to the main grill body. Ensure they are firmly attached to provide a stable base.
4. Attach the bottom storage shelf to the lower part of the legs.
5. Install the wheels on one side of the grill for easy mobility.

4.3. Charcoal Tray and Ash Box Installation

1. Insert the charcoal tray into the main grill body. Ensure the height adjustment mechanism is correctly aligned.
2. Attach the ash collection box to the bottom of the charcoal tray compartment. This allows for easy ash removal.
3. Install the handles for the charcoal tray and ash box.

4.4. Lid and Accessories

1. Attach the lid to the main grill body using the hinges.
2. Install the chimney on the lid.

3. Secure the built-in thermometer to the lid.
4. Attach the foldable side tables to the main body. Ensure the hooks for tools are accessible.
5. Install the main grilling grates and the upper warming rack.
6. Attach the bottle opener to the side of the grill.



Image 3: Key features including the chimney, integrated thermometer, adjustable air vent, and bottle opener.



Image 4: Foldable side table with integrated hooks for barbecue tools.

5. OPERATING INSTRUCTIONS

5.1. Preparing for Grilling

1. **Charcoal Loading:** Open the charcoal access door on the front of the grill. Place charcoal briquettes or lump charcoal onto the charcoal tray.
2. **Lighting Charcoal:** Use a charcoal chimney starter or appropriate fire starters to ignite the charcoal. Allow the charcoal to ash over before placing food on the grates.
3. **Temperature Control:**
 - **Adjustable Charcoal Tray:** Use the lever on the side of the grill to adjust the height of the charcoal tray. Raising the tray increases heat intensity, while lowering it reduces it. There are 6 adjustable levels (15 cm to 25 cm from the charcoal box).
 - **Air Vents:** Adjust the side air vents to control airflow. More airflow increases heat, less airflow reduces it.
 - **Lid Thermometer:** Monitor the internal temperature of the cooking chamber using the built-in thermometer on the lid.



Image 5: Demonstrates versatile cooking options, including direct grilling and indirect cooking with cookware.

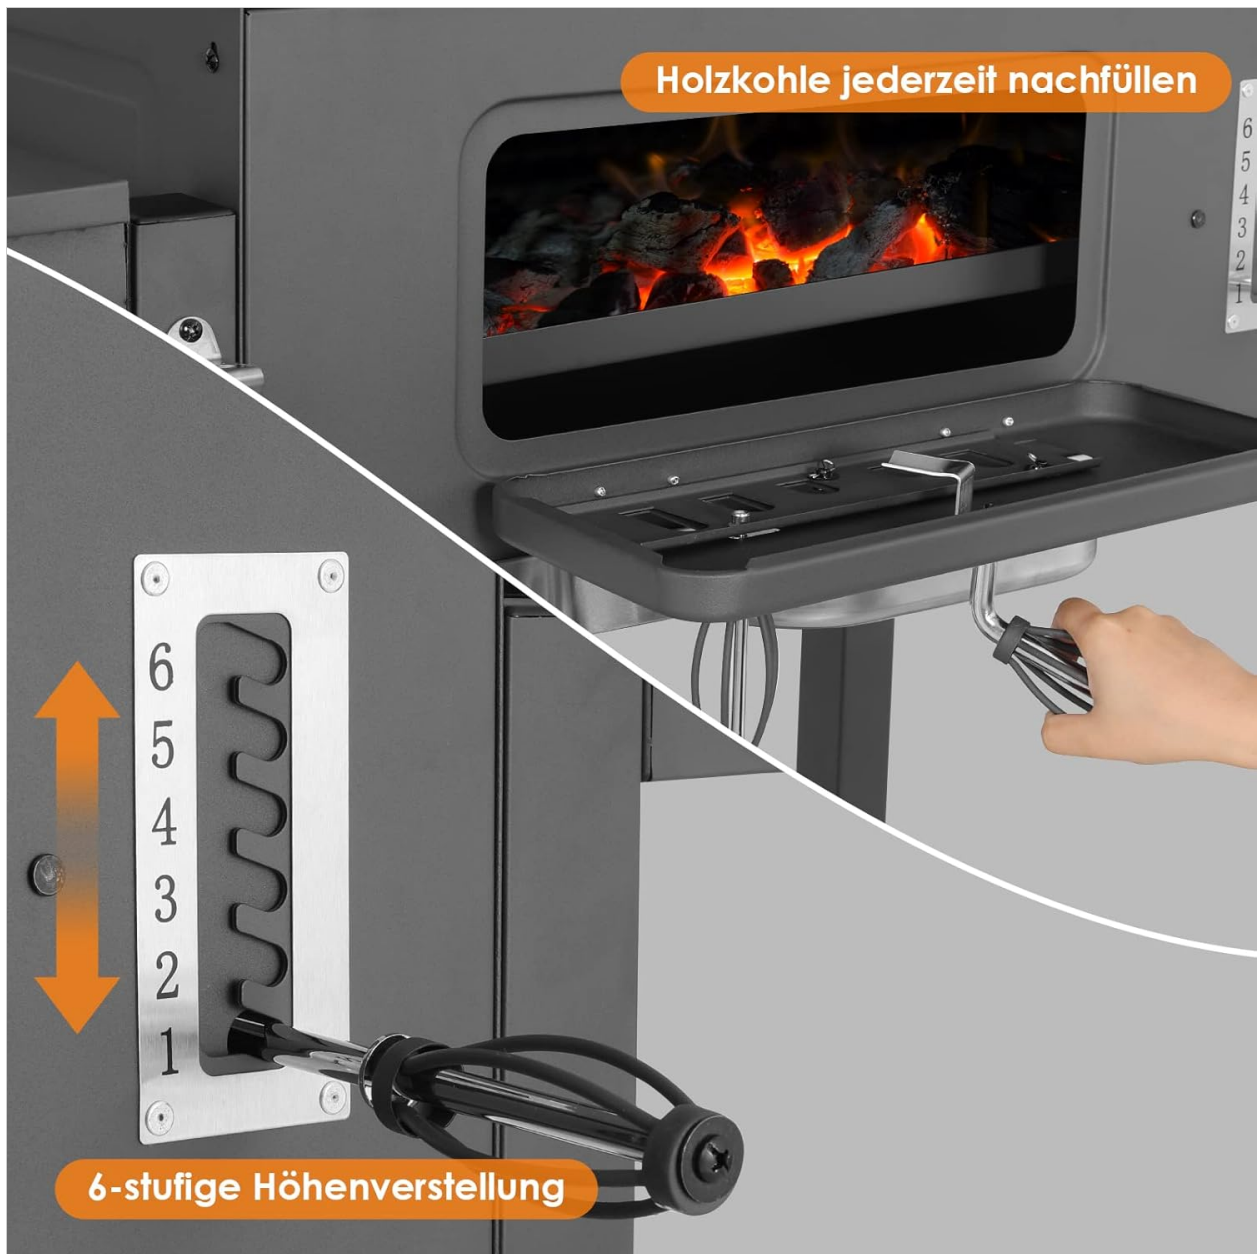


Image 6: The 6-level height adjustment mechanism for the charcoal tray, allowing precise heat control.

5.2. Grilling Food

Place food on the main grilling grates. Use the upper warming rack to keep cooked food warm or for slower cooking items. Close the lid to retain heat and smoke for enhanced flavor.

Your browser does not support the video tag.

Video 2: Demonstration of preparing food and grilling various items on the charcoal grill.

5.3. Post-Grilling

After grilling, close the lid and air vents to extinguish the charcoal. Allow the grill to cool completely before cleaning.

6. MAINTENANCE AND CARE

- **Ash Removal:** Once the grill is completely cool, pull out the independent ash collection box to easily dispose of ashes.
- **Cleaning Grates:** Clean grilling grates with a wire brush after each use. For stubborn residue, soak grates in warm, soapy water.
- **Exterior Cleaning:** Wipe down the exterior surfaces with a damp cloth. Avoid abrasive cleaners that

could damage the finish.

- **Storage:** Store the grill in a dry, covered area when not in use to protect it from weather elements.



Image 7: Highlights the spacious side tables for food preparation and the convenience of wheels for transport.

7. TROUBLESHOOTING

- **Low Heat:** Ensure sufficient charcoal is used. Check that air vents are open to allow proper airflow. Adjust charcoal tray height to raise heat.
- **Excessive Smoke:** Ensure the chimney is clear. Adjust air vents to control combustion.
- **Difficulty Moving:** Check that wheels are properly installed and not obstructed.
- **Unstable Grill:** Verify all screws and bolts from assembly are tightened. Ensure the grill is on a flat, stable surface.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Brand	TLSUNNY
Model Name	Holzkohlegrill-02
Assembled Dimensions (L x W x H)	152 x 60 x 136 cm (59.8 x 23.6 x 53.5 inches)
Main Grilling Surface	68 x 46 cm (26.8 x 18.1 inches)
Upper Warming Rack	67 x 23 cm (26.4 x 9.1 inches)
Charcoal Tray Dimensions	53.5 x 36.5 cm (21.1 x 14.4 inches)
Adjustable Charcoal Tray Height	6 levels (15-25 cm from charcoal box)
Side Table Dimensions	53.5 x 38.5 x 7 cm (21.1 x 15.2 x 2.8 inches)
Bottom Storage Shelf Dimensions	75 x 49 cm (29.5 x 19.3 inches)
Material	High-quality Iron, Stainless Steel (handles)
Fuel Type	Charcoal
Color	Grey
Special Features	Adjustable charcoal basket, adjustable ventilation, integrated thermometer, foldable side tables, storage shelf, heat-resistant handle, corrosion-resistant, bottle opener, chimney.
Weight	28.5 kg (62.8 lbs)
UPC	644097654311

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact TLSUNNY customer service directly. Keep your purchase receipt as proof of purchase.