

## EVVO D1 Slim

# EVVO D1 Slim Dishwasher User Manual

Model: D1 Slim (V0274)

## 1. INTRODUCTION

---

Thank you for choosing the EVVO D1 Slim Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before first use and keep it for future reference.

## 2. SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged. Contact customer support.
- Keep children away from the dishwasher, especially when it is operating or when the door is open.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Never touch the heating element during or immediately after operation.
- Load sharp items (knives, forks) with the handles up to prevent injury.
- Do not overload the dishwasher.
- Disconnect the appliance from the power supply before cleaning or maintenance.

## 3. PRODUCT OVERVIEW

---

The EVVO D1 Slim Dishwasher is designed for efficiency and convenience in smaller spaces, offering a capacity for 9 place settings and a range of washing programs.



Figure 3.1: The EVVO D1 Slim dishwasher seamlessly integrated into a modern kitchen.



Figure 3.2: Close-up of the hidden control panel with LED display for intuitive program selection.

## Key Features:

- **9 Place Settings:** Compact design ideal for smaller households without compromising capacity.
- **Slim 45 cm Width:** Perfect for kitchens with limited space.
- **5 Wash Programs:** Includes options for various cleaning needs, such as a 30-minute quick wash and a half-load function.
- **Hidden Control Panel & LED Display:** Provides a sleek aesthetic and easy program management.
- **Adjustable Upper Basket:** Accommodates different sizes of dishes and utensils.
- **Temperature Control:** Special function for optimized washing.

## 4. SETUP AND INSTALLATION

---

Proper installation is crucial for the performance and longevity of your dishwasher. It can be installed under a counter or as a freestanding unit.

### 4.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Report any damage to your retailer immediately.

### 4.2 Placement

Position the dishwasher on a level, stable surface. Ensure there is adequate space for the door to open fully and for water and electrical connections.

### 4.3 Water Connection

Connect the water inlet hose to a cold water supply. Ensure the drain hose (included) is properly connected to a drain pipe or sink trap, preventing kinks or blockages.

### 4.4 Electrical Connection

Connect the dishwasher to a grounded electrical outlet. The voltage requirement is 220V. Do not use extension cords or adapters.

## 5. OPERATING INSTRUCTIONS

---

Follow these steps for optimal washing results.

### 5.1 Loading the Dishwasher

Proper loading ensures effective cleaning and drying. Utilize the adjustable upper basket for taller items and the cutlery basket for silverware.



Figure 5.1: Open dishwasher showing the interior racks and adjustable upper basket.



Figure 5.2: Example of properly loaded dishes in the lower rack.

- Scrape off large food particles before loading.
- Place glasses, cups, and smaller items in the upper basket.

- Place plates, bowls, and larger items in the lower basket.
- Ensure items do not block the spray arms.
- Load cutlery into the cutlery basket with handles facing up for safety and better cleaning.

## 5.2 Adding Detergent, Rinse Aid, and Salt

- **Detergent:** Add the appropriate amount of dishwasher detergent to the dispenser.
- **Rinse Aid:** Fill the rinse aid dispenser to improve drying performance and prevent water spots. The LED display will indicate when refill is needed.
- **Dishwasher Salt:** If you live in an area with hard water, add dishwasher salt to the dedicated compartment to prevent limescale buildup. The LED display will indicate when refill is needed.

## 5.3 Program Selection

The dishwasher features 5 wash programs, controlled via the hidden panel and LED display.

1. Close the dishwasher door.
2. Press the power button to turn on the appliance.
3. Use the program selection buttons (pulsadores) to choose your desired wash cycle. Available programs include:
  - **Quick Wash (30 minutes):** For lightly soiled dishes that need a fast clean. Note: This program may use cooler water.
  - **Half Load:** For smaller loads, optimizing water and energy consumption.
  - **Eco:** Energy-efficient program for normal soiled dishes.
  - **Intensive:** For heavily soiled pots and pans.
  - **Normal:** Standard program for daily use.
4. The LED display will show the selected program and remaining time.
5. Press the Start button to begin the cycle.

# 6. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your dishwasher.

## 6.1 Cleaning the Filters

The filter system should be cleaned regularly to prevent food particles from recirculating and affecting wash performance.

1. Turn off and unplug the dishwasher.
2. Remove the lower basket.
3. Twist and lift out the filter assembly.
4. Rinse the filters under running water to remove any debris. Use a soft brush if necessary.
5. Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked.

## 6.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If clogged, remove the spray arms and clear the holes with a thin object.

## 6.3 Cleaning the Interior and Exterior

- Wipe the interior with a damp cloth after each cycle to prevent odors.
- Clean the exterior with a soft, damp cloth and mild detergent. Do not use abrasive cleaners.

## 7. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press Start.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters, wrong program.	Reload dishes, clean spray arms and filters, add more detergent, select a more intensive program.
Water remains in the tub	Clogged drain hose or filter, drain pump malfunction.	Clean filters, check drain hose for kinks or blockages.
Water spots or streaks on dishes	Lack of rinse aid, hard water.	Refill rinse aid dispenser, consider using dishwasher salt.
Quick wash program uses cold water	This program is designed for quick washes of lightly soiled items and may not heat water to the same degree as other cycles.	For hotter washes, select a standard or intensive program. Ensure hot water supply is connected and functioning correctly for other cycles.

## 8. SPECIFICATIONS

Detailed technical specifications for the EVVO D1 Slim Dishwasher.

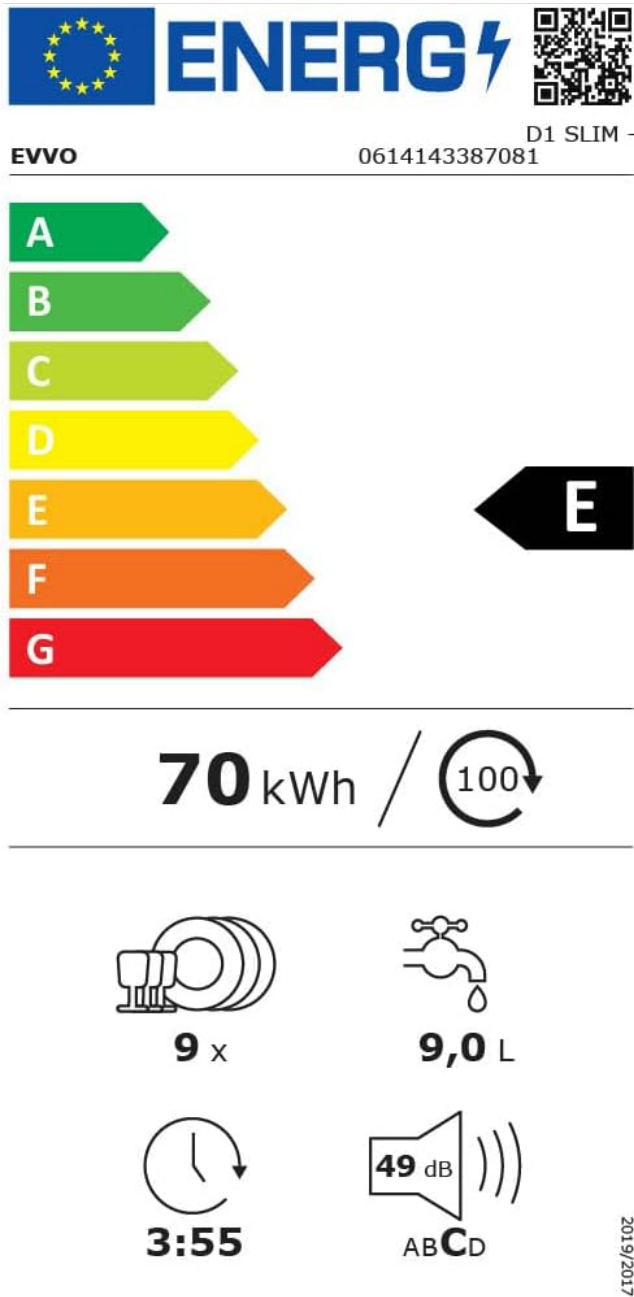


Figure 8.1: Dimensional diagram of the EVVO D1 Slim dishwasher.

Ficha de información del producto				
REGLAMENTO DELEGADO (UE) 2019/2017 DE LA COMISIÓN en lo relativo al etiquetado energético de los aparatos de refrigeración domésticos				
Nombre o marca comercial del proveedor: EVVO				
Dirección del proveedor: EVVO HOME, CRTA. MADRID 9, 37900 SANTA MARTA DE TORMES SALAMANCA, ES				
Identificador del modelo: D1 SLIM - 0614143387081				
Parámetros generales del producto:				
Parámetro	Valor	Parámetro	Valor	
Capacidad asignada <sup>(a)</sup> (ps)	9	Dimensiones en cm	Altura	85
			Anchura	45
			Profundidad	61
IEE <sup>(a)</sup>	55,9	Clase de eficiencia energética <sup>(a)</sup>	E	
Índice de eficiencia del lavado <sup>(a)</sup>	1,125	Índice de eficiencia del secado <sup>(a)</sup>	1,065	
Consumo de energía en kWh [por ciclo], sobre la base del programa eco utilizando una carga con agua fría. El consumo real de energía dependerá de cómo se utilice el aparato.	0,704	Consumo de agua en litros [por ciclo], sobre la base del programa eco. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua.	9,0	
Duración del programa <sup>(a)</sup> (h:min)	3:55	Tipo	de libre instalación	
Ruido acústico aéreo emitido <sup>(a)</sup> (dB(A) re 1 pW)	49	Clase de ruido acústico aéreo emitido <sup>(a)</sup>	C	
Modo apagado (W) (si procede)	0,49	Modo preparado (W) (si procede)	0,00	
Inicio aplazado (W) (si procede)	1,00	Modo preparado en red (W) (si procede)	0,00	
Duración mínima de la garantía ofrecida por el proveedor: 36 meses				
Información adicional:				
Enlace al sitio web del proveedor, en el que se encuentra la información contemplada en el punto 6 del anexo II del Reglamento (UE) 2019/2022 de la Comisión: <a href="https://evvohome.com/">https://evvohome.com/</a>				
<sup>(a)</sup> para el programa «eco».				

Página 1 / 1

Figure 8.2: Energy label indicating efficiency class E and consumption details. For more details, visit [EPREL Database](#).

Parameter	Value
Model Number	D1 Slim (V0274)
Dimensions (H x W x D)	85 x 45 x 60 cm
Weight	36.5 kg
Capacity	9 Place Settings
Noise Level	49 dB
Number of Programs	5
Voltage	220 V
Energy Efficiency Class	E
Water Consumption (per cycle)	9.0 L
Cycle Duration (Eco program)	3:55 (h:min)
Installation Type	Under-counter or Freestanding
Material	Stainless steel, plastic, and other metals
Components Included	Cutlery basket, Drain Hose, User Manual

## 9. WARRANTY AND SUPPORT

---

### 9.1 Warranty Information

This EVVO D1 Slim Dishwasher comes with a **3-year warranty** from the date of purchase. The warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

### 9.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact EVVO customer support through their official website or the retailer where you purchased the appliance. Provide your model number (D1 Slim) and serial number (if applicable) for faster service.