

ONN Series 1

ONN 24-Inch Series 1 HD 720P LED Smart TV User Manual

Model: Series 1

1. INTRODUCTION

Thank you for choosing the ONN 24-Inch Series 1 HD 720P LED Smart TV. This manual provides essential information for the safe and efficient operation of your television. Please read it thoroughly before use and retain it for future reference.

Safety Information

- Do not expose the TV to rain or moisture.
- Ensure proper ventilation around the TV.
- Do not block ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel.

2. WHAT'S IN THE BOX

Verify that all components are present in the packaging:

- ONN 24-Inch Series 1 HD 720P LED Smart TV
- Remote Control
- TV Stand (2 pieces)
- Power Cord
- Quick Start Guide (not included in this manual)



Image: The ONN 24-Inch Smart TV shown with its detachable stand feet and a separate wall mount bracket. The screen displays a vibrant landscape image.

3. SETUP

3.1 Attaching the TV Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align each stand leg with the corresponding screw holes on the bottom of the TV.
3. Secure each leg with the provided screws. Ensure they are tightened firmly.



Image: A direct front view of the ONN 24-Inch Smart TV, resting on its attached stand legs. The screen displays a colorful lake and mountain scene.

3.2 Wall Mounting (Optional)

If you choose to wall mount your TV, remove the stand legs. Use a VESA-compatible wall mount (not included) and follow the instructions provided with your wall mount. Ensure the wall can support the weight of the TV.



Image: An ONN Smart TV is shown mounted on a vibrant orange wall above a white and orange media console. The TV screen displays colorful feathers.

3.3 Connecting Power and Devices

1. Connect the power cord to the TV's power input and then to a wall outlet.
2. Connect any external devices (e.g., cable box, game console, USB drive) to the appropriate ports on the TV.



Image: A side-angle view of the ONN Smart TV, highlighting the various input ports located on the side, including USB ports.

3.4 Initial Setup (Roku TV)

1. Power on the TV using the remote control.
2. Follow the on-screen instructions to select your language, connect to your Wi-Fi network, and activate your Roku account.
3. The Roku TV guided setup will walk you through channel scanning and adding streaming apps.

4. OPERATING YOUR TV

4.1 Remote Control Functions

The included remote control allows you to navigate the Roku TV interface and control your television's functions.



Image: A close-up of the ONN Roku TV remote control, featuring standard navigation buttons, playback controls, and dedicated app buttons.

- **Power Button:** Turns the TV on or off.
- **Directional Pad (D-Pad):** Navigates menus and selections.
- **OK Button:** Confirms selections.
- **Home Button:** Returns to the Roku TV home screen.
- **Back Button:** Returns to the previous screen.
- **Volume Up/Down:** Adjusts audio volume.
- **Mute Button:** Mutes or unmutes audio.
- **Playback Controls:** Play, Pause, Fast Forward, Rewind.
- **App Shortcut Buttons:** Direct access to popular streaming services.

4.2 Roku TV Interface

The Roku TV home screen provides access to all your entertainment options, including streaming channels, input sources, and settings.

America's #1 TV streaming platform built in

Stream what you love with a massive selection
of free, live, and premium TV channels.*

Based on hours streamed. -Hypothesis Group.



*Some channels require payment, can change, and vary by country.

Image: A screenshot of the Roku TV home screen, showing a menu on the left with options like "Home," "What to Watch," and "Live TV," and a grid of streaming app icons on the right, including Netflix, Disney+, and Apple TV.

4.3 Smart Features and Voice Assistants

Your ONN Smart TV supports integration with popular voice assistants for convenient control.

Works With Popular Voice Assistants

Easily control your TV, play entertainment, and more with hands-free voice commands.



Apple, Apple Home, AirPlay, HomeKit and Siri are trademarks of Apple Inc., registered in the U.S. and other countries and regions. Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Alexa enabled device is required to work with Alexa. Google and Google Home are trademarks of Google LLC. Third party features and services may be subject to change or removal without notice.

Image: A graphic illustrating the TV's compatibility with Apple AirPlay, Apple Home, Amazon Alexa, and Google Home, indicated by their respective logos.

- **Wi-Fi Connectivity:** Connect to your home network for streaming content.
- **Roku Mobile App:** Use the Roku mobile app on your smartphone for additional control, private listening, and voice search.
- **Voice Control:** Compatible with Alexa and Google Home devices for hands-free control of your TV (e.g., "Alexa, turn on the TV," "Hey Google, open Netflix").
- **Apple AirPlay/Home:** Stream content from Apple devices and integrate with Apple Home ecosystem.

5. CONNECTIVITY

Your TV offers various ports for connecting external devices:

- **HDMI Ports:** For high-definition audio and video from devices like Blu-ray players, game consoles, and cable boxes.
- **USB Port:** For playing media files (photos, music, videos) from a USB flash drive.
- **Antenna/Cable Input:** For connecting an antenna or cable TV feed.
- **Optical Audio Output:** For connecting to a soundbar or home theater system.

- **Headphone Jack:** For private listening.

6. MAINTENANCE

Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks on the screen, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- Do not use abrasive cleaners, waxes, or solvents.

Care and Handling

- Avoid placing the TV in direct sunlight or near heat sources.
- Do not place heavy objects on top of the TV.
- Protect the TV from excessive dust.

7. TROUBLESHOOTING

Problem	Possible Solution
No power	Ensure the power cord is securely plugged into the TV and a working electrical outlet. Try a different outlet.
No picture, but sound is present	Check the input source. Press the Home button on the remote and select the correct input.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Check audio cables if using external speakers.
Remote control not working	Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and within range. Re-enter the Wi-Fi password in the TV's network settings. Restart your router and TV.
Picture quality issues (e.g., blurry, distorted)	Check the source device's output resolution. Ensure cables are securely connected. Adjust picture settings in the TV menu.

8. SPECIFICATIONS

Feature	Detail
Model Name	Series 1
Screen Size	24 Inches (61 cm visible diagonal)
Resolution	720p HD
Display Type	LED

Feature	Detail
Smart TV Platform	Roku TV
Connectivity	Wi-Fi, USB
Aspect Ratio	1.77:1
Special Features	Flat Screen, HDR (High Dynamic Range) support, Compatible with Alexa and Google Home
Included Components	Remote, Stand, TV
Item Weight	7.8 pounds
Mounting Type	Wall Mount (VESA compatible)



Image: A graphic with the ONN logo and text "Lose yourself in the ultimate viewing experience," featuring a large circle with "720P HD" inside, and "A TV for all your entertainment needs."

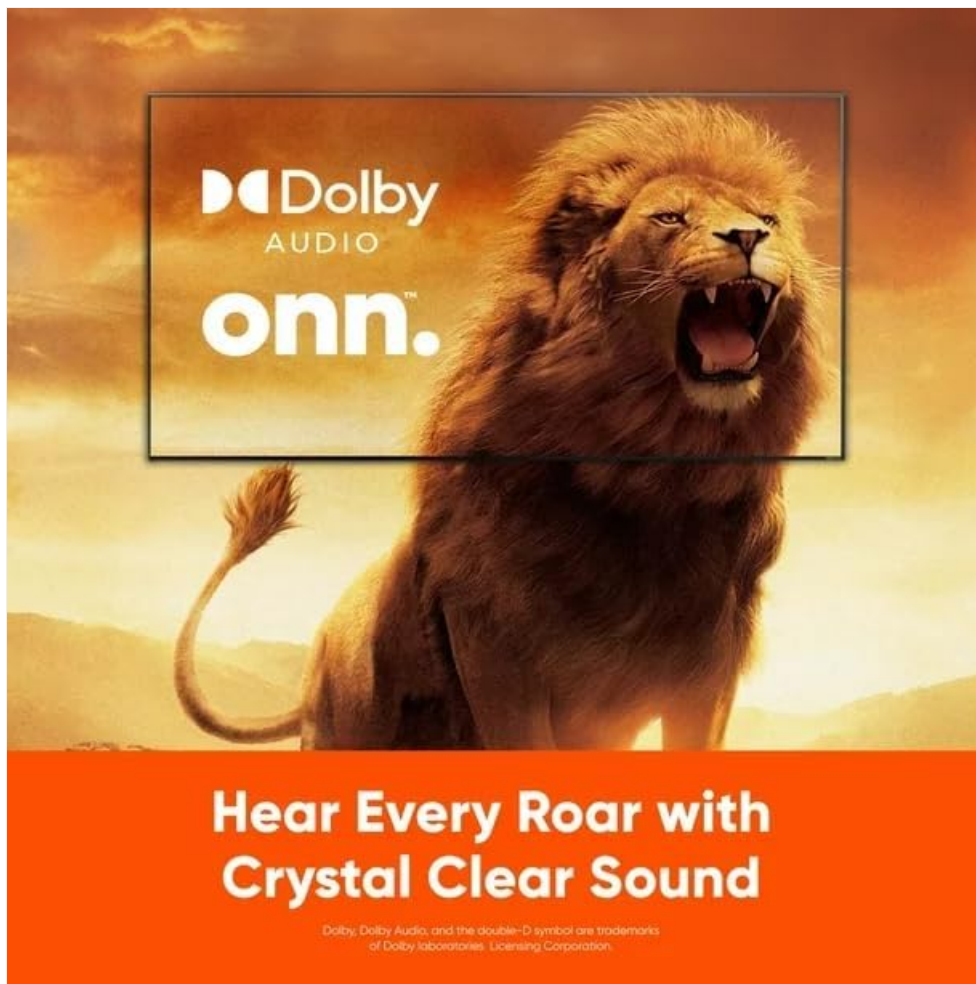


Image: A graphic featuring a lion roaring, with a TV screen overlay showing the Dolby Audio logo and the ONN logo, accompanied by the text "Hear Every Roar with Crystal Clear Sound."

9. WARRANTY AND SUPPORT

This product is sold as an Amazon Renewed item. Please refer to the Amazon Renewed program terms and conditions for specific warranty details and return policies. For technical support or service inquiries, please contact the seller or Amazon customer service.

For general Roku TV support, visit the official Roku support website.