

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TizzyToy](#) /

› [TizzyToy BL01 Drone User Manual](#)

## TizzyToy BL01

# TizzyToy BL01 Drone User Manual

Model: BL01

## 1. INTRODUCTION AND OVERVIEW

The TizzyToy BL01 Drone is a versatile and user-friendly quadcopter designed for both beginners and experienced pilots. It features a 4K adjustable FPV camera, a powerful brushless motor for stable flight, and advanced obstacle avoidance capabilities. This manual provides detailed instructions to ensure safe and optimal operation of your drone.



Figure 1: TizzyToy BL01 Drone and included accessories.

## 2. WHAT'S IN THE Box

Your TizzyToy BL01 Drone package includes the following components:

- TizzyToy BL01 Drone (Silver-Brushless)
- Remote Control
- Two 1600mAh Batteries
- USB Charging Cable
- Spare Propellers
- Propeller Guards
- Screwdriver
- Carrying Case
- User Manual (this document)



Figure 2: Contents of the TizzyToy BL01 Drone package.

## 3. SETUP

### 3.1 Battery Charging

Ensure the drone batteries are fully charged before first use to maximize flight time and battery longevity. The charging time is approximately 120 minutes per battery.

1. Pull out the battery from the end of the drone.
2. Use a 5V1A USB charger (not included).
3. Connect one end of the USB charging cable to the USB charger.
4. Connect the other end of the USB charging cable to the battery charging port.
5. The battery indicator light will stay on while charging and turn off when charging is complete.

Your browser does not support the video tag.

Video 1: Detailed instructions on how to charge the drone battery.

### 3.2 Obstacle Avoidance Head Installation

The drone comes with an optional obstacle avoidance device that can be installed for enhanced safety, especially during indoor flights.

1. Insert the cable of the obstacle avoidance device into the socket inside the drone, ensuring the hole position corresponds to the needle inside the socket.
2. Insert the obstacle avoidance device into the installation port on the top of the drone.
3. Note that the top obstacle avoidance camera is located at the end of the drone.
4. To activate, short press the obstacle avoidance button on the remote controller. The drone lights will flash quickly, and the remote will beep.
5. To exit, short press the button again. The drone lights will stay on, indicating the mode is exited.

Your browser does not support the video tag.

Video 2: Guide for installing the obstacle avoidance head on the drone.

### 3.3 Remote Control Setup

The remote control requires 3 AAA batteries (not included). Ensure they are inserted correctly according to polarity markings.

## 4. OPERATING INSTRUCTIONS

## 4.1 Basic Flight Controls

The TizzyToy BL01 drone offers several intuitive flight functions:

- **One Key Takeoff/Landing:** Press the dedicated button for automatic takeoff or landing.
- **Altitude Hold:** The drone maintains a stable height, making it easier to control.
- **360° Flip:** Achieved by pressing the right joystick down and selecting the desired direction.

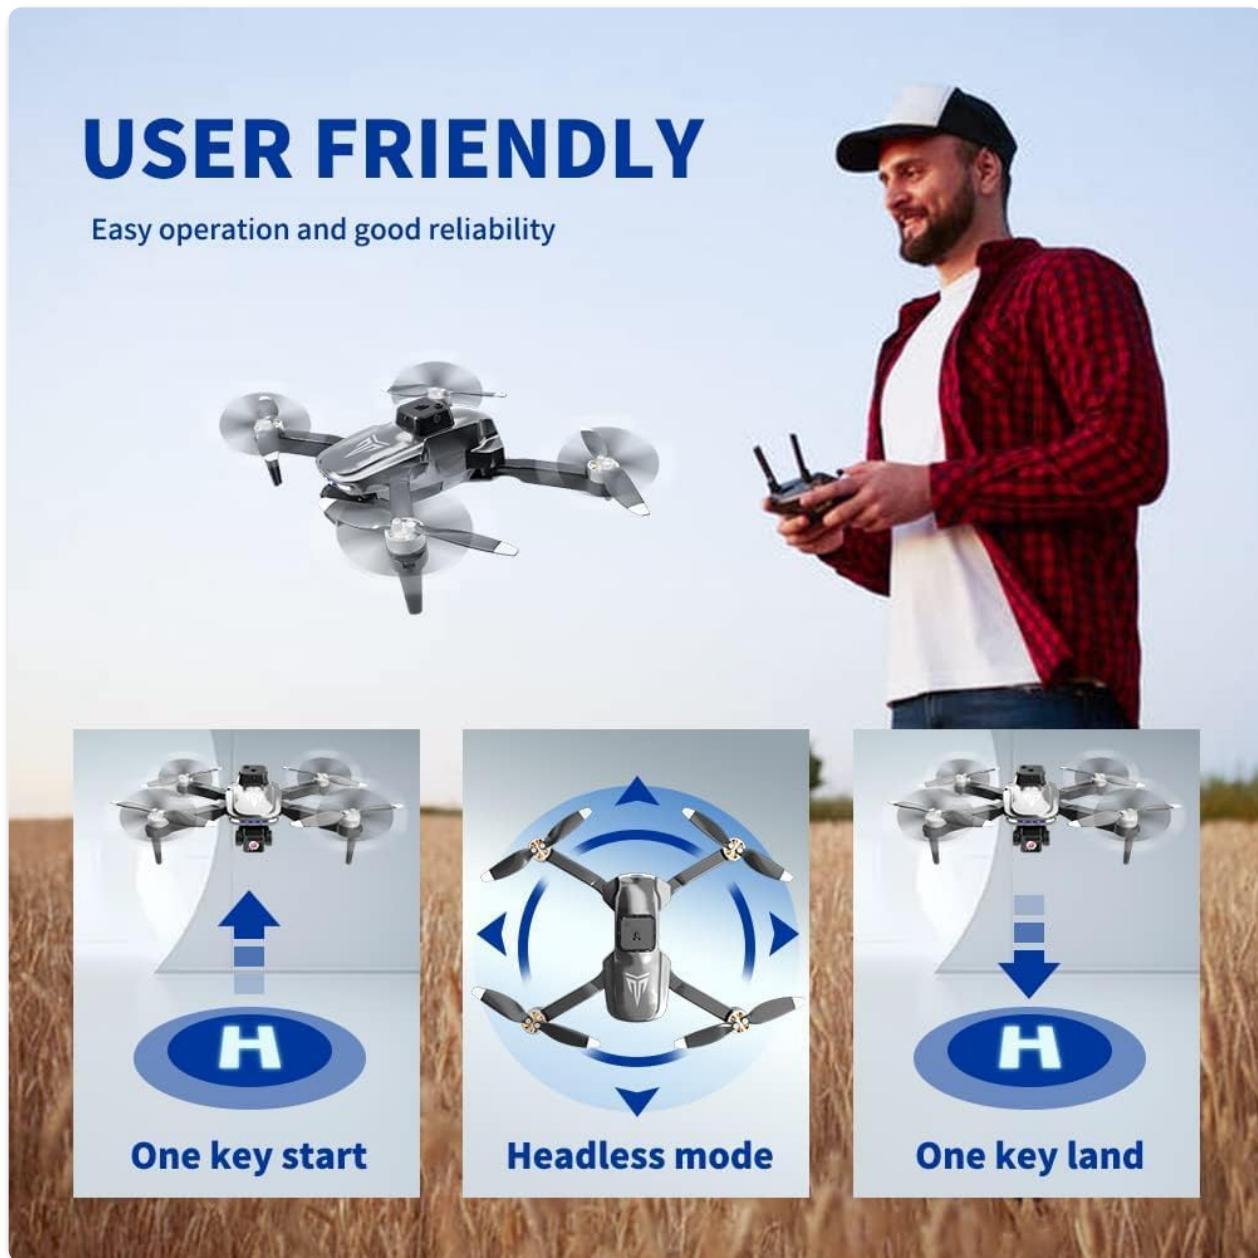


Figure 3: User-friendly flight features.

## 4.2 Speed Adjustment

The drone supports three speed gears for different flying environments:

- **First Gear:** Suitable for indoor use.
- **Second Gear:** Ideal for courtyards and streets.
- **Third Gear:** Best for open field use.

To adjust the speed, short press the fast and slow gear button on the remote control. The remote will emit a 'beep' sound, indicating a successful switch.

Your browser does not support the video tag.

Video 3: Instructions on how to set the flight speed of the drone.

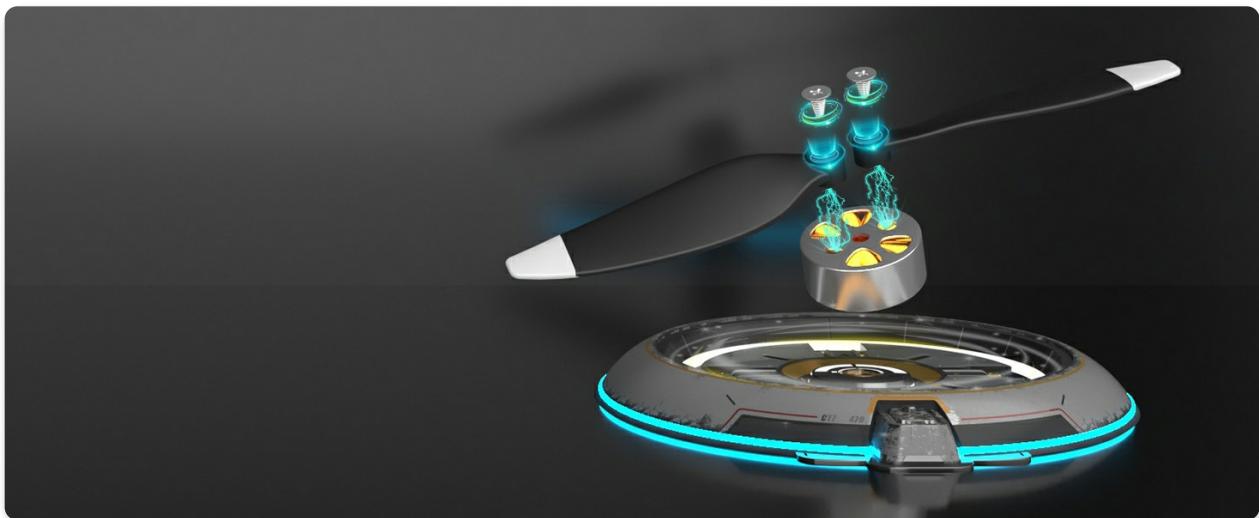


Figure 4: Visual representation of the three speed modes.

### 4.3 Headless Mode

Headless mode simplifies flight by eliminating the need to adjust the drone's orientation before flying. The drone's 'front' becomes the direction the remote control is facing.

1. Press the headless mode button on the remote control. The remote will make a 'beep' sound.
2. The LED lights on the front of the drone will start flashing slowly, indicating headless mode is active.
3. To exit headless mode, press the headless mode button again. The remote control will make a 'beep' sound, and the indicator lights will stay on.

Your browser does not support the video tag.

Video 4: Demonstration of how to use headless mode.

### 4.4 4K FPV & APP Control

The drone is equipped with a 4K 120° manually adjustable lens and a 110° wide-angle lens, providing a broad and breathtaking field of view. Connect your phone or iPad to the drone via the APP for real-time panoramic views and easy sharing.

- Capture stunning 4K pictures and videos directly through the APP.
- Utilize gesture control for taking photos (V-gesture) or recording videos (palm gesture).

# 4K WIDE-ANGLE LENS

Bigger and clearer vision

**110°** ✓  
Wide-angle lens

**60°** ✗  
Normal lens



**4K**  
wide-angle lens



**4K**  
normal lens



**Other**

Figure 5: Smart features for photo and video capture.

# 360 ° IR OBSTACLE AVOIDANCE

Only indoor used



Figure 6: Benefits of the 4K wide-angle lens.

## 5. MAINTENANCE

### 5.1 Battery Safety and Storage

Proper battery care is crucial for safety and extending the lifespan of your drone's batteries.

1. Use a UL standard charging plug and a 5V1A or 5V2A charging adapter.
2. When fully charged, the indicator on the battery goes out. The red light is on when charging.
3. If the battery cannot be charged, try replacing the adapter and charging cable.
4. Occasionally fully charge the battery when not in use to prevent damage.
5. When not in use, remove the battery from the drone and store it in a cool, dry place.
6. Do not use swollen or deformed batteries.
7. Do not use damaged or leaky batteries.
8. Do not operate the drone in high-intensity magnetic fields to prevent damage to its electronics.
9. Do not use or attempt to charge wet batteries.
10. Charge batteries under adult supervision.

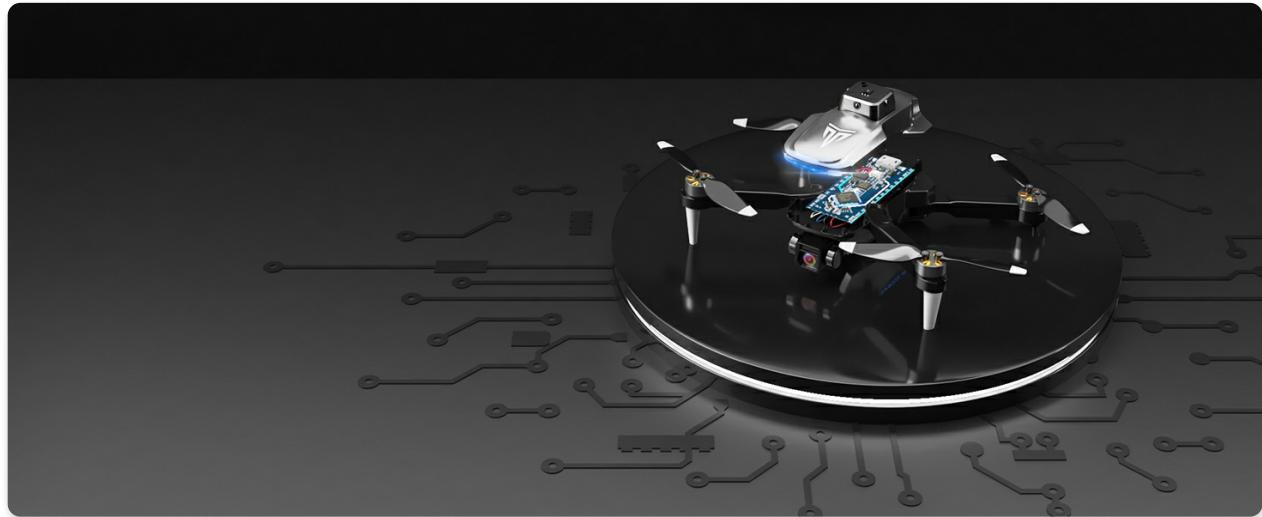


Figure 7: Important battery safety information.

## 5.2 Propeller Replacement

The drone comes with spare propellers. If a propeller is damaged or deformed, use the included screwdriver to replace it. Ensure the new propeller is installed correctly according to the sequence in the manual.

## 6. TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Issue	Solution
Remote-controlled drone is not responding	<ol style="list-style-type: none"><li>1. Fully charge the battery pack and transmitter before use.</li><li>2. Check if drone can connect to remote control by sliding left joystick up and down, listening for "dididi" sound.</li><li>3. Check for rotating motors, propeller damage, and lighting on machine.</li></ol>
Battery won't charge	<ol style="list-style-type: none"><li>1. Use a UL standard charging plug, 5V1A or 5V2A charging adapter.</li><li>2. When fully charged, the indicator on the battery goes out. The red light is on when charging.</li><li>3. If the battery cannot be charged, try replacing the adapter and charging cable.</li></ol>
When the drone takes off, it flies in one direction, or cannot be controlled normally	<ol style="list-style-type: none"><li>1. Check whether the fan blade has been damaged by impact, whether the angle of the fan blade has been deformed, whether the screw of the fan blade has been installed correctly, and whether the fan blade has been installed in the correct sequence.</li><li>2. After powering on and pairing, move the left joystick down to the left and the right joystick down to the right. You will see the drone lights flash and hear a "dididi" sound, indicating that the gyroscope has been successfully calibrated.</li></ol>
The phone cannot connect to the drone.	<ol style="list-style-type: none"><li>1. The drone cannot be connected simultaneously to the remote control and mobile phone. Please turn off the remote control.</li><li>2. Ensure that you have downloaded the correct software and avoid using Android or iOS systems that are too outdated.</li><li>3. Turn on the Wi-Fi connection on your mobile phone and connect to the drone's Wi-Fi hotspot.</li><li>4. Open all application permissions for the app.</li></ol>



Figure 8: Q&A Part-1 Troubleshooting Guide.

## 7. SPECIFICATIONS

Feature	Detail
Brand	TizzyToy
Model Name	BL01
Color	Silver-Brushless
Video Capture Resolution	2160P (4K)
Connectivity Technology	Wi-Fi
Battery Capacity	1700 Milliamp Hours
Flight Time	Up to 40 minutes (with two batteries)
Motor Type	Brushless Motor
Special Features	Foldable, 360° Obstacle Avoidance, Altitude Hold, Headless Mode, One Key Takeoff/Landing, 3 Speed Gears, Gesture Control
Item Weight	1 Pounds
Product Dimensions	1" L x 1" W x 1" H
UPC	755752123643

## 8. CUSTOMER SUPPORT

For detailed video tutorials and comprehensive manuals, please refer to the resources provided with your purchase. If you encounter any issues while operating the drone or have further questions, feel free to contact TizzyToy customer service. We are committed to providing prompt assistance.

