

[Manuals.plus](#) /

› [WOOX](#) /

› WOOX R6118-4pack Smart WiFi Plugs User Manual

WOOX R6118-4PACK

WOOX R6118-4pack Smart WiFi Plugs User Manual

Model: R6118-4PACK

INTRODUCTION

The WOOX R6118-4pack Smart WiFi Plugs are designed to transform your standard electrical outlets into smart, controllable power sources. These plugs allow you to remotely control connected devices, set schedules, monitor energy consumption, and integrate with voice assistants, all through a simple mobile application. This manual provides detailed instructions for setting up, operating, and maintaining your smart plugs to ensure optimal performance and safety.



Image: The WOOX R6118 Smart WiFi Plug shown alongside its retail packaging, highlighting its compact design and key features.

SETUP

1. What's in the Box

- 4 x WOOX R6118 Smart WiFi Plugs
- 1 x User Manual (this document)

2. App Installation

To control your WOOX Smart WiFi Plugs, you need to install the WOOX Home app on your smartphone or tablet.

1. Search for "WOOX Home" in the Apple App Store (for iOS devices) or Google Play Store (for Android devices).
2. Download and install the app.
3. Open the WOOX Home app and register a new account or log in with an existing one.

3. Adding a Device

Follow these steps to add each smart plug to your WOOX Home app:

1. Plug the WOOX Smart WiFi Plug into a standard electrical outlet.
2. Ensure your smartphone is connected to a 2.4GHz Wi-Fi network. The smart plug does not support 5GHz Wi-Fi networks.
3. Open the WOOX Home app.
4. Tap the "+" icon in the top right corner to add a new device.
5. Select "Electrical" from the device categories, then choose "Smart Plug (Wi-Fi)".
6. Confirm that the indicator light on the smart plug is rapidly blinking (about twice per second). If not, press and hold

- the power button on the plug for 5-10 seconds until it starts blinking rapidly.
7. Enter your Wi-Fi network name and password in the app.
 8. Follow the on-screen instructions to complete the pairing process. The plug's indicator light will stop blinking and turn solid when successfully connected.



Image: A detailed view of the WOOX R6118 Smart WiFi Plug, highlighting the Schuko-type socket and the WOOX logo.

OPERATING THE SMART PLUG

1. Basic On/Off Control

- **Manual Control:** Press the physical button on the smart plug to manually turn it on or off.
- **App Control:** Open the WOOX Home app, select the desired smart plug, and tap the power icon to toggle its state.

2. Scheduling

Set up schedules to automatically turn devices on or off at specific times.

1. In the WOOX Home app, select the smart plug.
2. Tap on "Schedule" or "Timer".
3. Add new schedules by setting the time, days of the week, and desired action (on/off).

3. Energy Monitoring

The WOOX R6118 Smart WiFi Plug features an energy meter to track power consumption.

- In the WOOX Home app, select the smart plug.
- Look for the "Energy" or "Statistics" section to view real-time power usage and historical consumption data.

4. Voice Control

Integrate your smart plugs with popular voice assistants like Amazon Alexa or Google Assistant.

1. Ensure your voice assistant device is set up and connected to the same network.
2. Open the Alexa or Google Home app.
3. Enable the "WOOX Home" skill/service.
4. Link your WOOX Home account.
5. Discover devices. You can then control your smart plugs using voice commands (e.g., "Alexa, turn on living room lamp").



Image: Side view of the WOOX R6118 Smart WiFi Plug, illustrating its compact form factor and the European Schuko-type plug pins.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your smart plugs.

- **Cleaning:** Disconnect the smart plug from the power outlet before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or abrasive materials.
- **Environment:** Avoid exposing the smart plugs to extreme temperatures, humidity, or direct sunlight. They are

designed for indoor use only.

- **Overload Protection:** Do not exceed the maximum load capacity of 16A / 230V. Overloading can damage the device and pose a fire hazard.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Smart plug not connecting to Wi-Fi.	Incorrect Wi-Fi password; 5GHz Wi-Fi network; plug too far from router; plug not in pairing mode.	Double-check Wi-Fi password. Ensure your router is broadcasting a 2.4GHz network and your phone is connected to it. Move the plug closer to the Wi-Fi router. Reset the plug by holding the button until it blinks rapidly.
Device connected to plug is not turning on/off.	Device not properly plugged in; smart plug is off; device itself is faulty.	Ensure the device is securely plugged into the smart plug. Check the smart plug's status in the app or by pressing its physical button. Test the device by plugging it directly into a standard outlet.
Voice control not working.	Incorrect voice command; WOOX Home skill not enabled; account not linked.	Use the exact device name configured in the WOOX Home app. Verify that the WOOX Home skill is enabled and your account is linked in your voice assistant app. Try rediscovering devices in your voice assistant app.

SPECIFICATIONS

Feature	Detail
Model Number	R6118-4PACK
Brand	WOOX
Voltage	230 Volt
Amperage	16 Ampere
Compatible Devices	Television, Tablet, Smartphone (via app control)
Wireless Connectivity	Wi-Fi (2.4GHz only)

Feature	Detail
Plug Type	Schuko (Hybrid E/F type)
GTIN (UPC)	08435606721684

WARRANTY AND SUPPORT

WOOX products are designed and manufactured to the highest quality standards. For information regarding warranty coverage and technical support, please refer to the official WOOX website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, visit the [WOOX Home official website](#) or contact their support team through the contact information provided on their site.

