



[Manuals.plus](#) /

› [Soyealink](#) /

› Soyealink SRT875 5G Mobile WiFi Router User Manual

Soyealink SRT875

Soyealink SRT875 5G Mobile WiFi Router User Manual

Model: SRT875 | Brand: Soyealink

INTRODUCTION

Thank you for choosing the Soyealink SRT875 5G Mobile WiFi Router. This device is designed to provide high-speed internet connectivity on the go, supporting both 4G and 5G networks across all frequencies. Featuring a responsive touchscreen and advanced Wi-Fi 6 technology, it delivers robust and efficient wireless performance. With its 5000 mAh battery, it ensures extended usage. The router can broadcast both 2.4 GHz and 5 GHz Wi-Fi networks simultaneously, offering flexibility for various devices. It also supports internet connection via its dedicated USB-C cable.

PACKAGE CONTENTS

Please check the package carefully to ensure all items are present:

- Soyealink SRT875 5G Mobile WiFi Router
- USB-C Charging Cable
- Power Adapter
- User Manual (this document)



Image: The Soyealink SRT875 5G Mobile WiFi Router, accompanied by its USB-C charging cable and power adapter, as included in the package.

PRODUCT OVERVIEW

Familiarize yourself with the components and features of your SRT875 router.

Front View and Display



Image: The front of the SRT875 router, highlighting the touchscreen display, the 'Power Key' indicator for the power button location, and the 'SIM Card' indicator for the SIM slot location.

The front of the device features a touchscreen display for easy navigation and status monitoring. Indicators for the power key and SIM card slot are also visible.

Top and Bottom Views



Image: The top edge of the SRT875 router, clearly showing the power button with its universal power symbol.

The top edge of the router houses the power button, used for turning the device on/off and waking the screen.



Image: The bottom edge of the SRT875 router, displaying the SIM card slot, the USB-C charging/data port, and a small pinhole for the reset function.

The bottom edge includes the SIM card slot, the USB-C port for charging and wired internet connection, and a small pinhole for factory reset.

Back Label Information



Image: The back of the SRT875 router, showing the product label with essential information including the model number, IMEI, Wi-Fi network names (SSIDs) and their default keys, the default IP address for the administration panel, and default login credentials.

The back label provides critical information for your device:

- **Model:** SRT875
- **IMEI:** 863998060105336
- **Wi-Fi Key:** qgebHg4AD94
- **IP Address:** 192.168.8.1
- **User:** admin
- **Password:** admin

Keep this information safe for future reference.

SETUP

1. Inserting the SIM Card

1. Locate the SIM card slot on the bottom edge of the router.
2. Gently insert your activated Nano-SIM card into the slot with the gold contacts facing down and the notched corner aligned correctly.
3. Push the SIM card in until it clicks into place.

2. Powering On the Device

1. Press and hold the power button located on the top edge of the router for a few seconds until the screen lights up.
2. The device will boot up and display network status on the touchscreen.

3. Initial Wi-Fi Connection

1. On your computer, smartphone, or tablet, search for available Wi-Fi networks.
2. Locate the Wi-Fi network name (SSID) displayed on the router's screen or on the back label (e.g., "SRT875_MiFi_E48A").
3. Enter the Wi-Fi Key (password) found on the back label (e.g., "qgebHg4AD94") to connect.

4. Accessing the Administration Panel

1. Open a web browser on a device connected to the router's Wi-Fi.
2. Type the IP address **192.168.8.1** into the address bar and press Enter.
3. Enter the default username "**admin**" and password "**admin**" when prompted. It is highly recommended to change the default password after your first login for security purposes.

OPERATING INSTRUCTIONS

Touchscreen Navigation

The touchscreen allows you to view device status, network information, and manage basic settings directly. Swipe left or right to navigate through different screens displaying data usage, connected devices, network mode, and more.



Image: The touchscreen display of the SRT875 router showing current network signal strength, battery level, time, and data usage (0.00KB used).

Connecting Devices

Once the router is powered on and connected to the cellular network, devices can connect via Wi-Fi using the SSID and password. The router supports up to a certain number of devices simultaneously (check device specifications or administration panel for exact number).

Dual-Band Wi-Fi (2.4GHz & 5GHz)

The SRT875 broadcasts both 2.4 GHz and 5 GHz Wi-Fi networks. You can choose which band to use for your devices. The 2.4 GHz band offers wider coverage, while the 5 GHz band provides faster speeds over shorter distances. You can manage these settings via the administration panel.

Charging the Device

Connect the provided USB-C cable to the router's USB-C port and the other end to the power adapter. Plug the power adapter into a wall outlet. The screen will indicate charging status. A full charge ensures maximum portability.

Wired Internet Connection (USB-C)

The router can also provide internet access to a computer via its USB-C cable. Connect the router to your computer using the USB-C cable. The computer may recognize it as a network adapter, allowing for a direct wired connection.

MAINTENANCE

- **Battery Care:** To prolong battery life, avoid extreme temperatures and do not leave the device fully discharged for extended periods.
- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Software Updates:** Periodically check the administration panel for available firmware updates to ensure optimal performance and security.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No network signal / Cannot connect to internet	SIM card not inserted correctly or not activated. Out of network coverage area. Data plan expired or insufficient.	Reinsert SIM card. Move to an area with better signal. Contact your service provider.
Cannot connect to Wi-Fi	Incorrect Wi-Fi password. Device too far from router. Too many devices connected.	Verify Wi-Fi key from back label. Move closer to the router. Disconnect some devices.
Slow internet speed	Weak signal. Network congestion. Overheating (as per user reviews).	Move to an area with better signal. Try connecting to the 5GHz band if available. Ensure proper ventilation; avoid direct sunlight or enclosed spaces.

Problem	Possible Cause	Solution
Device unresponsive / Needs reset	Software glitch or configuration issue.	Press and hold the power button to restart. For a factory reset, use a pin to press the reset button in the pinhole on the bottom edge for 5-10 seconds while the device is on. Warning: This will erase all custom settings.

SPECIFICATIONS

Model Number	SRT875
Brand	Soyealink
Connectivity Technology	Wi-Fi, 4G, 5G
Wireless Communication Standard	802.11ax (Wi-Fi 6)
Frequency Bands	2.4 GHz, 5 GHz (Dual-Band)
Battery Capacity	5000 mAh
Special Feature	Touchscreen, Quality of Service (QoS)
Included Components	USB-C Charger Cable
Recommended Uses	Home, Business, Travel, Remote Work
Package Dimensions	15.5 x 9.2 x 7 cm
Item Weight	420 grams

WARRANTY AND SUPPORT

Specific warranty information for the Soyealink SRT875 router is not provided in this manual. Please refer to the product packaging or contact your point of purchase for details regarding warranty coverage and terms.

For technical support or further assistance, please contact Soyealink customer service or the retailer from whom you purchased the device. Keep your purchase receipt and product serial number (found on the back label) handy when seeking support.