

NKF CT-90329

User Manual

NKF CT-90329 REPLACEMENT REMOTE CONTROL

Compatible with Toshiba TV Models

1. Introduction

This user manual provides comprehensive instructions for the NKF CT-90329 replacement remote control. This remote is designed to be a direct replacement for original Toshiba TV remote controls, offering full functionality without the need for programming.

Please read this manual carefully before using the remote control to ensure proper operation and to maximize its lifespan.

2. Product Features

- **No Programming Required:** Ready to use directly out of the package after battery installation.
- **Full Functionality:** Provides easy and complete access to all original remote control buttons and functions.
- **Ergonomic Design:** Engineered for comfortable handling and ease of use.
- **Durable Construction:** Built to withstand regular use.





Figure 2.1: Front view of the CT-90329 remote control, displaying its button layout.

3. Package Contents

The package for your NKF CT-90329 replacement remote control includes the following item:

- 1 x NKF CT-90329 Replacement Remote Control

Note: AAA batteries and a user manual are not included in the package. This digital manual serves as the user guide.

4. Setup

4.1 Battery Installation

The CT-90329 remote control requires two (2) 1.5V AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 4.1: Battery compartment of the CT-90329 remote control, illustrating battery insertion.

Once batteries are installed, the remote control is ready for immediate use with compatible Toshiba TV models.

5. Operating Instructions

The NKF CT-90329 remote control functions identically to the original Toshiba TV remote. Simply point the remote at your television and press the desired button.

5.1 Common Button Functions

- **Power ()**: Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **Volume Up/Down (+ / -)**: Adjusts the volume level.
- **Channel Up/Down (P ^ / P v)**: Changes channels sequentially.
- **Mute ()**: Mutes or unmutes the TV audio.
- **Input/Source (⌘)**: Cycles through available input sources (HDMI, AV, etc.).
- **Menu**: Opens the TV's main menu.
- **Navigation Buttons (▲ ◀ ▼ ▶)**: Navigate through menus and options.
- **OK**: Confirms selections in menus.
- **Exit**: Exits the current menu or function.
- **Guide**: Displays the electronic program guide (EPG).
- **Return**: Goes back to the previous screen or channel.
- **Text**: Activates Teletext (if supported by TV).

- **Subtitle:** Toggles subtitles on/off.
- **ATV/DTV:** Switches between Analog and Digital TV modes.
- **Quick:** Accesses quick settings or functions.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or applications, as indicated on the TV screen.

6. Compatible Models

The NKF CT-90329 replacement remote control is compatible with the following Toshiba TV models:

- 32AV800A
- 23HL900A
- 40LV800AZ
- 32EL900A
- 42HL900A
- 46HL900A
- 32AV800AZ
- 42HL800AZ
- 32EL800AZ

Note: This list may not be exhaustive. If your Toshiba TV model is not listed but uses the CT-90329 remote, this replacement should still be compatible.

7. Maintenance

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact by avoiding drops or rough handling.
- **Liquid Exposure:** Do not expose the remote control to water or other liquids.

8. Troubleshooting

If you encounter issues with your NKF CT-90329 remote control, please refer to the following troubleshooting tips:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range and angle of the TV's sensor.

- **Some Buttons Not Working:**
 - This is rare for a new remote. Ensure the remote is clean and free of debris that might be jamming buttons.
 - If only specific buttons are unresponsive, and battery replacement doesn't help, the remote may be faulty.
- **TV Not Responding to Any Remote:**
 - Try using the TV's physical buttons to confirm the TV itself is functioning.
 - Unplug the TV from the power outlet for a few minutes, then plug it back in. This can sometimes reset the TV's IR receiver.

If the problem persists after trying these steps, please contact customer support for further assistance.

9. Specifications

Attribute	Detail
Model Number	CT-90329
Brand	NKF
Compatible Devices	Toshiba Televisions (specific models listed in Section 6)
Power Supply	2 x 1.5V AAA Batteries (Not Included)
Color	Black
Product Dimensions	7.25 x 2.01 x 0.65 inches (18.4 x 5.1 x 1.65 cm)
Item Weight	2.08 ounces (59 grams)
Special Feature	Ergonomic design

10. Support

If you encounter any issues with your NKF CT-90329 replacement remote control that cannot be resolved using the troubleshooting guide, or if you have any questions, please do not hesitate to contact our customer support team. We are committed to ensuring your satisfaction and will do our best to assist you.

For assistance, please refer to the contact information provided by your retailer or the NKF brand's official support channels.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question