

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Best Choice Products](#) /

› [Best Choice Products 36-inch Pre-Lit Outdoor Christmas Wreath Instruction Manual \(Model SKY7050\)](#)

Best Choice Products SKY7050

Best Choice Products 36-inch Pre-Lit Outdoor Christmas Wreath Instruction Manual

Brand: **Best Choice Products** | Model: **SKY7050**

INTRODUCTION

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your Best Choice Products 36-inch Pre-Lit Outdoor Christmas Wreath. Please read all instructions carefully before use and retain this manual for future reference.

SAFETY INFORMATION

- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
- This is an electric product – not a toy. To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not hang ornaments or other material not part of the product.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Read and follow all instructions that are on the product or provided with the product.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Wreath Sections (multiple pieces)
- Bow Section
- Zip Ties (green and red)
- Power Adapter

- Instruction Manual

SETUP AND ASSEMBLY

The 36-inch Pre-Lit Outdoor Christmas Wreath features a simple, six-piece assembly designed for quick setup. Follow these steps for proper installation:

1. **Unfold and Interlock Wreath Sections:** Unfold each wreath section and insert the pegs into the corresponding slots of the adjacent sections. Ensure a secure fit.
2. **Secure Wreath Sections:** After connecting the wreath sections, use the provided green zip ties to firmly secure them together at the designated attachment points. Trim any excess zip tie material.
3. **Attach the Bow:** Insert the bow section into the corresponding metal pipe at the top of the assembled wreath. Secure it with the provided red zip ties.
4. **Connect Light Strings:** Connect the light strings of the wreath sections and the bow to the main power supply cord, matching any numbered tags for correct connection.
5. **Power Connection:** Connect the power adapter to the main power supply cord and then plug the adapter into a suitable outdoor power outlet.
6. **Placement:** Hang the assembled wreath in your desired outdoor location, such as on a door, window, or above a garage.

Quick Setup



Easy Setup 2-person 30 min.

STEP 1

Interlock the wreath & bow sections

STEP 2

Attach the bow to the wreath

STEP 3

Hang outside, plug in, & enjoy

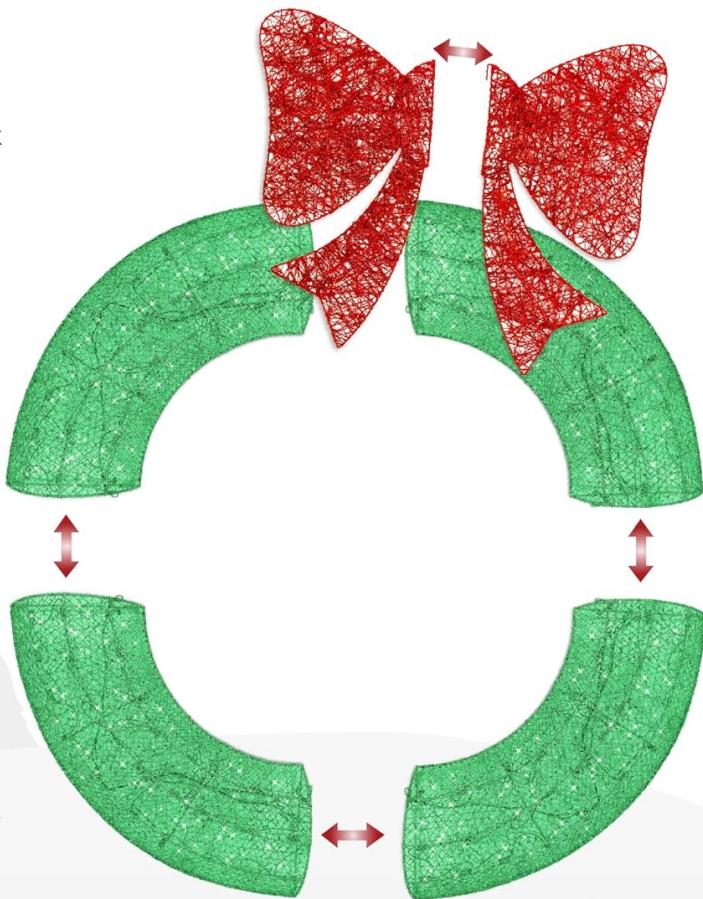


Figure 1: Quick setup diagram illustrating the interlocking sections and bow attachment.

[Video: General assembly guide for a 3D lighted Christmas wreath.](#)

[Video: Overview of a metal outdoor Christmas wreath decoration.](#)

OPERATING INSTRUCTIONS

Your wreath is equipped with 120 environmentally-friendly LED lights. Once assembled and plugged in, the lights will illuminate. The product may include a remote control (not explicitly listed but common for pre-lit decorations) to cycle through various lighting features and modes. Refer to any included remote control instructions for detailed operation of light patterns and colors.

120 LED Lights

A combination of 90 lights on the wreath and 30 on the bow are pre-strung to save time and spread joy



LED Lights



Cool to
the Touch



Environmentally
Friendly

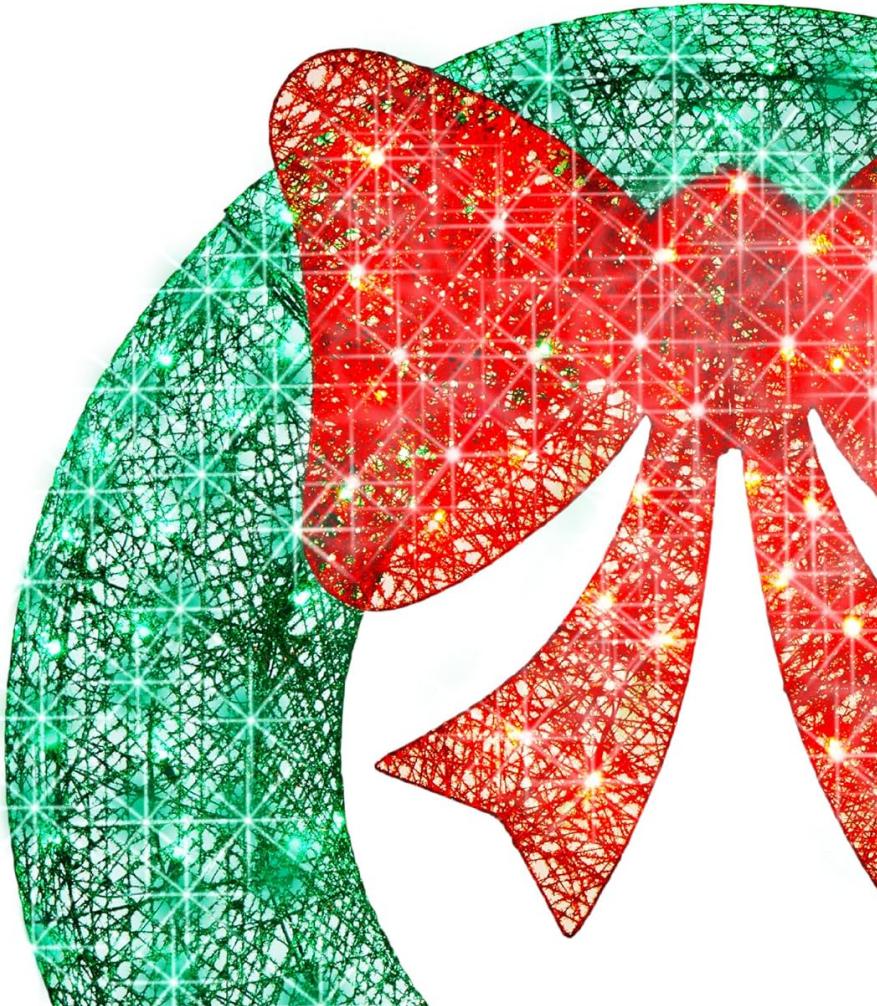


Figure 2: Detail of the 120 LED lights integrated into the wreath.

MAINTENANCE

To ensure the longevity of your Christmas wreath, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the wreath with a soft, dry cloth to remove dust or debris. Avoid using harsh chemicals or abrasive cleaners.
- **Weather Resistance:** The wreath features a heavy wire frame overlaid with rain-, snow-, and wind-resistant glittery fabric. While designed for outdoor use, extreme weather conditions may require temporary indoor storage to prevent damage.
- **Storage:** When the holiday season concludes, disassemble the wreath by removing the zip ties and detaching the bow and wreath sections. Stack the pieces together for compact storage in a handy storage bag or box.

All-Weather


Durable materials withstand damage and wear during the harsh winter months



Rain
Resistant



Snow
Resistant

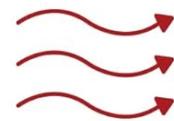

Wind
Resistant

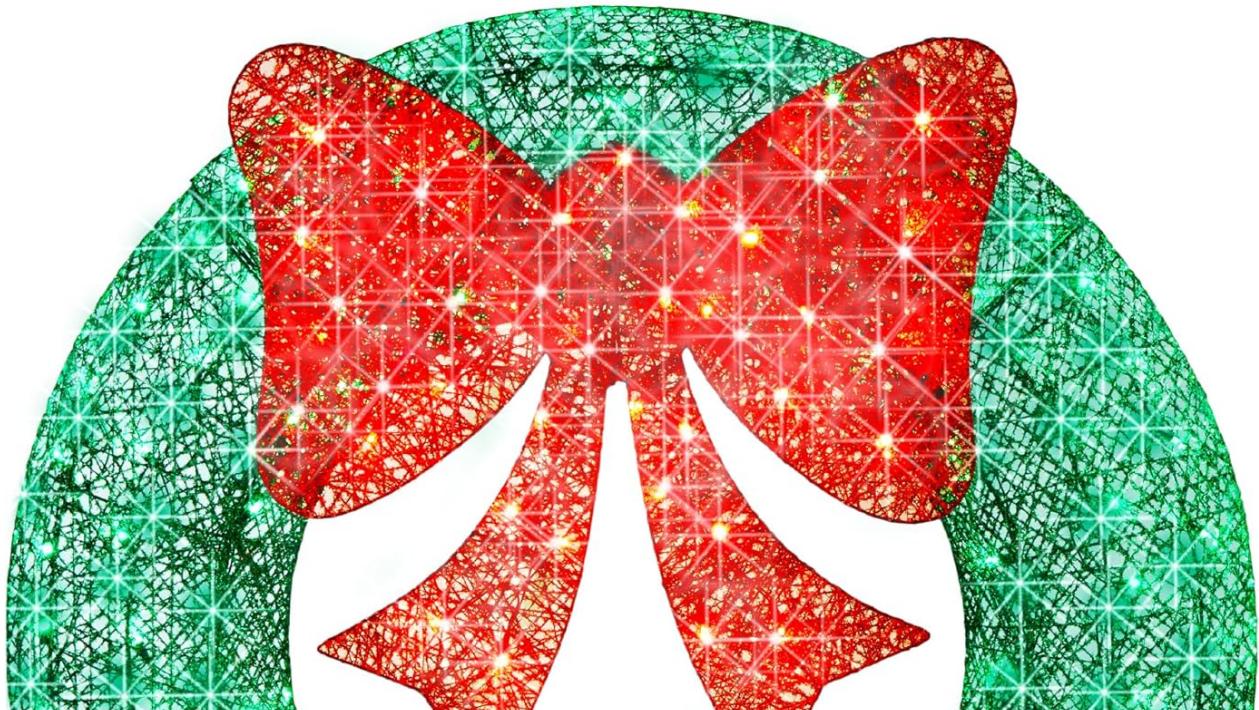


Figure 3: Illustration of the wreath's all-weather durability.

Compact Storage

When the holiday is done, the wreath breaks down to fit in a compact package



Stackable
Design



Easy
Storage



Figure 4: Visual guide for compact storage of the wreath.

TROUBLESHOOTING

If your wreath is not functioning as expected, consider the following:

- **No Power:** Ensure the power adapter is securely plugged into a working outlet and all light string connections are firm.
- **Partial Lighting:** The LED lights are designed so that if one bulb goes out, the rest of the wreath remains lit. Check for any loose connections or damaged bulbs.
- **Assembly Issues:** Re-check all interlocking sections and zip tie connections to ensure they are properly secured as per the assembly instructions.

SPECIFICATIONS

Color	Green/Red
-------	-----------

Brand	Best Choice Products
Material	Cotton, Glitter
Mounting Type	Wall Mount
Shape	Round
Item Weight	4.8 Pounds
Product Dimensions	36"D x 3.5"W x 36"H
Occasion	Christmas
Special Feature	Lit
Manufacturer	Best Choice Products
Indoor/Outdoor Usage	Outdoor
UPC	842957135110
Item Model Number	SKY7050
Batteries Required	No


WARRANTY AND SUPPORT

During the warranty period, Best Choice Products provides new replacement or refund for failures to customers who use the products in accordance with the user manual. This warranty does not cover:

- Failure or damage due to improper use, repair, or remodeling.
- Failure or damage caused by fire, earthquake, flood, lightning, or other natural disasters.
- Failure or damage caused by theft.
- Failure or damage when used other than its intended use.
- Failure or damage caused by third-party products other than this product.






If you encounter any problems during the warranty period, please contact Best Choice Products customer support via e-mail: bcp@bestchoiceproducts.com. Your order ID and details are preferred so that customer support can help faster.

Related Documents - SKY7050

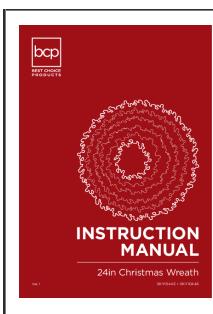

[Best Choice Products Christmas Wreath Instruction Manual - Assembly & Care Guide](#)

Comprehensive instruction manual for Best Choice Products Christmas Wreaths (24in to 60in). Learn how to assemble, fluff, clean, store, and care for your holiday wreath. Includes warranty and support information.

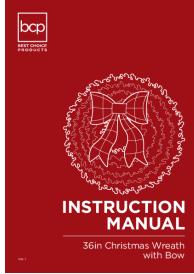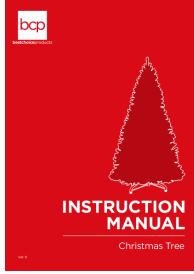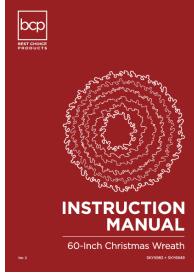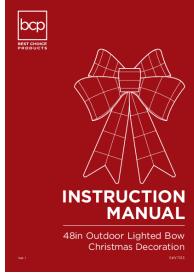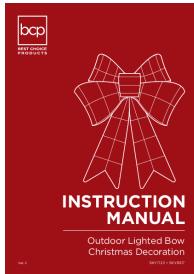	<p>Best Choice Products Christmas Wreath Instruction Manual</p> <p>This instruction manual from Best Choice Products provides assembly, care, and warranty information for their 36-inch, 48-inch, and 60-inch Christmas Wreaths, including pre-lit options. Learn how to set up and maintain your holiday decoration.</p>
	<p>Best Choice Products Christmas Tree Instruction Manual - Version 9</p> <p>Comprehensive guide for assembling, fluffing, and maintaining Best Choice Products artificial Christmas trees. Includes safety warnings, parts identification, assembly steps for Type A and Type B trees, light replacement, cleaning, storage, and warranty information.</p>
	<p>Best Choice Products 60-Inch Christmas Wreath Instruction Manual</p> <p>Official instruction manual for the Best Choice Products 60-Inch Christmas Wreath (Model SKY5983 + SKY6949). Includes assembly, fluffing, cleaning, storage, warranty, and safety information.</p>
	<p>Best Choice Products 48in Outdoor Lighted Bow Christmas Decoration Instruction Manual SKY7123</p> <p>Official instruction manual for the Best Choice Products 48in Outdoor Lighted Bow Christmas Decoration (Model SKY7123). Includes assembly steps, safety warnings, and warranty information.</p>
	<p>Best Choice Products 24-Inch Outdoor Lighted Bow Christmas Decoration Instruction Manual</p> <p>Comprehensive instruction manual for the Best Choice Products 24-inch Outdoor Lighted Bow Christmas Decoration, covering models SKY7123, SKY8517, and SKY8516. Includes detailed assembly steps, safety warnings, product information, and warranty details.</p>