

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CHiQ](#) /

› [CHiQ L32G7V 32-inch HD Google TV User Manual](#)

CHiQ L32G7V

CHiQ L32G7V 32-inch HD Google TV User Manual

Model: L32G7V

1. INTRODUCTION

Thank you for purchasing the CHiQ L32G7V 32-inch HD Google TV. This manual provides essential information for the safe and efficient use of your television. Please read it thoroughly before operating the device and retain it for future reference.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent fire, electric shock, or injury:

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV.
- Avoid placing the TV on unstable surfaces.
- Unplug the TV during lightning storms or when unused for long periods.
- Keep small parts, like batteries, out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- CHiQ L32G7V 32-inch HD Google TV
- Bluetooth Remote Control
- User Manual (this document)
- Power Cable
- Screws for stand attachment
- TV Stand components
- AAA Batteries (2x) for remote control



Modello:L32G7V		Marchio:CHiQ	
Dimensioni	32"	Risoluzione	1366*768 px
Sistema digitale	DVB-T2/T/C/S/S2	Alimentazione	AC100-240V/ 50-60HZ
Dimensione della confezione	793*120*487mm	Supporto a parete	200*200/M6
Contenuto della confezione	Telecomando, Batterie fornite in dotazione, Supporto fornito in		

Image: The CHiQ L32G7V television shown alongside its remote control and a table detailing specifications such as model number, dimensions, resolution, power, and package contents.

4. PRODUCT OVERVIEW

4.1. Front View



Image: Front view of the CHiQ L32G7V television, highlighting its frameless design and Google TV branding.

4.2. Dimensions

The following dimensions are provided for planning placement and installation:

- **With Stand:** 724 mm (Width) x 180 mm (Depth) x 471 mm (Height)
- **Without Stand:** 724 mm (Width) x 84 mm (Depth) x 425 mm (Height)



Image: Technical drawing showing the precise dimensions of the CHIQ L32G7V television, both with and without its stand, including width, height, and depth measurements.

4.3. Connectivity Ports

The CHIQ L32G7V offers various ports for connecting external devices:

- **HDMI 1.4:** 2 ports
- **USB 2.0:** 1 port
- **LAN (Ethernet):** 1 port
- **CI+ Slot:** 1 port
- **AV Input:** 1 port
- **Digital Audio Output:** 1 port
- **ANT (Antenna/Cable):** 2 ports
- **Earphone Jack:** 1 port

Design senza cornice, visuale più ampia



Image: Rear view of the CHIQ L32G7V television, illustrating the placement of various input and output ports for external device connections.

5. SETUP

5.1. Attaching the Stand

1. Carefully place the TV face down on a soft, flat surface to prevent screen damage.
2. Align the stand components with the designated slots on the bottom of the TV.
3. Secure the stand using the provided screws. Ensure they are tightened firmly.



Image: A close-up view of the television's stand, showing its design and how it supports the display.

5.2. Wall Mounting

The TV supports VESA wall mounts with a pattern of 200x200mm (M6 screws). Consult a professional for wall mounting to ensure safety and proper installation.

5.3. Connecting Peripherals

Connect your devices (e.g., Blu-ray player, game console, soundbar) to the appropriate ports on the back of the TV using HDMI, USB, or AV cables.

5.4. Initial Power On and Google TV Setup

1. Connect the power cable to the TV and a power outlet.
2. Press the power button on the remote control or the TV.
3. Follow the on-screen instructions to complete the initial Google TV setup, including language selection, network connection (Wi-Fi 2.4G/5G), and Google account login.

6. OPERATING INSTRUCTIONS

6.1. Remote Control Functions

The Bluetooth remote control allows navigation and control of your TV. Insert the two AAA batteries into the remote control, observing polarity.



Image: A detailed view of the CHIQ L32G7V television's remote control, showing its buttons and layout.

6.2. Google TV Interface

Google TV organizes your content from various streaming services and apps into a personalized home screen. Use the remote's navigation buttons to browse content, access apps, and adjust settings.



Image: A visual representation of the Google TV interface, displaying a selection of popular streaming applications available on the platform.

6.3. Connecting to Wi-Fi

Navigate to Settings > Network & Internet to connect your TV to a Wi-Fi network. The TV supports dual-band Wi-Fi (2.4G/5G).

6.4. Using Chromecast Built-in

Chromecast built-in allows you to cast content from your compatible mobile devices or computer to the TV. Ensure your device is on the same Wi-Fi network as the TV.

6.5. Audio Settings

The TV features Dolby Audio with 2 x 8W speakers. Access audio settings to select from available sound modes (e.g., News, Movies, Night, Music) to optimize your listening experience.

6.6. App Management

Access the Google Play Store to download and manage over 5,000 applications. You can also use the Smart Home mobile application for multi-sharing features.

7. MAINTENANCE

7.1. Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and casing.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Do not spray liquid directly onto the TV.
- Avoid abrasive cleaners or solvents.

7.2. Storage

If storing the TV for an extended period, disconnect it from power, pack it in its original packaging if possible, and store it in a dry, dust-free environment.

8. TROUBLESHOOTING

This section addresses common issues you might encounter. If the problem persists, contact customer support.

Problem	Possible Solution
No power	Ensure the power cable is securely connected and the power outlet is functional. Try a different outlet.
No picture, but sound is present	Check the input source. Ensure external devices are powered on and connected correctly.
No sound, but picture is present	Check volume levels and mute settings. Verify audio output settings if using external speakers.

Problem	Possible Solution
Remote control not working	Replace batteries. Ensure no obstructions between the remote and the TV. Re-pair the Bluetooth remote if necessary.
Wi-Fi connection issues	Restart your router and the TV. Check Wi-Fi password. Ensure the TV is within range of the router.

9. SPECIFICATIONS

Feature	Detail
Model Number	L32G7V
Screen Size	32 inches
Display Technology	LED
Resolution	1366 x 768 pixels (HD)
Refresh Rate	60 Hz
Operating System	Google TV
Audio Output	2 x 8W speakers, Dolby Audio
Connectivity	Wi-Fi 5G, Bluetooth, HDMI 1.4 (x2), USB 2.0 (x1), LAN (x1), CI+ (x1), AV (x1), Digital Audio Out (x1), ANT (x2), Earphone (x1)
Power Supply	AC100-240V, 50-60Hz
Power Consumption (SDR)	27 W
Energy Efficiency Class	F
Dimensions (with stand)	724 x 180 x 471 mm
Dimensions (without stand)	724 x 84 x 425 mm
Wall Mount Standard	VESA 200x200mm (M6)

For detailed energy information, refer to the EU EPREL database: <https://eprel.ec.europa.eu/qr/1520204>

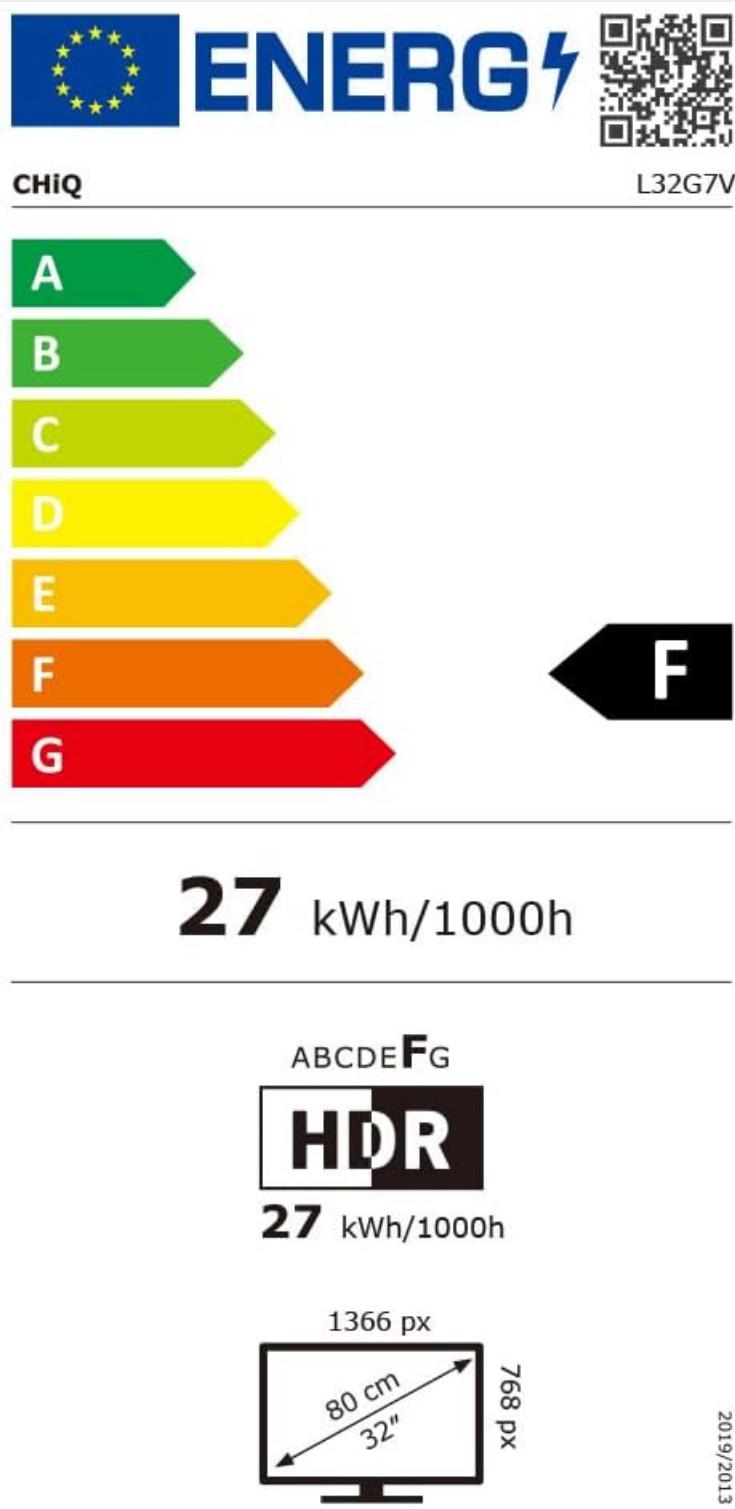


Image: The EU Energy Label for the CHiQ L32G7V television, indicating its energy efficiency class F and power consumption of 27 kWh/1000h.

10. WARRANTY AND SUPPORT

CHiQ offers the following warranty terms:

- **Standard Warranty:** 2 years on all products (3 years for purchases in Spain).
- **Compressor (for Refrigerators/Freezers):** 12 years replacement. *(Note: This specific term may not apply to televisions but is part of the general brand warranty information provided.)*
- **Motor (for Washing Machines):** 12 years replacement. *(Note: This specific term may not apply to televisions but is part of the general brand warranty information provided.)*
- **Returns:** 30-day return policy without reason via Amazon.

- **Online Support:** Professional staff available on weekdays via online hotline.

For further assistance or to report issues, please contact CHiQ customer support through their official channels.



Related Documents - L32G7V

	<p>CHiQ U65QM8V User Manual: Setup, Features, and Troubleshooting Comprehensive user manual for the CHiQ U65QM8V TV, covering safety instructions, setup, features like Smart TV, PVR, Bluetooth, Google Assistant, Chromecast, dbx-tv sound, and troubleshooting tips.</p>
	<p>CHiQ L32G7P User Manual: Setup, Operation, and Troubleshooting Comprehensive user manual for the CHiQ L32G7P television, covering setup, connections, basic operations, smart TV features, troubleshooting, and safety instructions.</p>
	<p>CHiQ U55G7H Smart TV User Manual Comprehensive user manual for the CHiQ U55G7H Smart TV, covering setup, operation, safety instructions, connecting devices, troubleshooting, and advanced features like Google Assistant and Chromecast.</p>
	<p>CHiQ U50G7H User Manual: Setup, Operation, and Troubleshooting Comprehensive user manual for the CHiQ U50G7H TV, covering initial setup, connecting devices, basic operations, smart features, troubleshooting, and safety instructions.</p>
	<p>CHiQ L40M10 User Manual User manual for the CHiQ L40M10 television, providing detailed instructions on setup, operation, safety precautions, troubleshooting, and features like Google Assistant and Chromecast Built-in.</p>
	<p>CHiQ L32M10 User Manual: Setup, Operation, and Troubleshooting Comprehensive user manual for the CHiQ L32M10 TV, covering initial setup, connecting devices, smart TV features, troubleshooting, and safety instructions.</p>