



[Manuals.plus](#) /

› [Pro Bass](#) /

› Pro Bass Future Series True Wireless Earphones User Manual

Pro Bass PR-1111-WT

Pro Bass Future Series True Wireless Earphones User Manual

Model: PR-1111-WT

[Introduction](#)

[Package Contents](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Pro Bass Future Series True Wireless Earphones. These earphones are designed to provide a superior audio experience with deep, powerful bass and true wireless freedom. This manual will guide you through the setup, operation, and maintenance of your new earphones to ensure optimal performance and longevity.

Please read this manual carefully before using the product and retain it for future reference.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- Pro Bass Future Series True Wireless Earphones (Left & Right)
- Charging Case
- USB Charging Cable
- User Manual



Image: The Pro Bass Future Series True Wireless Earphones, white in color, resting inside their open charging case. The case is also white and features the Pro Bass logo. A green indicator light is visible on the case, indicating power or charging status. The earbuds have black accents on the speaker grilles.

3. SETUP GUIDE

3.1 Charging the Earphones and Case

1. **Initial Charge:** Before first use, fully charge the earphones and the charging case. Place both earphones into the charging case.
2. **Connect Power:** Connect the USB charging cable to the charging port on the case and the other end to a USB

power adapter (not included) or a computer's USB port.

3. **Charging Indicators:** The indicator light on the charging case will illuminate to show charging status. A full charge is indicated when the light turns solid or off, depending on the model.
4. **Charging Time:** Allow approximately 1-2 hours for a full charge of both the earphones and the case.

3.2 Pairing with a Bluetooth Device

1. **Enable Bluetooth:** Ensure Bluetooth is enabled on your smartphone, tablet, or other audio device.
2. **Power On Earphones:** Open the charging case. The earphones will automatically power on and enter pairing mode (indicated by flashing lights on the earphones).
3. **Select Device:** On your device's Bluetooth settings, search for "Pro Bass Future Series" or a similar name and select it to connect.
4. **Confirmation:** Once successfully paired, the earphone indicator lights will stop flashing, and you may hear an audio prompt.
5. **Reconnect:** After initial pairing, the earphones will automatically reconnect to the last paired device when taken out of the case, provided Bluetooth is enabled on the device.

4. OPERATING INSTRUCTIONS

4.1 Basic Functions

Action	Control
Power On	Open charging case (automatic)
Power Off	Place earphones back into charging case and close lid (automatic)
Play/Pause Music	Single tap on either earphone
Next Track	Double tap right earphone
Previous Track	Double tap left earphone
Answer/End Call	Single tap on either earphone
Reject Call	Press and hold either earphone for 2 seconds
Activate Voice Assistant	Triple tap on either earphone

Note: Specific touch controls may vary slightly. Refer to the quick start guide included in your package for precise details if different.

4.2 Wearing the Earphones

Gently insert the earphones into your ears, ensuring a snug and comfortable fit. Adjust them until the sound is clear and the bass response is optimal. A proper fit is crucial for both sound quality and active noise cancellation (if applicable).

5. MAINTENANCE AND CARE

- **Cleaning:** Regularly clean the earphones and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals, cleaning solvents, or strong detergents.
- **Moisture:** Keep the earphones and charging case dry. Do not expose them to water, rain, or excessive humidity. If

they get wet, wipe them dry immediately.

- **Storage:** When not in use, store the earphones in their charging case to protect them and keep them charged. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the earphones and case frequently. Charge them regularly, even if not in constant use.
- **Avoid Impact:** Do not drop, hit, or subject the earphones or case to strong impacts, as this can damage internal components.

6. TROUBLESHOOTING

Problem	Possible Solution
Earphones not pairing	Ensure earphones are charged. Turn off and on Bluetooth on your device. Forget "Pro Bass Future Series" from your device's Bluetooth list and re-pair.
Only one earphone working	Place both earphones back into the charging case, close the lid, wait a few seconds, then open again. Ensure both are charged.
No sound or low volume	Check volume levels on both your device and the earphones. Ensure earphones are properly connected. Try playing different audio.
Charging case not charging	Check the USB cable and power adapter. Ensure the charging port is clean and free of debris. Try a different charging cable or power source.
Poor sound quality / intermittent connection	Ensure there are no obstructions between your device and the earphones. Move closer to your device. Avoid strong electromagnetic interference.

If the issue persists, please refer to the warranty and support section for further assistance.

7. PRODUCT SPECIFICATIONS

- **Model Name:** Future Series
- **Model Number:** PR-1111-WT
- **Connectivity:** Wireless
- **Ear Placement:** In Ear
- **Form Factor:** True Wireless
- **Noise Control:** Active Noise Cancellation
- **Battery Type:** Lithium Ion
- **Playtime:** Up to 6 hours (earphones), additional battery life with charging case
- **Color:** White
- **Material:** Plastic
- **Special Features:** Lightweight

8. WARRANTY AND SUPPORT

Manufacturer's Warranty: This product comes with a 1 Year Limited Warranty from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support: For technical support, warranty claims, or further assistance, please contact your retailer or visit the official Pro Bass website. Please have your proof of purchase and product model number (PR-1111-WT) ready when contacting support.

Online Resources: For the latest updates, FAQs, and additional support resources, please refer to the official Pro Bass support page.



© 2023 Pro Bass. All rights reserved.

Information in this manual is subject to change without notice.