

## Connex SEN-1055-ARM

# Connex Serenity 1055 ARM Octa Core Android Tablet User Manual

Model: SEN-1055-ARM

## 1. INTRODUCTION

---

Thank you for choosing the Connex Serenity 1055 ARM Octa Core Android Tablet. This device is designed for everyday use, offering a blend of performance and portability. This manual provides essential information to help you set up, operate, and maintain your tablet, ensuring optimal performance and longevity.

The Serenity 1055 features a 10.1-inch 10-point touch screen, an octa-core processor, 2GB of RAM, and 32GB of internal storage. It includes a built-in QWERTY keyboard for enhanced productivity and offers 4G connectivity, Bluetooth, and Wi-Fi for seamless communication. The 5000mAh battery supports extended use on a single charge.

## 2. PACKAGE CONTENTS

---

Please check the box for the following items:

- Connex Serenity 1055 ARM Octa Core Android Tablet
- Built-in QWERTY Keyboard (integrated with cover)
- Power Adapter / USB Charging Cable
- Quick Start Guide (this document)

If any items are missing or damaged, please contact your retailer or Connex customer support.

## 3. DEVICE OVERVIEW

---

Familiarize yourself with the physical features of your Connex Serenity 1055 tablet.



## SEN-1055-ARM

Image: Front and back view of the Connex Serenity 1055 tablet, highlighting its sleek design and the Connex logo on the rear.

## SERENITY 1055

10.1" TABLET ARM OCTA CORE WITH ANDROID™ (GO EDITION)



INCLUDES COVER & KEYBOARD

Image: The Serenity 1055 tablet shown with its integrated cover and QWERTY keyboard accessory.

### 3.1 Front View

- **10.1-inch Touch Screen:** Main display for all interactions.
- **Front Camera:** For video calls and selfies.
- **Ambient Light Sensor:** Adjusts screen brightness automatically.

### 3.2 Rear View

- **Rear Camera:** For taking photos and videos.
- **Speaker:** Audio output.

### 3.3 Sides and Ports

- **Power Button:** Turns the tablet on/off or puts it to sleep/wakes it up.
- **Volume Buttons:** Adjusts audio volume.
- **USB Port (Type-C):** For charging and data transfer.
- **3.5mm Audio Jack:** For headphones or external speakers.
- **MicroSD Card Slot:** For expandable storage.
- **SIM Card Slot:** For 4G connectivity.

## 4. SETUP

---

### 4.1 Charging the Tablet

1. Connect the USB charging cable to the tablet's USB Type-C port.
2. Plug the other end of the cable into the power adapter, then into a wall outlet.
3. The battery indicator on the screen will show charging status. For first use, charge the tablet completely.

The tablet is equipped with a 5000mAh battery, providing extended usage time.

### 4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the Connex logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.
- **To Sleep/Wake:** Briefly press the Power button to put the tablet to sleep or wake it up.

### 4.3 Initial Setup Wizard

Upon first power-on, the Android Go setup wizard will guide you through initial configurations:

- **Language Selection:** Choose your preferred language.
- **Wi-Fi Connection:** Connect to a Wi-Fi network to access the internet.
- **Google Account:** Sign in with your Google account or create a new one. This is necessary for downloading apps from the Google Play Store and syncing data.
- **Date & Time:** Set the correct date and time.
- **Security:** Set up a screen lock (PIN, pattern, or password) for device security.

## 5. OPERATING YOUR TABLET

---



Image: The tablet's display showing the Android home screen with various application icons and the current time.

## 5.1 Basic Navigation

- **Touch Gestures:** The 10.1-inch 10-point touch screen supports various gestures like tap, swipe, pinch-to-zoom, and long-press.
- **Home Screen:** The central hub for your apps and widgets.
- **Notification Panel:** Swipe down from the top of the screen to access notifications and quick settings.
- **App Drawer:** Swipe up from the bottom of the screen to view all installed applications.

## 5.2 Connectivity

- **Wi-Fi:** Go to *Settings > Network & internet > Wi-Fi* to connect to available networks.
- **Bluetooth:** Go to *Settings > Connected devices > Bluetooth* to pair with Bluetooth devices like headphones or speakers.
- **4G Connectivity:** Insert a valid SIM card into the designated slot. Go to *Settings > Network & internet > Mobile network* to configure mobile data settings.

## 5.3 Using the Built-in QWERTY Keyboard

The integrated QWERTY keyboard allows for comfortable typing, similar to a laptop. Simply unfold the cover to position the tablet and keyboard for use. The tablet will automatically detect the keyboard connection.

## 5.4 Applications

- **Pre-installed Apps:** The tablet comes with essential Android Go applications.
- **Google Play Store:** Access millions of apps, games, movies, and books. Tap the Play Store icon on your home screen or app drawer to browse and download.

## 5.5 Camera

Open the Camera app to take photos or record videos using either the front or rear camera. Tap the screen to focus and press the shutter button to capture.

## 6. MAINTENANCE

---

### 6.1 Cleaning Your Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Do not use liquid cleaners, aerosols, or abrasive materials, as they may damage the screen or finish.
- Ensure the tablet is powered off and unplugged before cleaning.

### 6.2 Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold).
- Do not leave the tablet charging for excessively long periods after it is fully charged.
- Use only the provided charger or a certified compatible charger.

### 6.3 Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to *Settings > System > System update*

## 7. TROUBLESHOOTING

---

Here are solutions to common issues you might encounter:

Problem	Solution
Tablet does not power on.	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering on again.
Tablet is unresponsive or frozen.	Press and hold the Power button for about 10-15 seconds to force a restart.
Cannot connect to Wi-Fi.	Ensure Wi-Fi is enabled in settings. Restart your router and the tablet. Verify the Wi-Fi password.
Apps are running slowly.	Close unnecessary background apps. Clear app caches (Settings > Apps & notifications > [App Name] > Storage & cache > Clear cache). Restart the tablet.
Battery drains quickly.	Reduce screen brightness. Disable Wi-Fi, Bluetooth, or 4G when not in use. Close background apps. Check battery usage in settings to identify power-hungry apps.

If the issue persists, please contact Connex customer support.

## 8. SPECIFICATIONS

---



Image: Visual representation of key specifications including processor speed, memory, and RAM.

- **Model:** SEN-1055-ARM
- **Display:** 10.1-inch, 1280 x 800px, 10-point touch screen
- **Processor:** Octa Core (up to 1.6 GHz)
- **RAM:** 2GB
- **Storage:** 32GB
- **Operating System:** Android 10 Go Edition
- **Connectivity:** 4G, Wi-Fi, Bluetooth
- **Battery:** 5000mAh
- **Keyboard:** Built-in QWERTY keyboard

## 9. WARRANTY AND SUPPORT

---

### 9.1 Warranty Information

Your Connex Serenity 1055 tablet comes with a **12-month coverage period** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

### 9.2 Customer Support

For further assistance, technical support, or warranty inquiries, please contact Connex customer service through the contact information provided with your product packaging or on the official Connex website.