

Taurus MX-100 MIRAGE

TAURUS MX-100 MIRAGE Hand Mixer User Manual

Model: MX-100 MIRAGE

1. INTRODUCTION

Thank you for choosing the TAURUS MX-100 MIRAGE Hand Mixer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read these instructions thoroughly before first use and keep them for future reference.

The MX-100 MIRAGE is a versatile hand mixer designed for various kitchen tasks, including beating, mixing, and kneading. It features 5 speed settings and comes with both beaters and dough hooks.

2. SAFETY INSTRUCTIONS

To ensure safe operation, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Unplug the mixer from the outlet when not in use, before attaching or removing parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Avoid contact with moving parts.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always operate the mixer on a stable, dry surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x TAURUS MX-100 MIRAGE Hand Mixer unit
- 2 x Beaters (for mixing and whisking)
- 2 x Dough Hooks (for kneading)
- 1 x Instruction Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your hand mixer:

1. Motor Unit / Handle
2. Speed Selector (0-5)
3. Eject Button
4. Accessory Slots
5. Beaters
6. Dough Hooks
7. Power Cord



Figure 4.1: Front view of the TAURUS MX-100 MIRAGE Hand Mixer with beaters. Shows the main body, speed selector, and eject button.





Figure 4.2: Top view of the TAURUS MX-100 MIRAGE Hand Mixer, highlighting the speed control dial (0-5) and the eject button.

5. SETUP

Before first use, clean all accessories as described in the "Cleaning and Maintenance" section.

1. Ensure the speed selector is set to "OFF" (0) and the mixer is unplugged from the power outlet.
2. Select the appropriate accessories for your task:
 - **Beaters:** For whisking eggs, cream, mixing batters, and light doughs.
 - **Dough Hooks:** For kneading heavier doughs like bread or pizza dough.
3. Insert the chosen accessories into the two accessory slots on the bottom of the mixer. Push them in firmly until they click into

place. The mixer features a safety system to prevent accidental ejection during operation.

4. Ensure both accessories are securely locked before plugging in the mixer.

6. OPERATING INSTRUCTIONS

1. **Preparation:** Place ingredients in a suitable mixing bowl.
2. **Plug In:** Plug the mixer into a 127V AC power outlet.
3. **Select Speed:** Start with a low speed (1 or 2) to prevent splashing, then gradually increase to the desired speed using the speed selector switch. The mixer has 5 speed settings.
 - **Speed 1-2:** For folding, mixing dry ingredients, and slow stirring.
 - **Speed 3-4:** For mixing batters, mashing potatoes, and creaming butter.
 - **Speed 5:** For whipping cream, egg whites, and kneading heavy doughs.
4. **Mixing:** Guide the mixer through the ingredients, moving it slowly to ensure even mixing.
5. **Finish:** When finished, set the speed selector back to "OFF" (0) and unplug the mixer from the power outlet.
6. **Eject Accessories:** Hold the mixer over the mixing bowl or a waste bin, then press the Eject button firmly to release the beaters or dough hooks.

Note: The mixer features a flat rear base, allowing it to rest upright on your work surface during pauses in mixing, keeping your countertop clean.

7. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your hand mixer.

1. **Always unplug the mixer** before cleaning.
2. **Remove Accessories:** Press the Eject button to remove the beaters or dough hooks.
3. **Clean Accessories:** Wash the beaters and dough hooks in warm, soapy water or place them in the dishwasher (if dishwasher-safe, refer to accessory markings). Rinse thoroughly and dry completely.
4. **Clean Motor Unit:** Wipe the exterior of the motor unit with a damp cloth. Do not use abrasive cleaners or scourers. Never immerse the motor unit in water or any other liquid.
5. **Storage:** Store the cleaned and dried mixer and its accessories in a dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet not working; speed selector not set to a speed.	Ensure the mixer is securely plugged into a working outlet. Turn the speed selector to a desired speed (1-5).
Attachments do not fit or eject.	Attachments not inserted correctly; eject button not pressed firmly.	Ensure attachments are pushed in until they click. Press the eject button firmly and completely.
Motor sounds strained or slows down.	Too much load (e.g., too thick dough); speed setting too low.	Reduce the amount of ingredients or liquid. Increase the speed setting. If kneading heavy dough, ensure you are using dough hooks.

Problem	Possible Cause	Solution
Mixer gets hot during use.	Prolonged use; heavy load.	This is normal for some appliances. If it becomes excessively hot or emits smoke/unusual odors, unplug immediately and contact customer support. Allow the mixer to cool down before further use.

9. SPECIFICATIONS

Model Name	MX-100 MIRAGE
Brand	Taurus
Power	100 Watts
Voltage	127V
Number of Speeds	5
Control Type	Manual
Dimensions (D x W x H)	6 cm x 16.5 cm x 25.5 cm
Material	Metal, Plastic
Special Feature	Lightweight
Included Components	Hand mixer, 2 beaters, 2 dough hooks
Model Number	M91608110

10. WARRANTY AND SUPPORT

The TAURUS MX-100 MIRAGE Hand Mixer comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical support, or service inquiries, please contact your retailer or the official Taurus customer service in your region. Please retain your proof of purchase for warranty validation.

For more information, you may visit the official Taurus website: www.taurus.es

