

[Manuals.plus](#) /

› [Amesias](#) /

› Amesias WD12X10357 GE Hotpoint Dishwasher Filter Fine Assembly Instruction Manual

Amesias WD12X10357

Amesias WD12X10357 Dishwasher Filter Fine Assembly Instruction Manual

Model: WD12X10357

1. INTRODUCTION

This instruction manual provides important information for the proper installation, operation, and maintenance of your Amesias WD12X10357 Dishwasher Filter Fine Assembly. This part is designed as a replacement for GE and Hotpoint dishwashers and replaces part numbers 3028444 and PS3511267.

Please read this manual thoroughly before attempting any installation or maintenance to ensure safe and effective use of the product.

2. SAFETY INFORMATION

- **Disconnect Power:** Always disconnect power to the dishwasher at the circuit breaker before attempting any repairs or maintenance. Failure to do so can result in electrical shock or injury.
- **Wear Protective Gear:** Wear appropriate personal protective equipment, such as gloves, to prevent cuts or scrapes from sharp edges.
- **Handle with Care:** The filter assembly may have small components. Handle with care to avoid damage or loss of parts.
- **Proper Disposal:** Dispose of old parts responsibly according to local regulations.

3. COMPATIBILITY CHECK

It is crucial to verify that this replacement part is compatible with your specific dishwasher model. Many replacement parts may appear similar but are not interchangeable. Always check your dishwasher's model number before purchasing and installing.

Does your part fit?



Many replacement parts
look the same
but won't fit your model.

Don't be fooled!

Check your
model number
before you buy.

Image: A visual reminder to verify part compatibility. The image displays a red stop sign with the text "STOP" and advises users to check their model number before purchasing, as many replacement parts look similar but may not fit.

4. PRODUCT OVERVIEW

The Amesias WD12X10357 is a fine filter assembly designed for GE and Hotpoint dishwashers. This component plays a critical role in filtering food particles and debris from the wash water, ensuring clean dishes and preventing clogs in the dishwasher's pump and spray arms. It is a direct replacement for original part numbers 3028444 and PS3511267.



Image: Top-down view of the WD12X10357 fine filter assembly. This perspective highlights the circular filter screen and the central opening for water flow.



Image: Angled view of the WD12X10357 fine filter assembly. This view provides a better understanding of the filter's three-dimensional structure and connection points.

5. INSTALLATION (SETUP)

Follow these steps to replace the dishwasher filter fine assembly. Refer to your dishwasher's specific user manual for detailed instructions if available, as procedures may vary slightly by model.

1. **Prepare the Dishwasher:** Ensure the dishwasher is empty and cool. Disconnect the power supply to the dishwasher at the circuit breaker.
2. **Locate the Filter:** Open the dishwasher door and locate the filter assembly, typically found at the bottom of the dishwasher tub. It may be a two-part system (coarse and fine filter).
3. **Remove Old Filter:** Depending on your model, you may need to twist or unclip the existing fine filter assembly to

remove it. Some models require removing the lower spray arm first. Carefully lift out the old filter.

4. **Clean Area:** Clean any debris or residue from the filter housing area before installing the new filter.
5. **Install New Filter:** Place the new Amesias WD12X10357 fine filter assembly into position. Ensure it seats correctly and securely. Twist or clip it into place according to your dishwasher's design.
6. **Reassemble (if necessary):** If you removed the lower spray arm, reattach it, ensuring it can rotate freely.
7. **Restore Power:** Close the dishwasher door and restore power at the circuit breaker.
8. **Test:** Run a short cycle to ensure proper operation and check for any leaks.

6. OPERATION

Once the WD12X10357 fine filter assembly is correctly installed, your dishwasher will operate as usual. The filter continuously works to remove food particles from the wash water, contributing to cleaner dishes and preventing internal blockages.

7. MAINTENANCE

Regular cleaning of your dishwasher's filter system, including the fine filter, is essential for optimal performance and longevity of your appliance. A clogged filter can lead to poor cleaning results and drainage issues.

1. **Frequency:** It is recommended to check and clean the filter assembly at least once a month, or more frequently if you wash heavily soiled dishes.
2. **Removal:** Disconnect power to the dishwasher. Remove the fine filter assembly as described in the installation section.
3. **Cleaning:** Rinse the filter under running water to remove trapped food particles. Use a soft brush (like an old toothbrush) and mild dish soap to gently scrub away any stubborn residue or grease. Ensure all mesh openings are clear.
4. **Inspection:** Inspect the filter for any signs of damage, such as cracks or tears in the mesh. If damaged, the filter should be replaced.
5. **Reinstallation:** Reinstall the clean filter assembly, ensuring it is securely locked in place. Restore power to the dishwasher.

8. TROUBLESHOOTING

If you experience issues after installing or cleaning the filter, consider the following:

- **Poor Cleaning Performance:** Ensure the filter is clean and properly seated. A loose or clogged filter can prevent proper water circulation and filtration.
- **Dishwasher Not Draining:** While often related to the drain pump, a severely clogged filter can contribute to drainage issues. Verify the filter is clean and free of obstructions.
- **Unusual Noises:** Check that the filter is securely installed and not interfering with the spray arm or other moving parts.
- **Leaks:** Ensure the filter is correctly seated and that no seals were disturbed during installation.

If problems persist, consult your dishwasher's main service manual or contact a qualified appliance technician.

9. SPECIFICATIONS

Part Number	WD12X10357 (AP5669204)
-------------	------------------------

Replaces Part Numbers	3028444, PS3511267
Item Weight	7.4 ounces
Manufacturer	Amesias

10. WARRANTY AND SUPPORT

This Amesias WD12X10357 Dishwasher Filter Fine Assembly comes with a **6-month warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or further assistance, please contact your retailer or the manufacturer directly with your purchase details and model information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKFNCZW9>

More documents and user manuals: <https://manuals.plus/>