



[Manuals.plus](#) /

> [Lenovo](#) /

> Lenovo Wired ANC Headset Gen 2 (UC) User Manual

Lenovo Wired ANC Headset Gen 2 (UC)

Lenovo Wired ANC Headset Gen 2 (UC) User Manual

Model: Wired ANC Headset Gen 2 (UC) | Model Number: 4XD1M39029

1. INTRODUCTION

This manual provides detailed instructions for the use and maintenance of your Lenovo Wired ANC Headset Gen 2 (UC). This headset is designed for professional use, offering active noise cancellation and versatile connectivity for a seamless communication experience.



Image 1.1: Front view of the Lenovo Wired ANC Headset Gen 2 (UC).

2. PACKAGE CONTENTS

Verify that all items are present in your product package:

- Lenovo Wired ANC Headset Gen 2 (UC)
- USB-C to USB-A Converter Cable



Image 2.1: The headset with its inline control unit, USB-C connector, and USB-A adapter.

3. PRODUCT OVERVIEW

3.1 Headset Components

Flexibility and Comfort

Combines comfort and convenient plug and play



Universal USB Compatibility

Connect seamlessly with USB-C plug and USB-C to USB-A converter for laptops, PCs, and other devices.

Image 3.1: Key components of the headset, including headband padding, replaceable earcups, talk microphone, and hidable double-sided boom.

- **Headband Padding:** Provides comfort during extended use.
- **Replaceable Earcups:** Large on-ear leatherette earcups for comfort and noise dampening.
- **Talk Microphone:** A premium noise-canceling microphone located on a hidable boom.

- **Hideable Double-Sided Boom:** The microphone boom can be positioned on either side or retracted when not in use.
- **USB-C Connector:** For direct connection to compatible devices.
- **USB-A Adapter:** Allows connection to devices with USB-A ports.

3.2 Inline Control Box

Take Control Effortlessly

Enhance your productivity with In-Line Control Box

Hook button
For call management

Volume +

Volume -

Mute Button

ANC Button

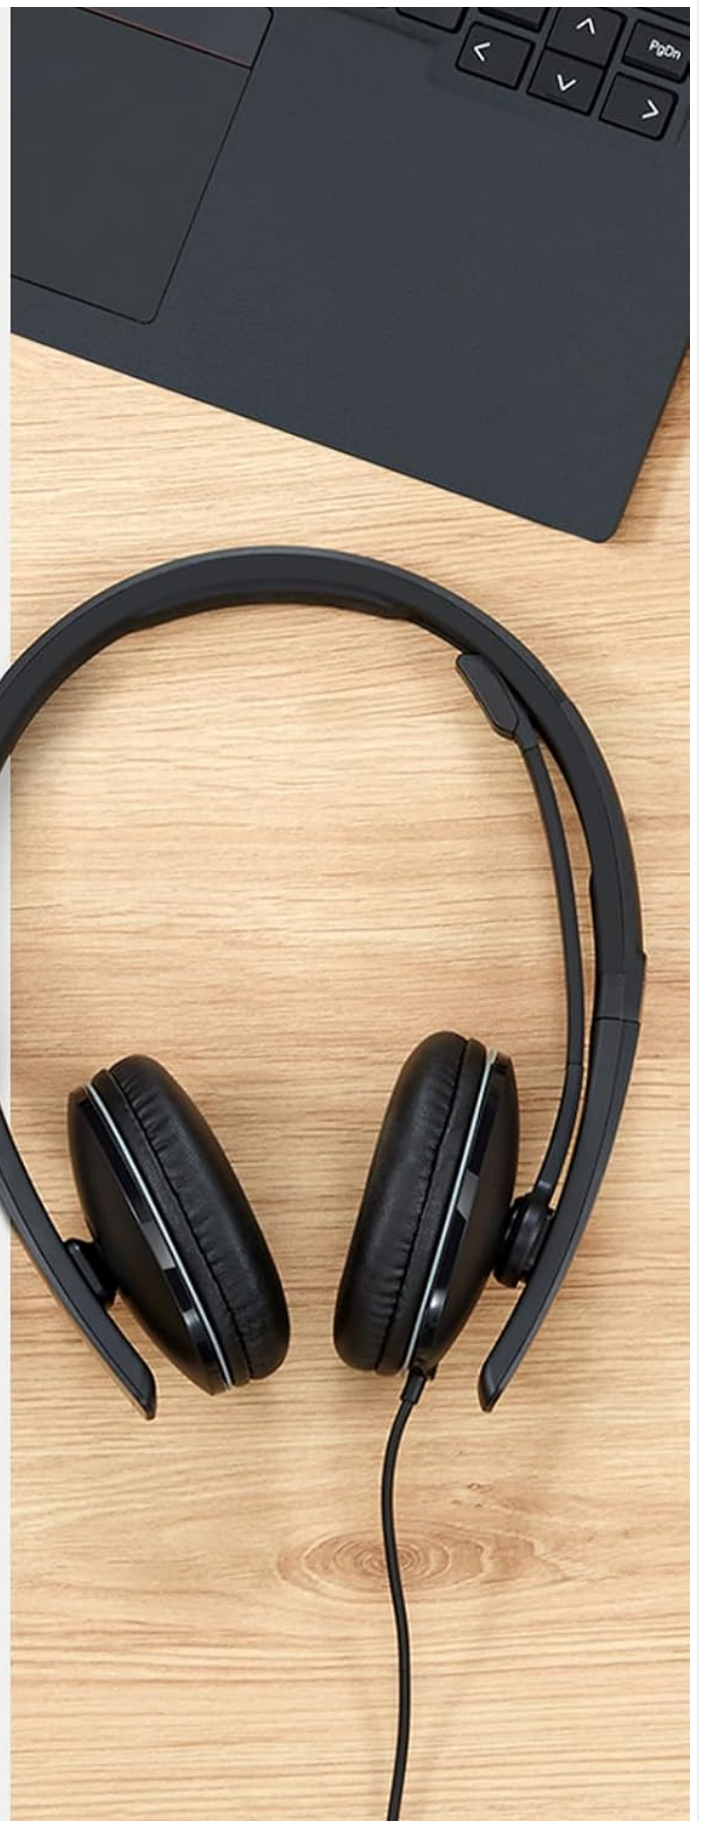


Image 3.2: The inline control box with labeled buttons for call management, volume, mute, and ANC.

- **Hook Button:** For answering and ending calls.
- **Volume + Button:** Increases audio volume.
- **Volume - Button:** Decreases audio volume.
- **Mute Button:** Mutes or unmutes the microphone.
- **ANC Button:** Activates or deactivates Active Noise Cancellation.

4. SETUP

4.1 Connecting the Headset

The Lenovo Wired ANC Headset Gen 2 (UC) offers flexible connectivity via USB-C or USB-A.

1. **For USB-C Connection:** Plug the USB-C connector directly into a compatible USB-C port on your computer, tablet, or smartphone.
2. **For USB-A Connection:** Attach the provided USB-C to USB-A converter to the USB-C connector of the headset, then plug the USB-A end into a compatible USB-A port on your device.

Seamless User Experience

Stay focused in virtual meetings with the
Lenovo Wired ANC Headset Gen 2



Zoom & Other
UC-Platforms
Certified



**Made for
Communication**



**Easy
Management**



**All-Day
Usability**

Image 4.1: The headset showing its USB-C connector and the USB-A adapter for universal compatibility.

The headset is plug-and-play, meaning it should be recognized automatically by most operating systems without requiring additional driver installation.

5. OPERATING INSTRUCTIONS

5.1 Adjusting the Headset

- Adjust the headband for a comfortable fit on your head.
- Position the microphone boom. It can be rotated and extended to place the microphone near your mouth for optimal voice pickup. The boom can be worn on either the left or right side.





Image 5.1: Side view of the headset with the microphone boom extended for use.

5.2 Basic Functions

- **Answering/Ending Calls:** Press the **Hook Button** on the inline control box.
- **Adjusting Volume:** Use the **Volume +** and **Volume -** buttons on the inline control box.
- **Muting Microphone:** Press the **Mute Button** on the inline control box. An indicator light on the control box may show the mute status.
- **Active Noise Cancellation (ANC):** Press the **ANC Button** to toggle active noise cancellation on or off. ANC helps filter out background noise for improved focus.



Image 5.2: A user engaged in a video conference call while wearing the headset, demonstrating its use in a professional setting.

6. MAINTENANCE

Proper care ensures the longevity and optimal performance of your headset.

- **Cleaning:** Use a soft, dry cloth to clean the headset. Do not use liquid cleaners or aerosols.
- **Storage:** Store the headset in a cool, dry place when not in use. Avoid extreme temperatures.
- **Earcup Replacement:** The earcups are replaceable. Refer to the Lenovo support website for instructions on how to replace them if necessary.
- **Cable Care:** Avoid sharp bends or excessive pulling on the cable to prevent damage.

7. TROUBLESHOOTING

If you encounter issues with your headset, refer to the following common solutions:

Problem	Solution
No audio from headset	<ul style="list-style-type: none"> • Ensure the headset is securely connected to the USB port. • Check your device's audio settings to ensure the headset is selected as the output device. • Increase the volume using the inline control or your device's volume controls.
Microphone not working	<ul style="list-style-type: none"> • Ensure the microphone is not muted (check the inline control box mute button and indicator light). • Verify the microphone boom is positioned correctly. • Check your device's audio settings to ensure the headset is selected as the input device.
Active Noise Cancellation (ANC) not effective	<ul style="list-style-type: none"> • Ensure the ANC feature is activated via the ANC button on the inline control box. • Ensure the earcups are properly seated over your ears to create a good seal.
Headset not recognized by device	<ul style="list-style-type: none"> • Try connecting the headset to a different USB port. • Restart your computer or device. • Ensure your device's operating system is up to date.

8. SPECIFICATIONS

Feature	Detail
Model Name	Wired ANC Headset Gen 2 (UC)
Model Number	4XD1M39029
Connectivity Technology	Wired (USB-C, USB-A via adapter)
Noise Control	Active Noise Cancellation (ANC)
Microphones	3 (1 on mic boom, 2 on earcups for feedback ANC)
Audio Driver Type	Dynamic Driver
Frequency Range	Headphones: 20 Hz - 20 kHz; Microphone: 200 Hz - 8 kHz
Impedance	1 Ohm
Sensitivity	86 dBSPL

Feature	Detail
Compatible Devices	Computers, Tablets, Telephones, Smartphones
Item Weight	408 Grams (14.4 ounces)
Product Dimensions	8.9 x 7.6 x 3 inches
Material	Plastic or aluminum (inferred)
UPC	195892090441

Exceptional Voice Call Quality

Engineered for today's hybrid workplace

Active Noise Cancellation (ANC) Technology

Filters out background noise
and improves focus.



3
Microphones

Audio Driver Type
Dynamic Driver

Frequency Range
20 Hz - 20 kHz

Distortion
 $\leq 5\%$

Sensitivity
86 dBSPL

- 1 at mic boom as talking microphone
- 1 mic on left ear cup as feedback ANC mic
- 1 mic on right ear cup as feedback ANC mic

Lenovo

Image 8.1: Visual representation of the headset's three microphones and Active Noise Cancellation technology.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please visit the official Lenovo support website or contact your local

Lenovo service provider. Keep your proof of purchase for warranty claims.

Online Support: www.lenovo.com/support

