

[Manuals.plus](#) /

› [Audiocrazy](#) /

› Audiocrazy Vintage AM/FM Radio Instruction Manual

Audiocrazy Audiocrazy-001

Audiocrazy Vintage AM/FM Radio Instruction Manual

Model: Audiocrazy-001

INTRODUCTION

Thank you for choosing the Audiocrazy Vintage AM/FM Radio. This radio combines classic aesthetics with modern functionality, offering AM/FM radio, Bluetooth connectivity, and an auxiliary input. Its wooden finish and intuitive controls make it a perfect addition to any home or office. This manual provides detailed instructions for setting up, operating, and maintaining your new radio.

KEY FEATURES

- **Vintage Wooden Finish:** Blends modern technology with retro classic aesthetics, complementing home decor.
- **Superior Sound Quality:** Features a 10 Watt full-range speaker with an enlarged magnet and deep bass compensation for improved audio.
- **Excellent AM/FM Reception:** Covers FM (87-108 MHz) and AM (520-1710KHz) with a long telescopic antenna and DSP chip for strong signal reception.
- **Bluetooth 5.0 Connectivity:** Seamlessly stream music from your smartphone or other Bluetooth-enabled devices.
- **Auxiliary Input & Headphone Jack:** Connect additional audio sources like MP3 players or use headphones for private listening.
- **Easy-to-Use Controls:** Intuitive tuning knobs and clear indicators for straightforward operation.

PACKAGE CONTENTS

Please check the box for the following items:

- Audiocrazy AM/FM Radio (Model: Audiocrazy-001)
- Power Adapter
- Owner's Manual (This document)

SETUP

1. **Unpacking:** Carefully remove the radio and all accessories from the packaging.
2. **Power Connection:** Locate the power adapter. Insert the small end of the power adapter into the DC IN port on the back of the radio. Plug the other end into a standard 120V AC wall outlet. The radio is designed for corded electric power only.
3. **Antenna Setup:** For optimal AM/FM reception, extend the telescopic antenna fully. For AM reception, you may also need to adjust the radio's physical orientation.



Figure 1: The Audiodozer radio connected to a wall outlet for power.

OPERATING INSTRUCTIONS

Controls Overview



Figure 2: Front panel controls including Pilot Lamp, Aux In, Phone, Function Switch (BT/FM/AM), Bass, and Volume knobs.

- **Pilot Lamp:** Indicates power and mode (green for radio, blue for Bluetooth).
- **Aux In:** 3.5mm input for external audio devices.
- **Phone:** 3.5mm headphone output.
- **Function Switch:** Rotary knob to select between Bluetooth (BT), FM radio, and AM radio modes.
- **Bass Knob:** Adjusts the bass level of the audio output.
- **Volume Knob:** Turns the radio ON/OFF and adjusts the overall volume.
- **Tuning Knob:** Rotates the radio dial to select AM or FM frequencies.

1. Powering On/Off and Volume Control

Rotate the **Volume Knob** clockwise to turn the radio ON. Continue rotating clockwise to increase the volume. Rotate counter-clockwise to decrease the volume. To turn the radio OFF, rotate the **Volume Knob** fully counter-clockwise until it clicks.

2. AM/FM Radio Operation

1. **Select Mode:** Rotate the **Function Switch** to either "FM" or "AM". The Pilot Lamp will illuminate green.
2. **Tune to a Station:** Slowly rotate the **Tuning Knob** to scan for radio stations. The illuminated radio dial will show the selected frequency.
3. **Adjust Reception:** For FM, extend the telescopic antenna. For AM, rotate the radio itself to find the best signal.
4. **Adjust Bass:** Use the **Bass Knob** to fine-tune the audio's bass response.



Figure 3: The nostalgic warm tuning dial illuminates for easy station selection.

Your browser does not support the video tag.

Video 1: Demonstration of the AM/FM radio tuning and sound quality. This video highlights the ease of use and clear reception of the radio functions.

3. Bluetooth Operation

1. **Select Mode:** Rotate the **Function Switch** to "BT". The Pilot Lamp will turn blue and blink, indicating it's in pairing

mode.

2. **Pairing:** On your smartphone or Bluetooth-enabled device, search for "Audiocrazy-001" (or similar name) in the Bluetooth settings and select it to pair.
3. **Connected:** Once successfully paired, the Pilot Lamp will stop blinking and remain solid blue. You can now play audio from your device through the radio.
4. **Adjust Bass:** Use the **Bass Knob** to fine-tune the audio's bass response.



Figure 4: The radio's Bluetooth 5.0 capability allows for seamless wireless audio streaming.

4. AUX Input Operation

1. **Connect Device:** Plug a 3.5mm audio cable (not included) from your external audio device (e.g., MP3 player, iPod) into the **Aux In** port on the radio.
2. **Select Mode:** Rotate the **Function Switch** to "AUX IN". The Pilot Lamp will illuminate green.
3. **Play Audio:** Start playing audio on your connected device. The sound will be output through the radio's speaker.

4. **Adjust Bass:** Use the **Bass Knob** to fine-tune the audio's bass response.

5. Headphone Use

To listen privately, plug any standard 3.5mm headphones (not included) into the**Phone** jack on the radio. The speaker output will automatically mute when headphones are connected.

MAINTENANCE

- **Cleaning:** Wipe the radio with a soft, dry cloth. Do not use liquid cleaners or abrasive chemicals, as they may damage the wooden finish or electronic components.
- **Storage:** When not in use for extended periods, store the radio in a cool, dry place away from direct sunlight and extreme temperatures.
- **Antenna Care:** Handle the telescopic antenna gently to prevent bending or breaking.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not working.	Ensure the power adapter is securely plugged into the radio and a working wall outlet. Check if the volume knob is turned ON.
Poor radio reception	Antenna not extended, weak signal, or interference.	Fully extend the telescopic antenna. For AM, try rotating the radio for better signal. Move the radio away from other electronic devices that may cause interference.
Bluetooth not connecting	Radio not in BT mode, device not discoverable, or already connected to another device.	Ensure the Function Switch is set to "BT". Make sure Bluetooth is enabled on your device and it's in pairing mode. Disconnect from other Bluetooth devices if necessary.
No sound from AUX input	Cable not connected properly, radio not in AUX mode, or volume too low.	Check the 3.5mm audio cable connection. Ensure the Function Switch is set to "AUX IN". Increase the volume on both the radio and the connected device.

SPECIFICATIONS

- **Model Number:** Audiocrazy-001
- **Brand:** Audiocrazy
- **Product Dimensions:** 9.7"L x 4.7"W x 5.7"H (24.6 cm x 11.9 cm x 14.5 cm)
- **Item Weight:** 4.58 pounds (2.08 kg)
- **Power Source:** Corded Electric (120V AC)
- **Tuner Technology:** FM, AM
- **FM Frequency Range:** 87-108 MHz
- **AM Frequency Range:** 520-1710 KHz
- **Connectivity Technology:** Bluetooth 5.0, Auxiliary (3.5mm)
- **Speaker Output:** 10 Watt Full Range
- **Special Feature:** Built-In AM Antenna, Bass Control

- **Water Resistance Level:** Not Water Resistant

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Audiocrazy Direct, the seller of this product. Refer to your purchase documentation for specific warranty terms and contact details. You can also visit the official Audiocrazy website for further assistance.

Typical protection plans available for this product include:

- 2-Year Protection Plan
- 3-Year Protection Plan

