

[Manuals.plus](#) /

> [Accutime](#) /

> Accutime Casual Watch LAS4038 User Manual

Accutime LAS4038

Accutime Casual Watch LAS4038 User Manual

MODEL: LAS4038

1. PRODUCT OVERVIEW

The Accutime Casual Watch LAS4038 is an LED digital watch designed for children, featuring a vibrant Stitch design. It provides clear time display (hours, minutes, seconds) and date information (month, day) with easy-to-use controls. The watch is lightweight and comfortable, making it suitable for daily wear.





Figure 1: Front view of the Accutime Casual Watch LAS4038. This image displays the watch's overall design, including the blue strap with Stitch and pineapple motifs, and the digital LED screen.

2. SETUP

2.1 Unboxing

Carefully remove the watch from its packaging. The package typically includes:

- Accutime Casual Watch LAS4038
- Multilingual Instructions



Disney Stitch



TRY ME
UÉBAME

PRIMENTE-ME
RÓBUJ MNIE

LED WATCH / RELOJ LED
RELÓGIO LED / ZEGAREK LED

Figure 2: The Accutime Casual Watch LAS4038 as it appears in its retail packaging.

2.2 Initial Power On

The watch comes with a built-in CR2032 button cell battery. The LED display activates at the touch of a button and automatically turns off after a few seconds to conserve battery life. No initial charging or battery installation is required.

3. OPERATION

3.1 Button Functions

The watch features two buttons located on the right side of the case. These buttons are used for activating the display and navigating through settings.



Figure 3: Side view illustrating the location of the two control buttons on the watch.

3.2 Setting Time and Date

To set the time and date:

1. Press the **top button** once to activate the display and show the current time.
2. Press and hold the **top button** for approximately 3 seconds until the hours begin to flash.
3. While the hours are flashing, press the **bottom button** repeatedly to adjust the hour.
4. Press the **top button** once to confirm the hour and move to setting the minutes.
5. Press the **bottom button** repeatedly to adjust the minutes.
6. Continue this sequence (press top button to confirm and advance, press bottom button to adjust) for setting the month, day, and 12/24 hour format.
7. Once all settings are complete, press the **top button** to exit the setting mode.

3.3 Display Modes

To cycle through display modes (time, date, seconds):

- Press the **top button** once to display the time.
- Press the **top button** again to display the date (month and day).
- Press the **top button** a third time to display the seconds.

4. MAINTENANCE

4.1 Cleaning

To clean your watch:

- Wipe the watch case and strap with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.
- Do not submerge the watch in water.

4.2 Battery Information

The Accutime Casual Watch LAS4038 uses a CR2032 button cell battery. This battery is built-in, non-rechargeable, and cannot be replaced by the user. To maximize battery life, the LED display automatically turns off after a few seconds of inactivity.

5. TROUBLESHOOTING

Issue	Possible Cause	Solution
Display not lighting up	Battery depleted or not activated.	Press the top button to activate the display. If it still does not light up, the battery may be at the end of its life. As the battery is non-replaceable, consider product replacement.
Incorrect time/date displayed	Time/date not set correctly or reset.	Refer to Section 3.2 "Setting Time and Date" to re-adjust the watch settings.
Buttons unresponsive	Debris or malfunction.	Ensure buttons are free of debris. If the issue persists, contact customer support.

6. SPECIFICATIONS

- **Model Number:** LAS4038
- **ASIN:** B0CKJ6SCCY
- **Manufacturer:** Accutime Watch Corp.
- **Department:** Unisex
- **Country of Origin:** China
- **Bracelet Dimensions:** Approximately 21.7 cm (length) x 2.2 cm (width)
- **Case Dimensions:** Approximately 3.8 cm (length) x 3.7 cm (width) x 0.9 cm (thickness)
- **Battery Type:** CR2032 (built-in, non-rechargeable, non-replaceable)
- **Display Type:** LED Digital

7. WARRANTY AND SUPPORT

This product is subject to standard return policies. For specific details regarding returns, refunds, or replacements, please refer to the retailer's policy where the product was purchased. For any operational issues not covered in this manual, or for further assistance, please contact the retailer's customer support or the manufacturer, Accutime Watch Corp.

© 2024 Accutime Watch Corp. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

