

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Gabby's Dollhouse LED Watch GAB4078 Instruction Manual

Accutime GAB4078

Accutime Gabby's Dollhouse LED Watch GAB4078 Instruction Manual

Model: GAB4078

INTRODUCTION

Welcome to your Accutime Gabby's Dollhouse LED Watch GAB4078. This digital LED watch is designed for children, featuring a luminous display and an adjustable acrylic strap. This manual will guide you through the setup, operation, and care of your new watch.





Image: The Accutime Gabby's Dollhouse LED Watch GAB4078 presented in its retail packaging, showcasing the watch face and strap design.

SETUP

Initial Activation

The watch's LED display is designed to conserve battery life. To activate the display and view the time, simply press the button located on the right side of the watch case. The display will illuminate for a few seconds and then turn off automatically.

Strap Adjustment

The acrylic strap is approximately 21.7 cm long and features 7 adjustment holes. To adjust the strap, locate the buckle and select the appropriate hole for a comfortable and secure fit on the wrist.



Image: The Accutime Gabby's Dollhouse LED Watch worn on a wrist, demonstrating its size and fit.

OPERATING INSTRUCTIONS

Your watch features two control buttons on the right side of the case for all settings. These buttons allow you to display and adjust the time, date, and switch between 12/24 hour formats.

Viewing Time and Date

1. Press the **top button** once to display the time (hours and minutes).
2. Press the **top button** a second time to display the date (month and day).
3. Press the **top button** a third time to display seconds.





Image: A close-up view of the watch's digital LED display, showing the time in a clear, luminous format.

Setting Time and Date

1. Press the **top button** to display the time.
2. Press and hold the **bottom button** for approximately 3 seconds until the hour digits begin to flash.
3. While the hour digits are flashing, press the **top button** repeatedly to advance the hour.
4. Press the **bottom button** once to switch to setting the minutes. The minute digits will flash.
5. Press the **top button** repeatedly to advance the minutes.
6. Press the **bottom button** once to switch to setting the month. The month digits will flash.
7. Press the **top button** repeatedly to advance the month.
8. Press the **bottom button** once to switch to setting the day. The day digits will flash.
9. Press the **top button** repeatedly to advance the day.
10. Press the **bottom button** once more to exit the setting mode.

12/24 Hour Format Selection

During the time setting process (when the hour digits are flashing), pressing the **bottom button** will cycle between 12-hour (with AM/PM indicator) and 24-hour formats. Select your preferred format before proceeding to set the minutes.

MAINTENANCE

Cleaning

To clean your watch, gently wipe the case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or display.

Water Resistance

This watch is water-resistant. It is suitable for everyday use and can withstand splashes or brief immersion in water, such as hand washing or light rain. It is **not** suitable for swimming, showering, or diving. Avoid pressing buttons while the watch is wet to prevent water ingress.

Battery Information

The watch is powered by an integrated CR2032 button cell battery. This battery is designed for long life due to the LED display's power-saving feature. The battery is **not rechargeable and cannot be replaced** by the user. When the battery is depleted, the watch will cease to function.

TROUBLESHOOTING

- **Display not lighting up:** Ensure you are pressing the top button firmly. If the display still does not light up, the integrated battery may be depleted. As the battery is non-replaceable, the watch will need to be replaced.
- **Incorrect time or date:** Follow the 'Setting Time and Date' instructions in the Operating section to reset the watch.

SPECIFICATIONS

Model Number	GAB4078
Display Type	Digital LED
Movement Type	Quartz
Case Dimensions (H x W x D)	3.8 x 3.7 x 0.9 cm
Strap Dimensions (L x W)	21.7 x 2.2 cm
Weight	32 Grams
Battery Type	CR2032 Button Cell (Integrated, Non-replaceable)
Water Resistance	Water-resistant
Case Material	Stainless Steel
Strap Material	Acrylic
Dial Window Material	Crystal







Image: A full view of the Accutime Gabby's Dollhouse LED Watch, displaying the complete strap design with characters.

SUPPORT

For further assistance or inquiries regarding your Accutime Gabby's Dollhouse LED Watch GAB4078, please refer to the contact information provided with your purchase or visit the official Accutime website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question