

[Manuals.plus](#) /

> [Accutime](#) /

> Accutime LAS40005 Flashing LCD Kids Watch User Manual

Accutime LAS40005

Accutime LAS40005 Flashing LCD Kids Watch User Manual

Model: LAS40005

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Accutime LAS40005 Flashing LCD Kids Watch. Please read this manual thoroughly before operating the watch to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The Accutime LAS40005 is a digital LCD watch designed for children, featuring a vibrant Stitch design and flashing LED lights. It comes as part of a gift set that includes additional accessories.





Figure 2.1: Accutime LAS40005 Watch and Accessories. This image displays the main watch unit with its colorful Stitch-themed strap, alongside a separate glitter bracelet, a sequin bracelet, and a multi-colored scrunchie.



Figure 2.2: Product Packaging. The watch and its accessories are presented within a themed gift box, featuring Disney Stitch artwork.

Package Contents:

- 1 x Accutime LAS40005 Flashing LCD Kids Watch
- 1 x Glitter Bracelet
- 1 x Sequin Bracelet (Stitch design)
- 1 x Colorful Scrunchie
- Multilingual Instruction Manual
- 2 x LR41 Batteries (pre-installed)

3. SETUP

Battery Installation/Activation:

The watch comes with 2 x LR41 batteries pre-installed. If the display is not active, gently press any button to activate it. If the watch does not power on, the batteries may need replacement. Refer to the "Maintenance" section for battery replacement instructions.

Adjusting the Watch Band:

The watch band is adjustable to fit various wrist sizes. Locate the buckle and adjust the strap length by moving the pin to the desired hole. Ensure a comfortable fit that is not too tight or too loose.

4. OPERATING INSTRUCTIONS

Displaying Time and Date:

To view the time (hours, minutes), seconds, month, and day, simply press the button located on the right side of the watch case. Each press will cycle through the display modes.

Setting Time and Date:

1. Press and hold the button on the right side of the watch case until the display starts flashing.
2. While flashing, short press the button to adjust the hour.
3. Press and hold the button again to move to the next setting (minutes, month, day, etc.).
4. Repeat the short press to adjust the value and long press to confirm and move to the next setting.
5. Once all settings are complete, the display will stop flashing, indicating the settings are saved.

Activating Flashing Lights:

Press the button on the right side of the watch case to activate the flashing LED lights. The lights will illuminate for a few seconds and then automatically turn off to conserve battery life.

5. MAINTENANCE

Cleaning the Watch:

Wipe the watch and accessories with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the finish. The watch is not waterproof; avoid submerging it in water.

Battery Replacement:

When the display becomes dim or unresponsive, it's time to replace the batteries. The watch uses 2 x LR41 batteries.

1. Carefully open the battery compartment on the back of the watch using a small screwdriver (not included).
2. Remove the old LR41 batteries, noting their polarity.
3. Insert new 2 x LR41 batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment.
5. Dispose of old batteries responsibly according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low or dead batteries.	Replace the 2 x LR41 batteries. Refer to Section 5.
Lights are not flashing.	Battery level too low for flashing function; button not pressed correctly.	Replace batteries. Ensure a firm press on the button.
Cannot set time/date.	Incorrect button press sequence.	Refer to Section 4 for detailed instructions on setting time and date. Ensure long presses for mode change and short presses for value adjustment.

7. SPECIFICATIONS

Feature	Detail
Model Number	LAS40005
Display Type	Digital LCD
Power Source	2 x LR41 Batteries
Watch Band Dimensions	Approx. 22 x 2 cm (Adjustable)
Watch Case Dimensions	Approx. 3.9 x 4 x 0.9 cm
Special Features	Flashing LED lights, Time/Date display, Stitch design

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in the original product packaging or visit the official Accutime Watch Corp. website. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: Accutime Watch Corp.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKJ773XQ>

More documents and user manuals: <https://manuals.plus/>