Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Microsoft /
- Microsoft Xbox Core Wireless Controller Astral Purple User Manual

Microsoft Xbox Core Wireless Controller

Microsoft Xbox Core Wireless Controller - Astral Purple User Manual

Model: Xbox Core Wireless Controller

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Microsoft Xbox Core Wireless Controller in Astral Purple. Designed for enhanced comfort and precision, this controller offers a seamless gaming experience across multiple platforms.



Image: The Xbox Core Wireless Controller in Astral Purple, highlighting its modernized design and comfortable grip.

Key features include sculpted surfaces, refined geometry, a hybrid D-pad, and textured grips on triggers, bumpers, and the back-case for improved control. The integrated Share button allows for quick capture and sharing of content. Connectivity options include USB-C for direct play and charging, as well as Xbox Wireless and Bluetooth technology for versatile wireless gaming.

SETUP

1. Powering On and Battery Installation

The Xbox Core Wireless Controller operates on AA batteries. To install:

- 1. Locate the battery compartment on the rear of the controller.
- 2. Press the release tab and remove the battery cover.
- 3. Insert two (2) AA batteries, ensuring correct polarity (+/-).
- 4. Replace the battery cover until it clicks securely into place.

Alternatively, the controller can be powered and charged via a USB-C cable (not included) for direct plug-and-play functionality.

2. Connecting to Devices

Your controller supports multiple connection methods:

- **Xbox Wireless:** For Xbox consoles. Press and hold the Pair button on the controller (located near the USB-C port) and the Pair button on your Xbox console until the Xbox button on the controller flashes rapidly.
- **Bluetooth:** For Windows PCs, mobile phones, and tablets. Press and hold the Pair button on the controller until the Xbox button flashes rapidly. On your device, go to Bluetooth settings and select the Xbox Wireless Controller from the list of available devices.
- **USB-C Cable:** Connect a USB-C cable from the controller to your Xbox console or PC for a wired connection. This also charges rechargeable battery packs (sold separately).



Image: Key features of the controller, including the hybrid D-pad, textured grips, USB-C port, Share button, and 3.5mm audio jack.

OPERATING INSTRUCTIONS

Basic Controls

- Hybrid D-pad: Provides precise input for directional movements.
- **Triggers and Bumpers:** Textured for improved grip and control during gameplay.
- Share Button: Press to capture screenshots or hold to record gameplay clips.
- 3.5mm Audio Jack: Plug in any compatible headset for game audio and chat.

Switching Between Devices

The controller is designed for quick switching between paired devices. Once paired with multiple devices (e.g., Xbox console, PC, mobile), you can typically switch by pressing the Pair button twice quickly or by selecting the controller from your device's Bluetooth settings.

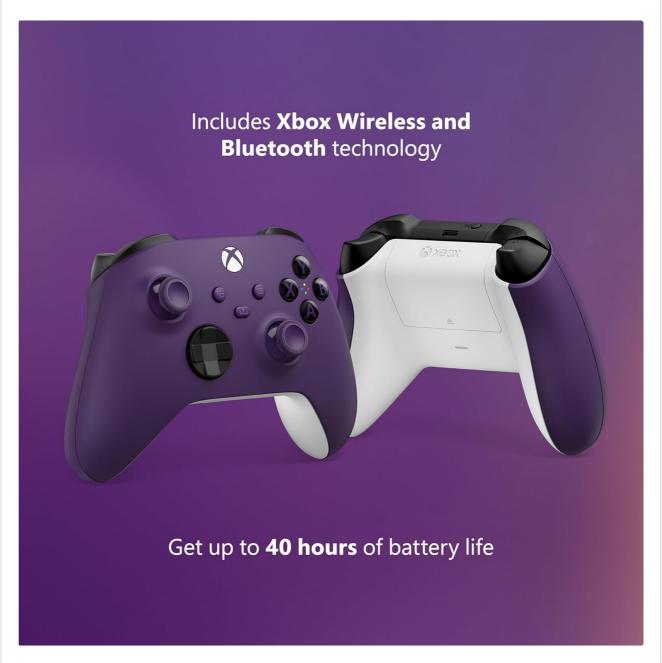


Image: The controller's ability to easily pair and switch between console, PC, and mobile devices.

Customizing Button Mappings

Utilize the Xbox Accessories app (available on Xbox consoles and Windows PCs) to personalize your controller:

• Remap buttons to suit your play style.

- · Create custom controller profiles for different games.
- Adjust stick sensitivities and trigger dead zones.


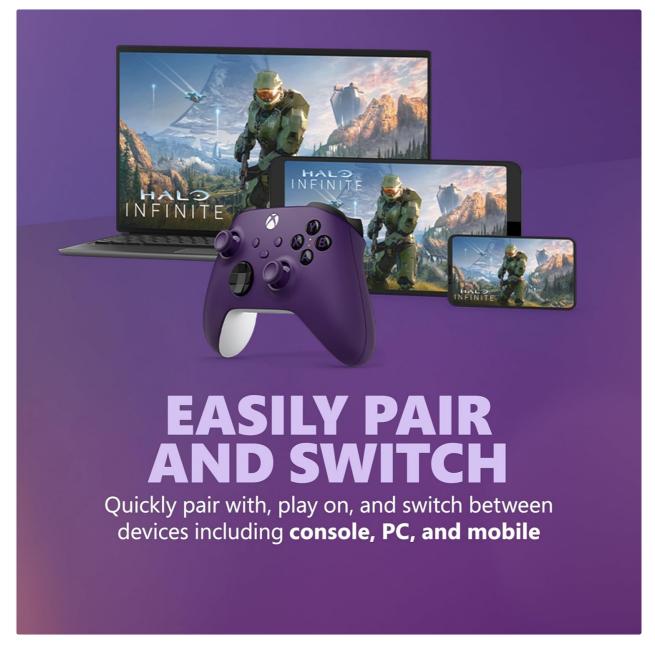


Image: Custom mapping options for the controller using the Xbox Accessories app.

MAINTENANCE

Battery Life

With AA batteries, the controller can provide up to 40 hours of gameplay. Actual battery life may vary based on usage, headset use, and other factors. Consider using rechargeable AA batteries or a dedicated Xbox rechargeable battery pack (sold separately) for convenience.

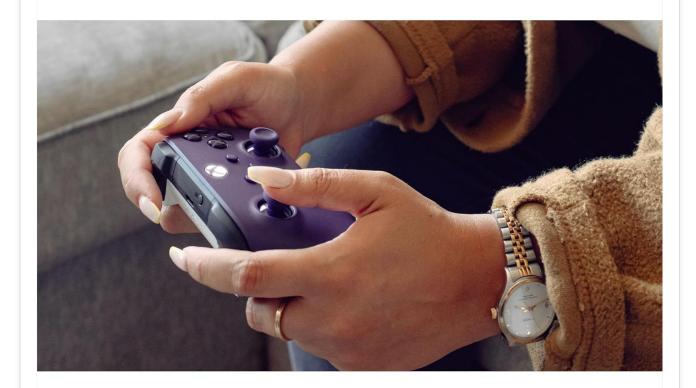

Make the controller your own by customizing button mapping with the Xbox Accessories app*

Image: Front and back views of the controller, emphasizing its wireless capabilities and battery longevity.

Cleaning

To clean your controller, use a soft, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the controller's finish and internal components.

TROUBLESHOOTING

- Controller Not Connecting/Responding:
 - Ensure batteries are correctly installed and charged.
 - Try re-pairing the controller with your device (see 'Connecting to Devices' section).
 - Connect the controller via USB-C cable to check for a wired connection.
 - Restart your console, PC, or mobile device.
- Controller Requires Update:
 - Connect the controller to an Xbox console or a Windows PC with the Xbox Accessories app

installed.

Follow the on-screen prompts within the Xbox Accessories app to update the controller firmware.
An update is often required for full functionality and compatibility.

• Stick Drift or Input Issues:

- Ensure the controller firmware is up to date.
- · Calibrate the controller using the Xbox Accessories app.
- If issues persist, contact Microsoft Support for further assistance, especially for renewed products.

• Audio Jack Not Working:

- Ensure your headset is fully plugged into the 3.5mm jack.
- Test the headset with another device to confirm it is functional.
- Check audio settings on your console or PC.

SPECIFICATIONS


Model Name	Xbox Core Wireless Controller
ASIN	B0CKJ8YLP7
Manufacturer	Microsoft
Connectivity	Xbox Wireless, Bluetooth, USB-C
Power Source	2x AA Batteries (up to 40 hours battery life)
Audio Port	3.5mm Stereo Headset Jack
Product Dimensions	6.97 x 7.01 x 2.83 inches
Item Weight	10.8 ounces
First Available Date	October 5, 2023

WARRANTY AND SUPPORT

As this product is listed as 'Renewed', specific warranty terms may vary from new products. Please refer to the seller's warranty information provided at the time of purchase. For technical support, troubleshooting, or warranty claims, it is recommended to contact Microsoft Support or the retailer from whom the renewed product was purchased.

For general information and additional resources, visit the official Microsoft Xbox support website.

© 2025 Microsoft Corporation. All rights reserved. Xbox, Xbox Wireless, and the Xbox logo are trademarks of Microsoft Corporation.

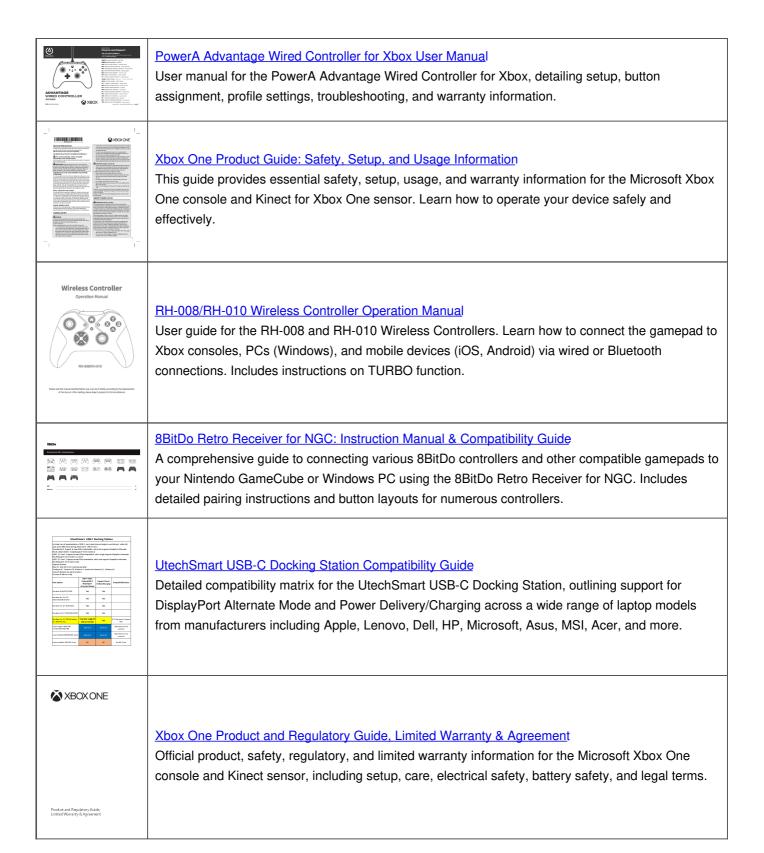

Documents - Microsoft - Xbox Core Wireless Controller



Regulatory and Warranty Guide Guide réglementaire et de garantie Guis de normas e garantia Guis de normas e garantia Guide de réglementation et de garantie Sicherheits- und Garantiehniweise Guida sulla normative e la garanzia Informaçie o wymogach prawnych i gwarancji Guis de Regulamentação e Garantia Guia reglamentaria y garantia Guia reglamentaria y garantia

Xbox One Accessory Regulatory and Warranty Guide

Comprehensive guide covering safety, warranty, software license, and regulatory information for Xbox One accessories from Microsoft.

lang:en score:20 filesize: 396.55 K page_count: 36 document date: 2021-09-14