

[Manuals.plus](#) /

› [VOWNER](#) /

› VOWNER Farmhouse Rattan TV Stand (Model VOWNER-001) Instruction Manual

VOWNER VOWNER-001

VOWNER Farmhouse Rattan TV Stand Instruction Manual

Model: VOWNER-001

1. INTRODUCTION

Thank you for choosing the VOWNER Farmhouse Rattan TV Stand. This manual provides detailed instructions for assembly, operation, maintenance, and safety to ensure proper use and longevity of your product. Please read this manual thoroughly before beginning assembly and retain it for future reference.



Image 1.1: The VOWNER Farmhouse Rattan TV Stand in a typical living room environment.

2. SAFETY INFORMATION

To prevent injury or damage to the product, observe the following safety guidelines:

- Always assemble the TV stand strictly according to the provided instructions.
- Keep the television and other heavy objects centered on the stand and away from the edges to prevent tipping.
- Ensure the area around the TV stand is clear of flammable materials.
- Never leave children unattended near the TV stand, especially during assembly or with heavy items placed on it.
- Do not exceed the maximum weight capacity of the stand.

3. SPECIFICATIONS

Feature	Detail
Brand	VOWNER
Model Number	VOWNER-001
Product Dimensions	59"W x 15.7"D x 19.7"H (150cm W x 40cm D x 50cm H)
Material	Engineered Wood, MDF, Rattan
Color	Wood Color
Number of Shelves	2 (open)
Door Style	Sliding Rattan Doors
Special Features	Storage, Cable Management Holes, Waterproof & Scratch Resistant Surface
Item Weight	58 Pounds
Assembly Required	Yes

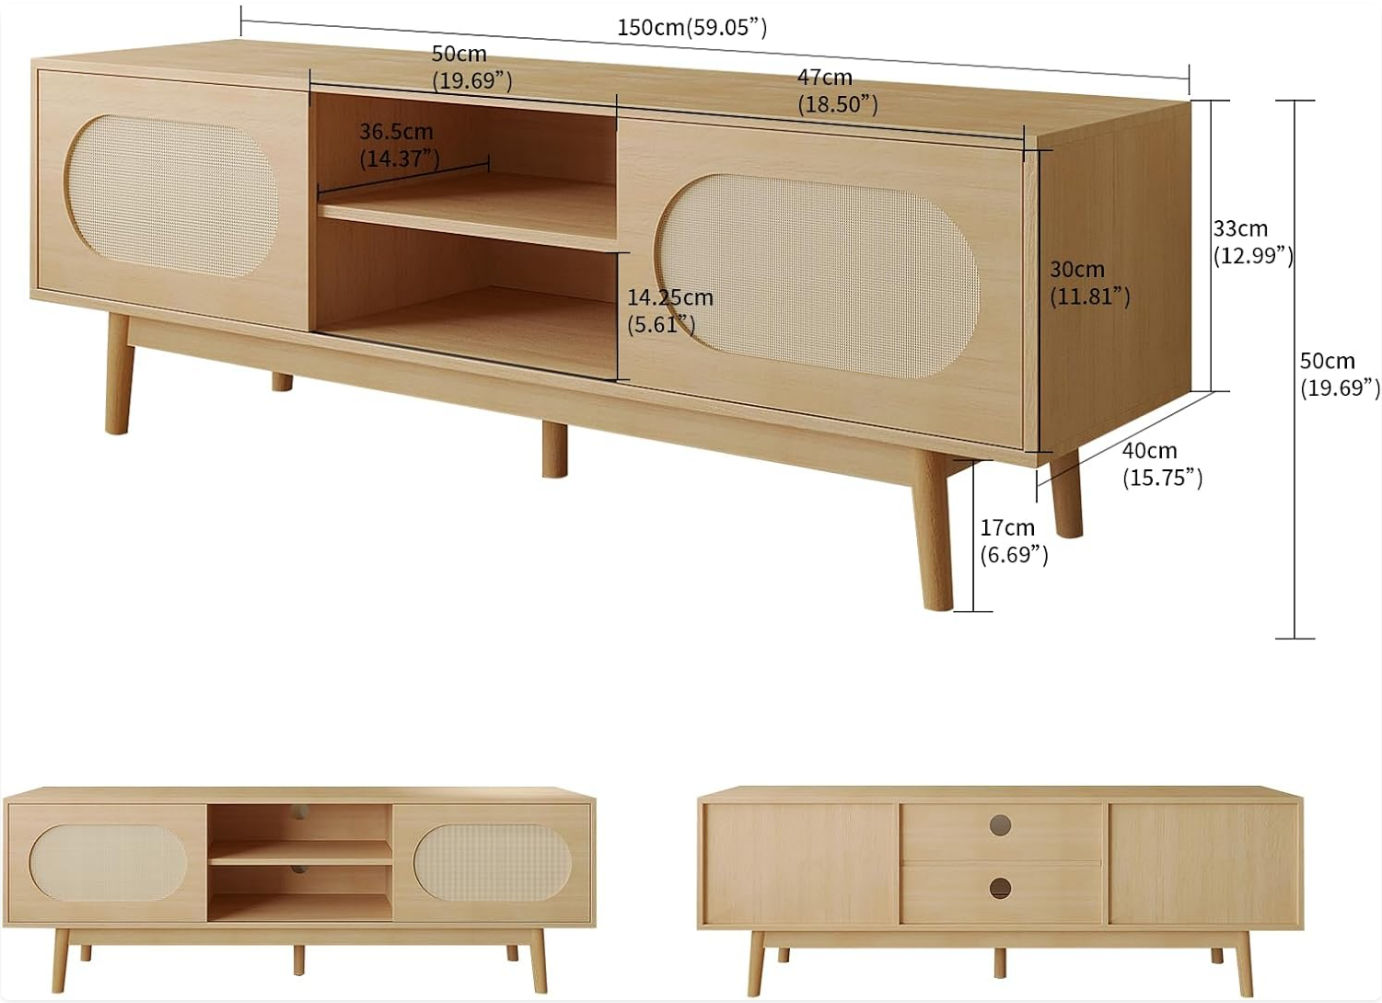


Image 3.1: Product dimensions and structural overview.



Image 3.2: TV size compatibility, suitable for TVs up to 65 inches.

4. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Main TV Stand Panels (Top, Bottom, Sides, Back)
- Sliding Rattan Doors (2)
- Adjustable Shelves (2)
- Wooden Legs (5, including one central support leg)
- Hardware Pack (screws, dowels, cam locks, door glides, etc.)
- Assembly Instructions

5. SETUP AND ASSEMBLY

Assembly is required for this product. Please follow the included detailed assembly instructions step-by-step. It is recommended to have two people for assembly to ensure stability and ease of handling. A Phillips head screwdriver and a hammer (not included) may be required.

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface to prevent scratches. Compare parts with the provided parts list in the separate assembly guide.
2. **Assemble the Frame:** Attach the side panels to the bottom panel using the designated hardware. Ensure all connections are secure.
3. **Install Shelves:** Insert the shelf pins into the pre-drilled holes at your desired height for the open shelves, then place the shelves.
4. **Attach Back Panel:** Secure the back panel to the frame. Ensure the cable management holes are correctly oriented.
5. **Install Top Panel:** Attach the top panel to the assembled frame. Pay attention to the orientation for the sliding door tracks.
6. **Attach Legs:** Secure the five wooden legs to the bottom of the stand. The central leg provides additional support.
7. **Install Sliding Doors:** Carefully insert the rattan doors into the top and bottom tracks. Ensure they slide smoothly.



Image 5.1: Detail of the sliding door mechanism.

6. OPERATING INSTRUCTIONS

Once assembled, the VOWNER Farmhouse Rattan TV Stand is ready for use.

- **Placement:** Position the TV stand on a flat, stable surface.
- **TV Placement:** Carefully place your television on the top surface, ensuring it is centered and stable. This stand is designed for TVs up to 65 inches.
- **Storage:** Utilize the two open shelves for media devices, books, or decorative items. The two side cabinets with sliding rattan doors offer concealed storage for other items.
- **Cable Management:** Use the integrated cable management holes on the back panel to organize and route power cords and signal cables, keeping them tidy and out of sight.



Image 6.1: Features including cable management and open storage.




Cable management

Open storage area



Waterproof & Scratch resistant

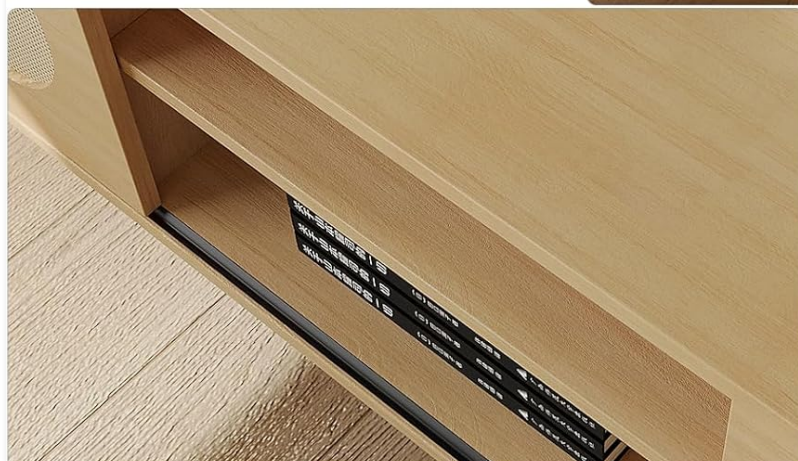

7. MAINTENANCE

To maintain the appearance and longevity of your TV stand:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Promptly clean up any spills to prevent staining, especially on the engineered wood surfaces.
- **Rattan Care:** The natural rattan doors can be gently dusted with a soft brush or cloth. Avoid excessive moisture.
- **Inspection:** Periodically check all hardware connections and tighten if necessary to ensure stability.

8. TROUBLESHOOTING

If you encounter any issues with your VOWNER TV Stand, refer to the following common solutions:

- **Doors Not Sliding Smoothly:** Ensure the top panel is installed correctly, as the door tracks are specific to one side. Check for any obstructions in the tracks. Apply a small amount of silicone spray or wax to the tracks if needed.
- **Stand Wobbles:** Verify that all assembly screws and bolts are securely tightened. Ensure the stand is placed on a level surface. Adjust the central support leg if applicable.
- **Missing or Damaged Parts:** If you find any parts missing or damaged upon opening the package, do not proceed with assembly. Contact VOWNER customer support immediately for assistance.

9. WARRANTY AND SUPPORT

VOWNER is committed to providing quality products. While specific warranty details are not provided in this manual, we stand by our products. If you have any questions, concerns, or require assistance with assembly or parts, please do not hesitate to contact VOWNER customer support. We are dedicated to providing a solution.

For further assistance, please visit the [VOWNER Store on Amazon](#).

© 2023 VOWNER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question