

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Universal TV Remote Control for Sharp LCD LED TVs - User Manual

ECONTROLLY Universal TV Remote Control (ASIN: B0CKL987VV)

ECONTROLLY Universal TV Remote Control for Sharp LCD LED TVs - User Manual

Model: Universal TV Remote Control (ASIN: B0CKL987VV)

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY Universal TV Remote Control, designed as a replacement for Sharp LCD and LED televisions. This infrared remote control requires no programming and is ready to use once batteries are installed.

Package Contents:

- 2 x ECONTROLLY Universal TV Remote Control





Image 1.1: Front view of the ECONTROLLY Universal TV Remote Control. This image displays the remote with all its buttons, including number keys, navigation, volume, channel, and dedicated streaming service buttons.

2. SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

Important: Use only AAA ALKALINE batteries. Do not use rechargeable batteries, as they may not provide sufficient power or could damage the remote control.

Batteries are not included with the remote control and must be purchased separately.

3. OPERATING INSTRUCTIONS

This universal remote control is pre-programmed for Sharp LCD and LED TVs and does not require any additional setup or code entry. Simply point the remote at your television and press the desired button.

Basic Functions:

- **Power Button (●):** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+VOL / -VOL):** Adjusts the television's volume.
- **Channel Up/Down (+CH / -CH):** Changes the television channel.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Dedicated App Buttons (NETFLIX, amazon, VUDU, YouTube):** Provides direct access to these streaming services (TV must be smart TV compatible and connected to the internet).



Image 3.1: Angled view of the ECONTROLLY Universal TV Remote Control, highlighting the ergonomic design and button layout.

4. MAINTENANCE

Cleaning:

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface or internal components.

Battery Care:

- Replace batteries when the remote's performance diminishes or stops working.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

- Dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

Remote Not Responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with fresh AAA ALKALINE batteries.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range of the TV's infrared receiver.
- **Infrared Interference:** Bright sunlight or other strong light sources can interfere with the infrared signal. Try operating the remote in a different lighting condition.

Specific Buttons Not Working:

- Verify that the TV is powered on and functioning correctly with its original remote (if available).
- For dedicated app buttons (e.g., Netflix), ensure your Sharp TV is a smart TV model, connected to the internet, and the apps are installed and updated.

If the remote still does not function after following these steps, please refer to the support section.

6. SPECIFICATIONS

Feature	Specification
Product Dimensions	3.94 x 1.57 x 0.59 inches
Item Weight	1.76 ounces
Batteries Required	2 AAA batteries (Alkaline recommended)
Compatibility	Sharp LCD LED TV All Models
Special Feature	Pre-Programmed, No Setup Required
Color	Black

7. SUPPORT

If you encounter any issues or have questions regarding your ECONTROLLY Universal TV Remote Control that are not covered in this manual, please contact the seller or manufacturer for assistance.
For general inquiries or to report a problem, please refer to the contact information provided at the point of purchase.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKL987VV>

More documents and user manuals: **<https://manuals.plus/>**