

MPM MPM-20-KMM-11

MPM Microwave with Grill MPM-20-KMM-11 User Manual

Model: MPM-20-KMM-11

INTRODUCTION

Thank you for purchasing the MPM Microwave with Grill MPM-20-KMM-11. This manual provides essential information for the safe and efficient operation of your appliance. Please read these instructions carefully before use and retain them for future reference.



Figure 1: MPM Microwave with Grill MPM-20-KMM-11. This image shows the front view of the black microwave oven, featuring a dark glass door on the left and a control panel with two rotary knobs on the right. The top knob controls power settings, and the bottom knob controls the timer and defrost settings.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to

persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Supervise children closely when the appliance is in use.

SETUP AND INSTALLATION

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not install if damaged.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure adequate ventilation; leave a minimum of 10 cm clearance at the rear, 20 cm at the top, and 5 cm on each side.
3. **Power Connection:** Plug the power cord into a standard grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance rating label.
4. **Turntable Installation:**
 - Place the roller ring in the depression on the oven floor.
 - Place the glass turntable on top of the roller ring, ensuring it sits securely in the center support.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features two rotary knobs:

- **Power Level Knob (Top):** Used to select the desired cooking power level (e.g., High, Medium, Low, Defrost, Grill).
- **Timer/Defrost Knob (Bottom):** Used to set the cooking time (0-35 minutes) or select defrost by weight.

Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Turn the **Power Level Knob** to the desired power setting.
4. Turn the **Timer Knob** to the desired cooking time. The oven will start automatically.
5. When the cooking time expires, the oven will emit an audible signal and turn off.

Grill Function

The grill function is ideal for browning and crisping food.

1. Place food on the grill rack (if provided) or a heat-resistant dish.

2. Close the oven door securely.
3. Turn the **Power Level Knob** to the "Grill" setting.
4. Turn the **Timer Knob** to the desired grilling time.
5. For best results, turn food halfway through the grilling time.

Defrost Function

This oven offers a defrost-by-weight function.

1. Place the frozen food on the glass turntable.
2. Close the oven door securely.
3. Turn the **Power Level Knob** to the "Defrost" setting.
4. Turn the **Timer/Defrost Knob** to the approximate weight of the food. The oven will automatically calculate the defrost time.
5. During defrosting, the oven may pause to allow you to turn or separate the food for even defrosting.

MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Exterior:** Wipe the exterior with a damp cloth and mild soap. Dry thoroughly.
- **Interior:** Clean the interior cavity after each use. Wipe with a damp cloth. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen residue, then wipe clean.
- **Door Seals:** Keep the door seals and adjacent parts clean. Use a soft cloth and mild detergent. Avoid abrasive cleaners.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Grill Element:** For the grill element, ensure the oven is cool. Use a soft brush to remove any food residue. Do not use water directly on the element.
- **Power Cord:** Regularly inspect the power cord for any damage. If damaged, contact qualified service personnel.

Caution: Always unplug the microwave oven before cleaning.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Oven does not start	Power cord not securely plugged in. Door not closed properly. Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet. Close door completely. Check household fuse/circuit breaker.
Food not heating	Incorrect power level selected. Cooking time too short. Food not suitable for microwave.	Adjust power level. Increase cooking time. Use microwave-safe dishes.

Problem	Possible Cause	Solution
Turntable not rotating	Turntable or roller ring not correctly placed. Food too large or heavy, obstructing rotation.	Re-position turntable and roller ring. Reduce food quantity or use a smaller dish.
Sparks or arcing inside oven	Metal or foil used in microwave. Food splatters on oven walls.	Remove all metal objects. Clean oven interior thoroughly.

If the problem persists after trying these solutions, please contact qualified service personnel.

PRODUCT SPECIFICATIONS

Model	MPM-20-KMM-11
Brand	MPM
Type	Microwave with Grill
Capacity	20 Liters
Microwave Power	700 W
Timer	0-35 minutes
Defrost Function	Yes (by weight)
Features	Interior light, Easy cleaning
Dimensions (L x W x H)	46 cm x 36 cm x 28.5 cm (approx.)
Weight	10.5 kg (approx.)

CUSTOMER SUPPORT

For technical assistance, warranty information, or service inquiries, please contact your local MPM service center or retailer.

Please have your model number (MPM-20-KMM-11) and purchase date available when contacting support.

<div><p>NÁVOD K OBSLUZE</p></div> <div><p>MIKROVLNNÁ TROUBA MPM-20-KMT-04</p><p>PŘED PRVNÍM POUŽITÍM SI PŘEČTĚTE NÁVOD K OBSLUZE</p></div>	<p>MPM-20-KMT-04 Mikrovlnná trouba: Návod k obsluze a bezpečnostní pokyny</p> <p>Kompletní návod k obsluze pro mikrovlnnou troubu MPM-20-KMT-04. Obsahuje důležité bezpečnostní pokyny, informace o instalaci, čištění, provozu a údržbě.</p>
<div><p>NÁVOD K OBSLUZE</p></div> <div><p>MIKROVLNNÁ TROUBA MPM-20-KMT-05</p><p>PŘED PRVNÍM POUŽITÍM SI PŘEČTĚTE NÁVOD K OBSLUZE</p></div>	<p>Návod k obsluze: Mikrovlnná trouba MPM-20-KMT-05</p> <p>Kompletní uživatelská příručka pro mikrovlnnou troubu MPM-20-KMT-05 od výrobce MPM. Obsahuje podrobné pokyny k bezpečnému používání, instalaci, čištění a funkcím spotřebiče.</p>
<div><p>ІНСТРУКЦІЯ З ЕКСПЛУАТАЦІЇ</p></div> <div><p>Холодильник/морозильна камера TOTAL NO FROST MPM-216-CF-26, MPM-216-CF-27, MPM-216-CF-28</p><p>ПЕРЕ ПЕРШОЮ ЕКСПЛУАТАЦІЮ ПЕРЕЧІТАЙТЕ ІНСТРУКЦІЮ З ЕКСПЛУАТАЦІЇ</p></div>	<p>MPM MPM-216-CF Series Refrigerator/Freezer User Manual</p> <p>This manual provides instructions for the MPM-216-CF-26, MPM-216-CF-27, and MPM-216-CF-28 refrigerator/freezer, covering safety information, daily use, installation, troubleshooting, and maintenance.</p>
<div><p>INSTRUKCJA OBSŁUGI</p></div> <div><p>PŁYTA INDUKCYJNA MPM-60-IM-15</p><p>PRIED PRWNIEM UŻYTKOWANIEM ZAPROSIŁ SIĘ O INSTRUKCJĘ OBSŁUGI</p></div>	<p>Instrukcja Obsługi Płyty Indukcyjnej MPM-60-IM-15</p> <p>Instrukcja obsługi dla płyty indukcyjnej MPM model MPM-60-IM-15, zawierająca informacje o montażu, użytkowaniu, bezpieczeństwie, konserwacji, rozwiązywaniu problemów, danych technicznych oraz warunkach gwarancji.</p>
<div><p>INSTRUKCJA OBSŁUGI</p></div> <div><p>Chłodziarko-zamrażarka modele MPM-285-KB-31/E, MPM-285-KB-37/E, MPM-286-KB-34/E</p><p>PRIED PRWNIEM UŻYTKOWANIEM ZAPROSIŁ SIĘ O INSTRUKCJĘ OBSŁUGI</p></div>	<p>MPM Chłodziarko-zamrażarka MPM-285-KB-31/E, MPM-285-KB-37/E, MPM-286-KB-34/E - Instrukcja Obsługi</p> <p>Kompleksowa instrukcja obsługi dla chłodziarko-zamrażarek MPM modeli MPM-285-KB-31/E, MPM-285-KB-37/E, MPM-286-KB-34/E. Zawiera informacje o bezpieczeństwie, instalacji, codziennym użytkowaniu, pielęgnacji, czyszczeniu, rozwiązywaniu problemów i danych technicznych.</p>
<div><p>INSTRUKCJA OBSŁUGI</p></div> <div><p>BLENDER RĘCZNY ZESTAW MBL-11 Нод блендер з/ручний блендер з комплектів/ Ручной блендер с комплект/Блендер MBL-11 набір/Прийми миста/Прийми миста/Под Настав прилагат мануал к/Блендер set</p><p>PRIED PRWNIEM UŻYTKOWANIEM ZAPROSIŁ SIĘ O INSTRUKCJĘ OBSŁUGI</p></div>	<p>Instrukcja Obsługi MPM MBL-11 Blender Ręczny Zestaw</p> <p>Szczegółowa instrukcja obsługi zestawu blendera ręcznego MPM MBL-11, zawierająca wskazówki bezpieczeństwa, opis urządzenia, montaż, użytkowanie, czyszczenie, konserwację oraz dane techniczne.</p>

