

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Volkano](#) /

› [Volkano Odyssey Series Dual Party Speaker VK-3900-D65 Instruction Manual](#)

Volkano VK-3900-D65

Volkano Odyssey Series Dual Party Speaker Instruction Manual

MODEL: VK-3900-D65

Your guide to setting up and operating your Volkano Odyssey Series speaker.

1. Introduction

Thank you for purchasing the Volkano Odyssey Series Dual Party Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

2. Safety Instructions

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid placing the speaker near water or other liquids.
- Do not attempt to open or repair the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from children and pets.
- Use only the provided charging cable or a certified equivalent.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners.

3. Package Contents

Please ensure all items are present in your package:

- 1 x Volkano Odyssey Series Dual Party Speaker (6.5-Inch Size)
- 1 x Charging Cable
- 1 x Instruction Manual

4. Product Overview

The Volcano Odyssey Series Dual Party Speaker is a portable Bluetooth speaker designed for clear and powerful sound. It features Bluetooth wireless connectivity, FM radio, microphone input, and RGB lighting.



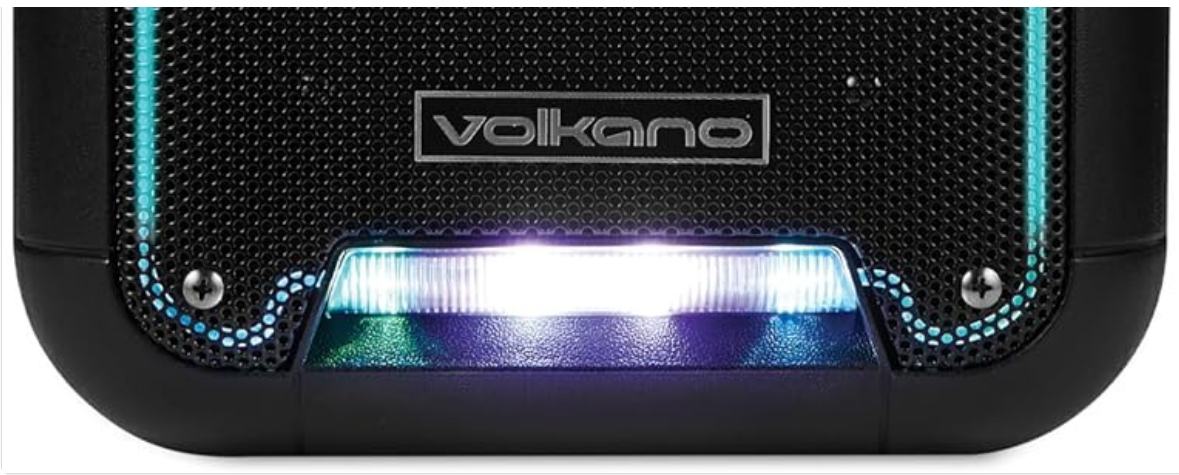


Figure 4.1: Front view of the Volkano Odyssey Series Dual Party Speaker, showcasing the dual speaker grilles and integrated RGB lighting strips.



Figure 4.2: Top and side view of the speaker, illustrating the control panel with various buttons and ports for operation.

Key Features:

- Bluetooth Wireless Connectivity
- Clear and Powerful Sound Output
- Up to 9 Hours of Playback
- Integrated FM Radio
- Microphone Input for Karaoke or Announcements
- Dynamic RGB Lighting Effects

5. Setup

5.1. Charging the Speaker

1. Locate the charging port on the speaker.
2. Connect the provided charging cable to the speaker's charging port.
3. Plug the other end of the charging cable into a suitable USB power adapter (not included) or a powered USB port.
4. The charging indicator light will illuminate, typically red, during charging. It will turn off or change color (e.g., blue) when fully charged.
5. A full charge provides up to 9 hours of playback, depending on volume and usage.

5.2. Powering On/Off

- To power on: Press and hold the Power button (usually marked with) for a few seconds until you hear an audible prompt or see indicator lights illuminate.
- To power off: Press and hold the Power button again for a few seconds until the speaker powers down.

5.3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the Mode button to switch to Bluetooth. The Bluetooth indicator light will flash, indicating it's in pairing mode.
2. On your smartphone, tablet, or other Bluetooth-enabled device, navigate to the Bluetooth settings.
3. Enable Bluetooth and search for available devices.
4. Select "Volcano Odyssey" (or similar name) from the list of found devices.
5. Once paired, the speaker will emit an audible confirmation, and the Bluetooth indicator light will stop flashing and remain solid.
6. You can now stream audio wirelessly to your speaker.

Note: The speaker will automatically attempt to reconnect to the last paired device when powered on.

5.4. FM Radio Operation

1. Power on the speaker.
2. Press the Mode button repeatedly until you hear the FM radio function activate.
3. To auto-scan and save available stations: Press and hold the Play/Pause button. The speaker will scan and store stations automatically.
4. To switch between saved stations: Use the Previous/Next track buttons.

5.5. Microphone Input

1. Locate the microphone input port (usually a 6.35mm jack) on the speaker.
2. Plug your microphone into this port.
3. Adjust the microphone volume using the dedicated knob on the control panel, if available.
4. Ensure the speaker's main volume is also adjusted to a suitable level.

5.6. RGB Lighting Control

The speaker features dynamic RGB lighting. Refer to the control panel for a dedicated light button or a combination of buttons to cycle through lighting modes or turn the lights on/off.

6. Operating the Speaker

6.1. Volume Control

- Use the Volume Up (+) and Volume Down (-) buttons on the speaker to adjust the master volume.
- You can also control the volume from your connected Bluetooth device.

6.2. Music Playback (Bluetooth)

- **Play/Pause:** Press the Play/Pause button to start or pause playback.
- **Next Track:** Press the Next Track button to skip to the next song.
- **Previous Track:** Press the Previous Track button to go back to the beginning of the current song or to the previous song.

6.3. Switching Input Modes

Press the Mode button repeatedly to cycle through available input sources: Bluetooth, FM Radio, AUX Input (if available), USB (if available), SD Card (if available).

7. Maintenance

- **Cleaning:** Wipe the speaker's exterior with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

8. Troubleshooting

| Problem | Possible Solution |
|----------------------------|--|
| Speaker does not power on. | Ensure the battery is charged. Connect the speaker to a power source and try again. |
| No sound from the speaker. | Check the volume level on both the speaker and your connected device. Ensure the correct input mode is selected. |

| Problem | Possible Solution |
|-------------------------------|---|
| Bluetooth device cannot pair. | Ensure the speaker is in Bluetooth pairing mode (flashing indicator). Turn off and on Bluetooth on your device. Move your device closer to the speaker. |
| FM radio reception is poor. | Extend the antenna (if applicable). Try moving the speaker to a different location. Perform an auto-scan again. |

9. Specifications

| | |
|----------------------------|--|
| Model Number | VK-3900-D65 |
| Brand | Volkano |
| Connectivity | Bluetooth Wireless |
| Speaker Type | Outdoor |
| Special Features | Lightweight, RGB Lighting, FM Radio, Microphone Input |
| Battery Life | Up to 9 hours (depending on usage) |
| Product Dimensions | 28D x 28W x 51.6H centimetres |
| Package Dimensions | 51.6 x 28 x 28 cm |
| Package Weight | 700 g |
| Included Components | 1 x Volkano Odyssey Series Dual Party Speaker, 6.5-Inch Size |

10. Warranty and Support

10.1. Manufacturer's Warranty

This Volkano Odyssey Series Dual Party Speaker comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

10.2. Customer Support

For technical assistance, warranty inquiries, or further information, please contact Volkano customer support. Refer to the Volkano website or product packaging for contact details.

