

NKF RC280

NKF RC280 Remote Control User Manual for TCL TV Models

INTRODUCTION

This user manual provides comprehensive instructions for the NKF RC280 Remote Control, designed as a direct replacement for various TCL TV models. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and ease of use. No programming or pairing is required for this remote control.

PRODUCT OVERVIEW

The NKF RC280 is a dedicated replacement remote control for compatible TCL televisions. It features a standard button layout for easy navigation and includes dedicated shortcut buttons for popular streaming services.



Image: Front and side view of the NKF RC280 Remote Control, showcasing its ergonomic design and button layout.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.


3. Insert two (2) new AAA 1.5V alkaline batteries, ensuring the positive (+) and negative (-) terminals match the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

NKF

ABS Material No Programming or Set Up Required.

**Insert 2 New 1.5V AAA Alkaline
Batteries to replace your original
remote control perfectly.**

(Not Included Batteries)

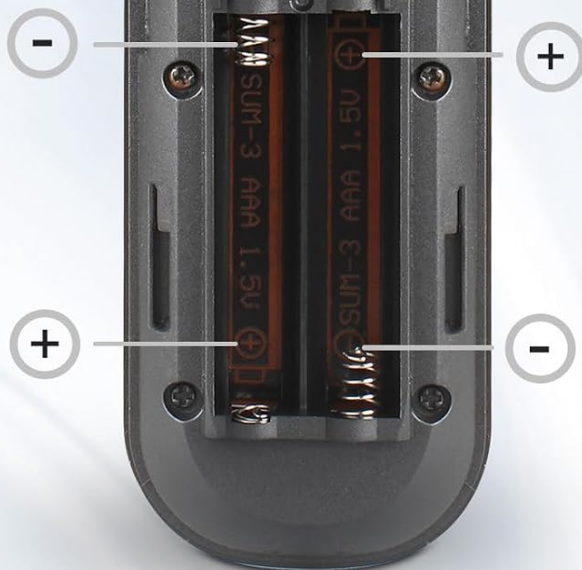

ABS MATERIAL

Image: Detailed diagram illustrating the correct orientation for inserting two AAA batteries into the remote control's battery compartment.

2. Initial Use

The NKF RC280 Remote Control is designed for immediate use with compatible TCL TV models. No programming or pairing steps are required. Once batteries are installed, the remote is ready to operate your television.

OPERATING INSTRUCTIONS

The remote control provides full functionality for your TCL TV. Familiarize yourself with the button layout for efficient control.

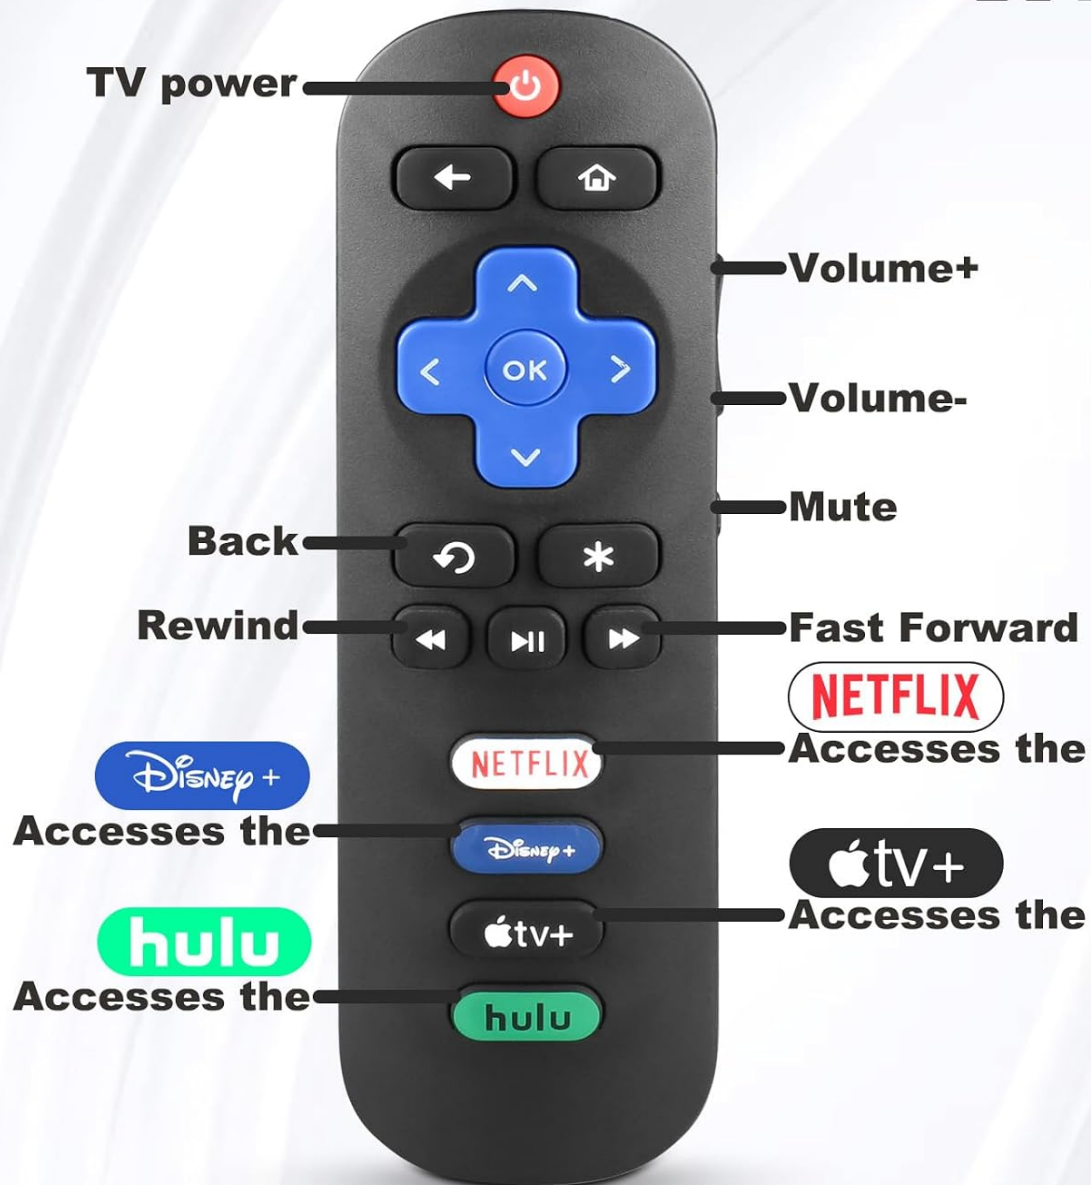


Image: Labeled diagram of the RC280 remote control, indicating the function of each button, including power, navigation, volume, and app shortcuts.

Button Functions:

- **Power Button (⏻):** Turns the TV on or off.
- **Back Button (←):** Returns to the previous screen or menu.
- **Home Button (🏠):** Navigates to the TV's home screen.
- **Navigation Pad (Blue Arrows & OK):** Use the arrow buttons to move through menus and select options. Press **OK** to confirm a selection.
- **Volume Up/Down:** Adjusts the television's volume.
- **Mute Button:** Mutes or unmutes the television's audio.
- **Rewind (⏮), Play/Pause (⏸), Fast Forward (⏭):** Control media playback.
- **Asterisk (*) Button:** Accesses additional options or settings within certain applications.
- **Dedicated App Buttons (Netflix, Disney+, Apple TV+, Hulu):** Provide direct access to these streaming applications.

Video: Demonstration of the NKF RC280 remote control's functionality with a TCL TV, showing button presses and screen responses.

COMPATIBLE TCL TV MODELS

The NKF RC280 Remote Control is compatible with a wide range of TCL TV models, including but not limited to:

55S21
65S451
43S451
50S451
55S451
75S451
85S451
65S513
65S517
55S517
49S517
43S517
55S513
49S513
65S4LEAA
65S4
65R626
55R635
75R635
65R635
65R613
65R617
55R617
75R617
50S555
55S555
65S555
75S555
49S405
55S405
40S3800
55US57
50UP120
55UP120
32S4610R
50FS3750
32FS3700
32FS4610R

32S800
32S850
32S3850
32S305
40S305
43S305
28S3750
32S3750
40FS3750
48FS3750
55FS4610R
55FS3750
32S3700
32S3800
48FS3700
55FS3700
32S3850(A/B/P)
32S3850A
32S3850B
32S3850P
50S433
55S433
65S433
75S433
55P605TEAA
55P605
55S421
40FS3850
50FS3850
28S305
55FS3850
40FS3800
50FS3800
40FS4610R
48FS4610R
43FP110
49FP110
49S305
65S405
43S405
65S455

NKF



RC280 Remote Control For TCL Models:

55S21 65S451 43S451 50S451
55S451 75S451 85S451 65S513
65S517 55S517 49S517
43S517 55S513 49S513
65S4LEAA 65S4 65R626
55R635 75R635
65R613 65R617



Image: The NKF RC280 remote control displayed alongside a TCL television, with a partial list of compatible models for reference.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both batteries at the same time with new AAA 1.5V alkaline batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

If you encounter issues with your NKF RC280 Remote Control, please refer to the following common solutions:

- **Remote Not Responding:**

- Ensure batteries are inserted correctly with the proper polarity (+/-).
 - Replace old batteries with new AAA 1.5V alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Short Operating Distance:**
 - Replace batteries with new ones. Low battery power can reduce the remote's range.
 - Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the TV's IR receiver.
 - **Specific Buttons Not Working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
 - Verify that the remote is compatible with your specific TCL TV model.

SPECIFICATIONS

Model Number	RC280
Brand	NKF
Compatible Devices	TCL Televisions
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)
Special Feature	No Programming Required
Color	Black
Product Dimensions	4.6 x 2 x 0.7 inches
Item Weight	1.6 ounces

NKF



Simple and intuitive - Quickly access your favorite live TV and your most used applications from the main menu.

Image: The NKF RC280 remote control shown with its length, width, and thickness dimensions indicated.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your NKF RC280 Remote Control, please contact the manufacturer or your point of purchase. Specific warranty details may vary; please refer to your purchase documentation for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question