

Pretty Love 4983

Pretty Love Jammy Penis Sling User Manual

Model: 4983

1. INTRODUCTION

Thank you for choosing the Pretty Love Jammy Penis Sling, Model 4983. This device is designed for personal use, featuring 12 vibrating and licking settings for varied experiences. Constructed from body-safe silicone, it is rechargeable for convenience. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

2. SAFETY INFORMATION

- **For Adult Use Only:** This product is intended for adult use.
- **Material Safety:** The device is made from silicone. Discontinue use immediately if you experience any irritation or discomfort.
- **Lubrication:** Use only water-based lubricants with this product. Oil-based lubricants can damage silicone material.
- **Cleaning:** Clean the device thoroughly before and after each use as instructed in the Maintenance section.
- **Charging:** Use only the provided charging cable. Do not use the device while it is charging. Keep away from water during charging.
- **Storage:** Store in a cool, dry place, away from direct sunlight and out of reach of children.
- **Disposal:** Do not dispose of the device with household waste. Follow local regulations for electronic waste disposal.

3. SETUP

3.1 Unboxing

Carefully remove the device and all accessories from the packaging. Verify that all components are present: the Jammy Penis Sling device and a USB charging cable.

3.2 Initial Charging

Before first use, fully charge the device. Locate the DC charging port on the device. Connect the small end of the USB charging cable to the device's charging port and the larger end to a standard USB power adapter (not included) or a computer USB port.



Image: Side view of the device, highlighting the DC charging port. The port is a small circular indentation labeled 'DC'.

The indicator light will illuminate during charging and typically turn off or change color when fully charged. A full charge usually takes 2-3 hours. Do not overcharge the device.

3.3 Cleaning Before First Use

Wash the device thoroughly with warm water and a mild, toy-safe soap. Rinse completely and allow it to air dry or gently pat dry with a lint-free cloth before its initial use.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To power on the device, press and hold the power button (usually marked with a power symbol or a single button) for 2-3 seconds

until the device activates. To power off, press and hold the same button for 2-3 seconds until the device stops.



Image: Top view of the device, showing the single control button located on the upper surface.

4.2 Changing Settings

Once powered on, short press the power button to cycle through the 12 available vibration and licking patterns. Each short press will advance to the next pattern. Experiment to find your preferred setting.

4.3 Usage

Apply a generous amount of water-based lubricant to the device and the desired area of the body. Position the device as

intended, ensuring a comfortable fit. Adjust settings as desired using the control button.





Image: Front view of the device, revealing the internal textured surface designed for licking sensations.

5. MAINTENANCE

5.1 Cleaning After Use

After each use, clean the device thoroughly. Wash with warm water and a mild, toy-safe soap. Pay special attention to textured areas. Rinse completely to remove all soap residue. Allow the device to air dry completely before storing.

- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.
- Do not boil the device or place it in a dishwasher.

5.2 Charging

Recharge the device when the indicator light signals low battery or when performance diminishes. Refer to section 3.2 for charging instructions. Ensure the charging port is dry before connecting the cable.

5.3 Storage

Store the device in a clean, dry, and dust-free environment. Keep it away from extreme temperatures, direct sunlight, and other silicone products to prevent material degradation or reactions. Store separately from other toys made of different materials.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully (refer to section 3.2).
Device does not turn on.	Power button not pressed correctly.	Press and hold the power button for 2-3 seconds.
Vibrations are weak or inconsistent.	Low battery.	Charge the device fully.
Device not charging.	Cable not connected properly or faulty cable/adapter.	Ensure the USB cable is securely connected. Try a different USB port or power adapter.
Skin irritation occurs.	Allergic reaction or improper lubricant.	Discontinue use immediately. Consult a medical professional if irritation persists. Ensure only water-based lubricants are used.

7. SPECIFICATIONS

- **Model:** 4983
- **Brand:** Pretty Love
- **Material:** Silicone

- **Functions:** 12 vibrating and licking settings
- **Power:** Rechargeable (USB cable included)
- **Manufacturer:** Geila

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where the product was purchased or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0CKLTF219>

More documents and user manuals: <https://manuals.plus/>