

[Manuals.plus](#) /

› [Nexgrill](#) /

› Nexgrill 4-Burner Propane Gas Grill with Side Burner - Instruction Manual

## Nexgrill 720-0925PA

# Nexgrill 4-Burner Propane Gas Grill with Side Burner

Model: 720-0925PA | Brand: Nexgrill

### INTRODUCTION

The Nexgrill 4-Burner Gas BBQ Grill (Model 720-0925PA) is designed to expand your outdoor cooking capabilities. Featuring a powerful 12,000 BTU side burner and four main stainless steel burners, it offers a spacious 562 sq. in. total cooking area. The grill is equipped with porcelain-enameled cast iron cooking grates for excellent heat retention, an Even-Heat System for consistent cooking, and electronic ignition for reliable starts. A built-in thermometer allows for precise temperature control, and heavy-duty casters ensure portability.



Figure 1: Nexgrill 4-Burner Propane Gas Grill (Model 720-0925PA)

## IMPORTANT SAFETY INFORMATION

Always read and understand all instructions before assembling or operating this grill. Failure to follow these instructions could result in fire, explosion, or burn hazard which could cause property damage, personal injury, or death.

- **Outdoor Use Only:** This grill is for outdoor use only. Do not operate indoors or in an enclosed area.
- **Clearance:** Maintain proper clearance from combustible materials. Refer to the full manual for specific distances.
- **Propane Safety:** Always connect and disconnect the propane cylinder outdoors. Ensure the cylinder is securely fastened and upright. Check for gas leaks regularly using a soapy water solution.
- **Ventilation:** Ensure adequate ventilation around the grill.
- **Supervision:** Never leave the grill unattended while in use. Keep children and pets away from the grill.
- **Hot Surfaces:** Grill surfaces become extremely hot during operation. Use heat-resistant gloves or mitts.
- **Grease Fires:** Clean the grease tray regularly to prevent grease fires.

## ASSEMBLY

Assembly of the Nexgrill 4-Burner Propane Gas Grill is required. All necessary tools and hardware are included in the packaging. It is recommended to have two people for assembly to ensure stability and ease of construction. Follow the step-by-step instructions provided in the detailed manual that accompanies your grill. Typical assembly time is approximately 15-20 minutes for experienced users, but may take longer for first-time assemblers.



Figure 2: Key components of the Nexgrill 4-Burner Propane Gas Grill, including side shelves, electronic ignition, side burner, and transport wheels.

Your browser does not support the video tag.

Video 1: Overview of the Nexgrill 4-Burner Propane Gas Grill, demonstrating its features and ease of use. This video highlights the grill's design and functionality, including the side burner and overall construction.

## COMPONENTS OVERVIEW

- **Stainless Steel Lid:** The polished stainless steel lid offers durability, heat resistance, and easy cleaning, maintaining its sleek design. It features a built-in thermometer for precise temperature monitoring.
- **Main Burners:** Four 10,000 BTU stainless steel burners provide versatile, high-efficiency heating across the primary cooking area.
- **Side Burner:** A convenient 12,000 BTU side burner enhances your grilling options, perfect for preparing side dishes, sauces, or boiling water.
- **Cooking Grates:** Heavy-duty porcelain-enameled cast iron cooking grates deliver even heat distribution and excellent heat retention.
- **Warming Rack:** An upper warming rack (21.4 x 6.75 inches) keeps cooked food warm without overcooking.
- **Electronic Ignition:** Provides quick and reliable burner starts with a simple push-button mechanism.
- **Side Tables:** Two spacious side prep tables offer ample space for food preparation and keeping grilling tools handy.
- **Portable Design:** Equipped with sturdy, durable wheels and fixed feet for easy movement and stable placement.
- **Grease Tray:** A removable grease tray simplifies cleaning and maintenance.

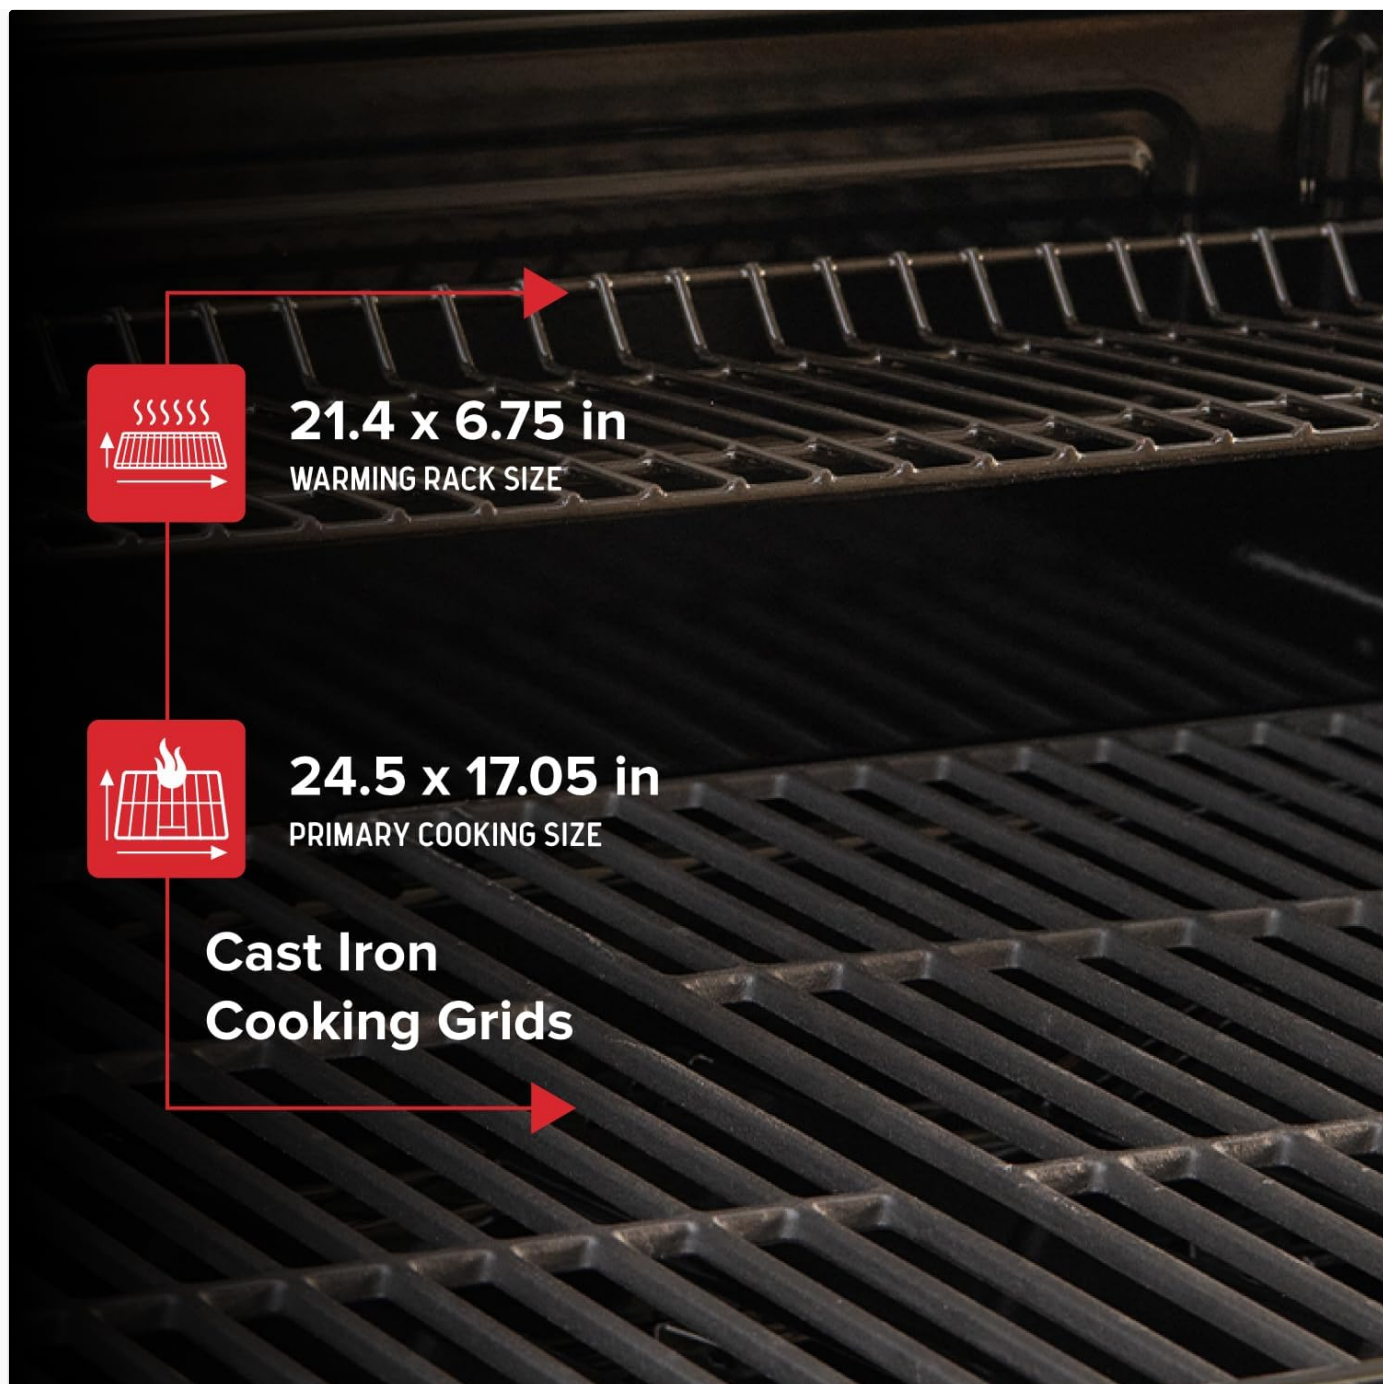


Figure 3: Detailed view of the grill's cooking surfaces, including the warming rack (21.4 x 6.75 in) and primary cooking area (24.5 x 17.05 in) with cast iron cooking grids.



Figure 4: Stainless steel burners, highlighting their durability and the 5-year warranty on main burners.



Figure 5: The 12,000 BTU side burner in action, perfect for preparing side dishes.

## SETUP

### 1. Grill Placement

Place your Nexgrill on a level, stable surface outdoors, away from any combustible materials. Ensure there is adequate clearance from walls, fences, and other structures as specified in the full safety guidelines.

### 2. Propane Tank Connection

Connect the propane tank to the grill's regulator. Ensure the tank is securely placed in the designated holder beneath the grill. Tighten all connections by hand. Do not use tools to tighten the regulator nut, as this could damage the connection. Perform a leak test using a soapy water solution on all connections before first use and after each tank change.

# PRODUCT DIMENSIONS

MODEL: 720-0925PA



Figure 6: Overall product dimensions for placement consideration: Height 46.54 in, Width 49.02 in, Depth 24.72 in, Weight 62.83 lb.



Figure 7: Heavy-duty wheels allow for easy portability of the grill.

## **OPERATING INSTRUCTIONS**

### **1. Lighting the Grill**

1. Ensure the propane tank valve is fully open.
2. Open the grill lid.
3. Push and turn one of the main burner control knobs to the HIGH position.
4. Immediately press and hold the electronic ignition button until the burner ignites.
5. Once lit, you can adjust the flame to your desired cooking temperature. Repeat for additional burners as needed.
6. To light the side burner, open its lid, push and turn the side burner control knob to HIGH, and press the electronic ignition button.

### **2. Temperature Control**

The built-in thermometer on the lid provides accurate temperature readings, allowing you to monitor and adjust heat for optimal cooking. Adjust burner knobs to achieve desired temperatures for different foods.

### 3. Cooking with the Grill

Utilize the spacious primary cooking area for grilling meats, vegetables, and more. The warming rack is ideal for keeping food warm or gently toasting buns.



Figure 8: Example of food being grilled on the spacious 562 sq. in. cooking surface.



Figure 9: Another view of diverse foods being cooked on the grill, demonstrating its versatility.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your grill and ensure optimal performance.

- **Cooking Grates:** After each use, allow the grates to cool slightly, then brush off any food residue with a grill brush. For deeper cleaning, remove grates and wash with warm, soapy water.
- **Grease Tray:** The removable grease tray should be emptied and cleaned regularly to prevent grease buildup and potential fires.
- **Exterior Surfaces:** Wipe down stainless steel surfaces with a soft cloth and a stainless steel cleaner. For black surfaces, use mild soap and water.
- **Burners:** Periodically inspect burner ports for blockages and clean as necessary.

## Troubleshooting

| Problem                            | Possible Cause                                         | Solution                                                                              |
|------------------------------------|--------------------------------------------------------|---------------------------------------------------------------------------------------|
| Burner not lighting with ignition. | No gas flow; clogged burner port; faulty igniter.      | Check propane tank connection and level; clean burner ports; check igniter electrode. |
| Uneven heating.                    | Clogged burner ports; low gas pressure.                | Clean burner ports; ensure propane tank is not low.                                   |
| Yellow or orange flame.            | Clogged burner ports; improper air shutter adjustment. | Clean burner ports; consult manual for air shutter adjustment.                        |

For more detailed troubleshooting, refer to the complete user manual.

## Specifications

| Feature                        | Detail                                                             |
|--------------------------------|--------------------------------------------------------------------|
| Brand                          | Nexgrill                                                           |
| Model Name                     | 720-0925PA                                                         |
| Product Dimensions (D x W x H) | 24.22"D x 49.5"W x 46.53"H                                         |
| Item Weight                    | 96 Pounds                                                          |
| Fuel Type                      | Propane Gas                                                        |
| Main Burner Count              | 4                                                                  |
| Main Burner BTU                | 10,000 BTU each (40,000 BTU total)                                 |
| Side Burner Count              | 1                                                                  |
| Side Burner BTU                | 12,000 BTU                                                         |
| Total Cooking Power            | 52,000 BTUs                                                        |
| Cooking Surface Area           | 562 Square Inches                                                  |
| Material                       | Porcelain, Stainless Steel, Alloy Steel                            |
| Special Features               | Side Burner, Portable, Built-In Thermometer, Removable Grease Tray |

## Warranty and Support

The Nexgrill 4-Burner Propane Gas Grill (Model 720-0925PA) comes with a **1-Year Limited Warranty**. For specific warranty details, claims, or technical support, please refer to the warranty information included with your product or visit

the official Nexgrill website. Customer support is available to assist with any questions or issues you may encounter. For additional resources and product information, visit the [Nexgrill Store on Amazon](#).

**ASK A QUESTION ABOUT THIS MANUAL**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question