

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Livoo](#) /

› [Livoo DOM479 Handheld Garment Steamer User Manual](#)

Livoo DOM479

Livoo DOM479 Handheld Garment Steamer User Manual

Model: DOM479

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Livoo DOM479 handheld garment steamer. Keep this manual for future reference.

- Always ensure the voltage matches your power supply.
- Do not immerse the steamer, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Do not leave the steamer unattended while it is plugged in or operating.
- Use only distilled or demineralized water to prevent mineral buildup.
- Do not direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Always unplug the steamer before filling or emptying the water tank, and before cleaning.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any way.
- Allow the steamer to cool completely before storing.

2. PRODUCT OVERVIEW

The Livoo DOM479 is a powerful handheld garment steamer designed for quick and efficient wrinkle removal from various fabrics.



Figure 2.1: The Livoo DOM479 handheld garment steamer. This image shows the complete steamer unit with its ergonomic handle, water tank, and steam nozzle.

Key Features:

- **Performance & Efficiency:** Equipped with a ceramic soleplate for smooth gliding and quick wrinkle removal. Heats up in just 30 seconds.
- **Personalized Control:** Intuitive LED touch screen with 2 steam levels, providing up to 25 g/min steam output.
- **Extended Operation:** Features a 300ml water tank, offering up to 20 minutes of continuous steaming.
- **Versatile Attachments:** Includes a fabric brush and a lint remover for maintaining various fabric textures and materials.



Figure 2.2: Close-up view of the control panel. This image highlights the LED touch screen with power button and steam level indicators.



Figure 2.3: Included attachments: fabric brush and lint remover. These accessories are designed to enhance steaming performance on different fabric types.

3. SETUP

- 1. Unpack the Steamer:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
- 2. Fill the Water Tank:**
 - Ensure the steamer is unplugged.
 - Remove the water tank from the main unit.
 - Open the water tank cap and fill with distilled or demineralized water up to the MAX fill line. Do not overfill.
 - Close the cap securely and reattach the water tank to the steamer until it clicks into place.

3. Attach Accessories (Optional):

- For delicate fabrics or to remove lint, attach the desired brush (fabric brush or lint remover) to the steam nozzle by aligning it and pressing firmly until it locks.
- Ensure the steamer is cool before attaching or detaching accessories.

4. Positioning:

Hang the garment you wish to steam on a hanger. Ensure there is enough space around the garment for steam to dissipate.

4. OPERATING INSTRUCTIONS

- 1. Power On:** Plug the steamer into a suitable electrical outlet. The power indicator light on the LED touch screen will illuminate.
- 2. Preheating:** Press the power button on the LED touch screen. The steamer will begin to heat up. This process takes approximately 30 seconds. The indicator light will change or stop flashing when ready.
- 3. Select Steam Level:** Once preheated, use the LED touch screen to select your desired steam level (1 or 2). Level 1 is for lighter fabrics, and Level 2 provides maximum steam for heavier fabrics and stubborn wrinkles.

4. Steaming Garments:

- Hold the steamer upright, keeping the steam nozzle away from your body.
- Gently pull the garment taut with one hand.
- Move the steam nozzle slowly downwards over the fabric, allowing the steam to penetrate and relax the fibers.
- For best results, steam from top to bottom.
- Avoid prolonged contact with one spot to prevent water marks.

5. After Use:

- Press the power button to turn off the steamer.
- Unplug the steamer from the electrical outlet.
- Allow the appliance to cool down completely before emptying the water tank and storing.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Livoo DOM479 steamer.

- 1. Empty Water Tank:** After each use, once the steamer has cooled, remove the water tank and empty any remaining water. This prevents mineral buildup.
- 2. Clean Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- 3. Clean Steam Nozzle:** If mineral deposits appear around the steam nozzle, gently wipe them away with a cotton swab dipped in white vinegar. Rinse with a damp cloth.
- 4. Descaling (Monthly or as needed):**
 - Mix a solution of 50% white vinegar and 50% distilled water.
 - Pour the solution into the water tank.

- Plug in the steamer and allow it to heat up.
- Run the steamer until half of the solution has been used, directing steam into a sink or basin.
- Turn off, unplug, and let it cool for 30 minutes.
- Repeat the steaming process with the remaining solution.
- Empty the tank and rinse thoroughly with fresh distilled water. Run a full tank of fresh distilled water through the steamer to flush out any vinegar residue.

5. **Storage:** Store the steamer in a cool, dry place, away from direct sunlight. Ensure the water tank is empty and the steamer is completely cool before storing.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or very little steam.	<ul style="list-style-type: none"> • Water tank empty. • Steamer not heated sufficiently. • Mineral buildup. 	<ul style="list-style-type: none"> • Refill water tank. • Wait for 30 seconds until indicator light shows readiness. • Perform descaling procedure (Section 5).
Water spitting from nozzle.	<ul style="list-style-type: none"> • Overfilled water tank. • Steamer not fully heated. • Mineral buildup. 	<ul style="list-style-type: none"> • Do not overfill the tank. • Allow full preheating time. • Perform descaling procedure (Section 5).
Steamer not turning on.	<ul style="list-style-type: none"> • Not plugged in correctly. • Power outlet issue. 	<ul style="list-style-type: none"> • Ensure plug is fully inserted. • Test outlet with another appliance or check circuit breaker.

7. SPECIFICATIONS

Feature	Specification
Brand	Livoo
Model Number	DOM479
Color	Gray
Product Dimensions	24.5 x 17.5 x 11.5 cm
Capacity	300 Milliliters
Power / Wattage	1500 watts
Voltage	230 Volts
Item Weight	1.31 Kilograms
Heat Time	30 Seconds

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product packaging or visit the official Livoo website. Keep your purchase receipt as proof of purchase.

Manufacturer Contact: Please consult the product packaging or the official Livoo website for the most up-to-date contact information.

© 2024 Livoo. All rights reserved.

This manual is subject to change without notice.