

FLEXISPOT X1DG

FLEXISPOT Electric Recliner User Manual

Model: X1DG

1. INTRODUCTION

Thank you for choosing the FLEXISPOT Electric Recliner. This manual provides essential information for the safe and efficient use of your new recliner. Please read it thoroughly before assembly and operation, and keep it for future reference.



Image: The FLEXISPOT Electric Recliner in light grey, showcasing its comfortable design and the included remote control for adjustment.

2. SAFETY INSTRUCTIONS

- Ensure all components are securely fastened before use.
- Keep hands and feet clear of moving parts during adjustment.
- Do not allow children to play on or operate the recliner unsupervised.
- Do not exceed the maximum weight capacity of 140 kg (308 lbs).
- Unplug the recliner from the power outlet before cleaning or maintenance.

3. PACKAGE CONTENTS

Please verify that all parts are present before beginning assembly:

- Electric Recliner Base
- Backrest Section
- Seat Cushion
- Footrest Assembly
- Remote Control
- Power Adapter
- Hardware Kit (screws, bolts, tools if applicable)
- User Manual

4. SETUP AND ASSEMBLY

Assembly of your FLEXISPOT Electric Recliner is straightforward. Follow these general steps:

1. Unpack all components and lay them out on a clean, soft surface to prevent damage.
2. Attach the backrest section to the recliner base, ensuring it clicks securely into place.
3. Connect the power adapter to the recliner's power input and then to a suitable wall outlet.
4. Place the recliner in your desired location, ensuring there is adequate space for full reclining.

Dimensions

Compact & space-saving – easily fits in small rooms. With less than 1 m² footprint, perfect for apartments, bedrooms, or small living rooms.

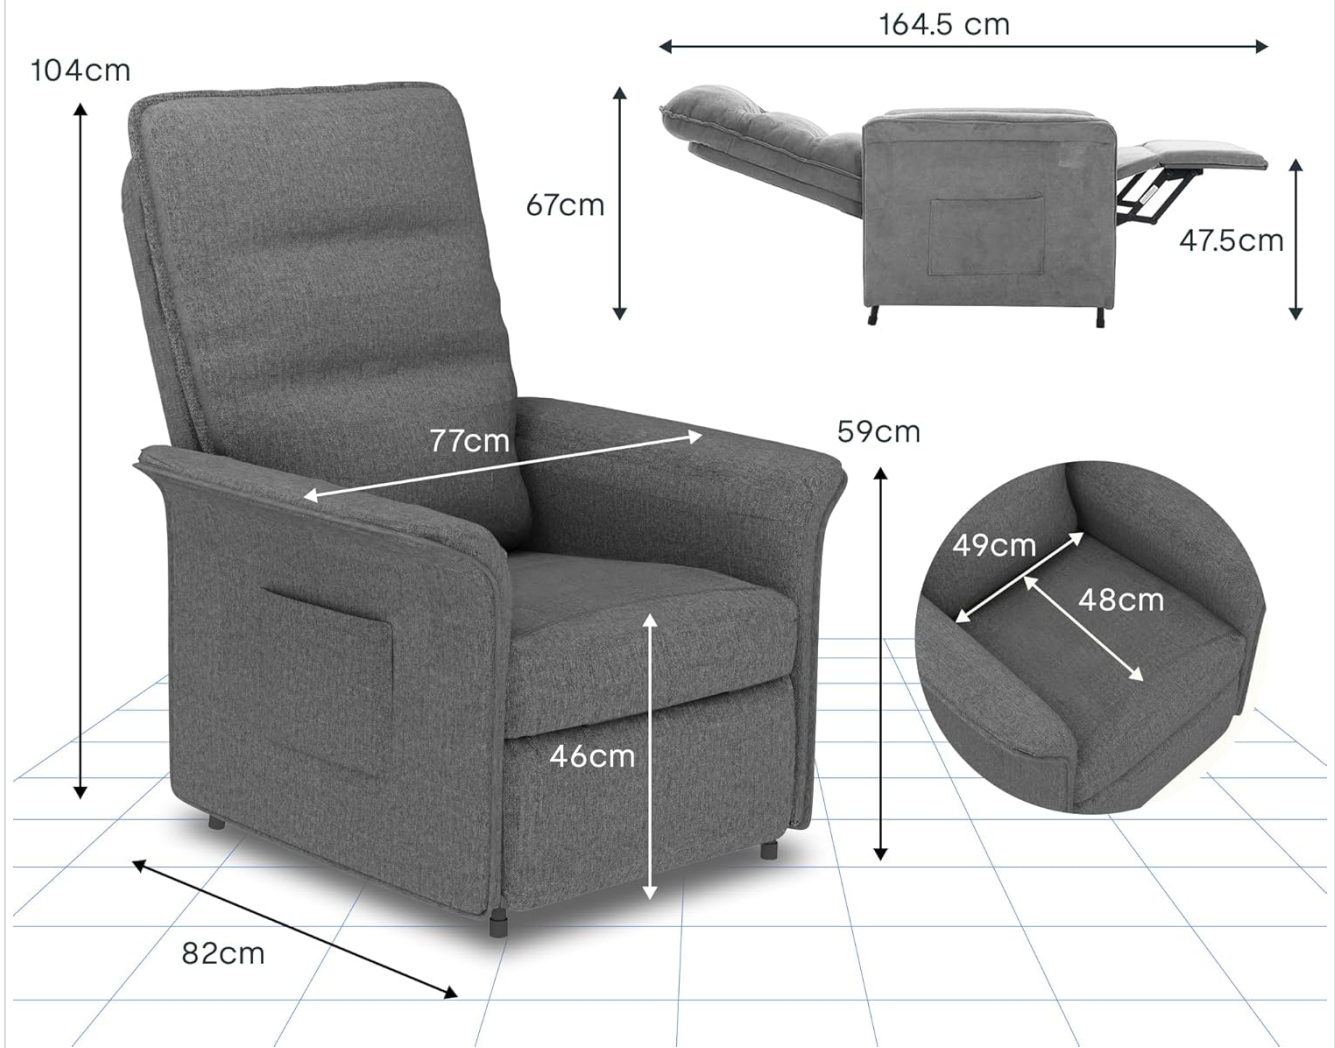


Image: Detailed dimensions of the recliner, showing its compact footprint and various measurements for placement consideration.

5. OPERATING INSTRUCTIONS

Your FLEXISPOT Electric Recliner features an easy-to-use remote control for seamless adjustment.

Reclining Function

The recliner offers a simultaneous reclining technique, allowing the backrest and footrest to adjust together. The reclining angle ranges from 105° (upright) to 155° (fully reclined).

To Recline: Press and hold the 'down' button on the remote control. The backrest will recline, and the footrest will extend simultaneously. Release the button when you reach your desired position.

To Return Upright: Press and hold the 'up' button on the remote control. The backrest will return to an upright position, and the footrest will retract. Release the button when you reach your desired position.

Adjustable Comfort

Electric recliner with 105°-155° tilt –
smoothly adjustable with the push of a button.



Nap Time



TV Time



Reading



Note: The backrest and footrest adjust
synchronously.

Image: Illustration demonstrating the adjustable comfort range of the recliner, from 105° to 155°, suitable for napping, watching TV, or reading.



Soft Padding



Sturdy Base



Smart Control



Handy Storage

Image: A person comfortably seated in the recliner, demonstrating the ease of use with the smart control remote and highlighting features like soft padding and handy storage pockets.

6. MAINTENANCE AND CARE

Proper maintenance will extend the life of your recliner. The flexible cotton-linen imitation fabric is designed to be soft, abrasion-resistant, breathable, and skin-friendly, making it easy to clean.

Cleaning Instructions:

- For general cleaning, gently vacuum the fabric to remove dust and debris.
- For spills, blot immediately with a clean, dry cloth. Do not rub.
- For stubborn stains, use a mild fabric cleaner specifically designed for upholstery. Test on an inconspicuous area first.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the fabric.

General Care:

- Keep the recliner away from direct sunlight and heat sources to prevent fading and material degradation.
- Regularly check all bolts and screws to ensure they remain tight. Tighten if necessary.
- Avoid placing sharp objects on the fabric to prevent tears or punctures.

7. TROUBLESHOOTING

If you encounter any issues with your FLEXISPOT Electric Recliner, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Recliner does not move	No power supply; Loose connection; Remote control issue.	Check if the power cord is securely plugged into the wall outlet and the recliner. Ensure the remote control batteries (if applicable) are working. Try a different power outlet.
Unusual noise during operation	Loose hardware; Obstruction in mechanism.	Inspect for any loose bolts or screws and tighten them. Check for any objects obstructing the reclining mechanism.
Recliner moves slowly or intermittently	Low power; Motor strain.	Ensure the power supply is stable. Avoid exceeding the weight capacity. Allow the motor to cool down if used continuously for an extended period.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Below are the technical specifications for the FLEXISPOT Electric Recliner:

Brand: FLEXISPOT

Model Number: X1DG

Color: Light Grey

Product Dimensions (Upright): Approximately 82 cm (L) x 77 cm (W) x 104 cm (H)

Item Weight: Approximately 24 Kilograms

Reclining Angle Range: 105° to 155°

Maximum Load Capacity: 140 KG (308 lbs)

Additional Features: Footrest, Ergonomic Design, High-Density Foam Cushion

Ergonomic Design

Comfortable, stable, and provides full-body support
Reduces fatigue and relieves stress

1 Head

2 Shoulders

3 Waist

4 Thighs

5 Calves

6 Ankles


 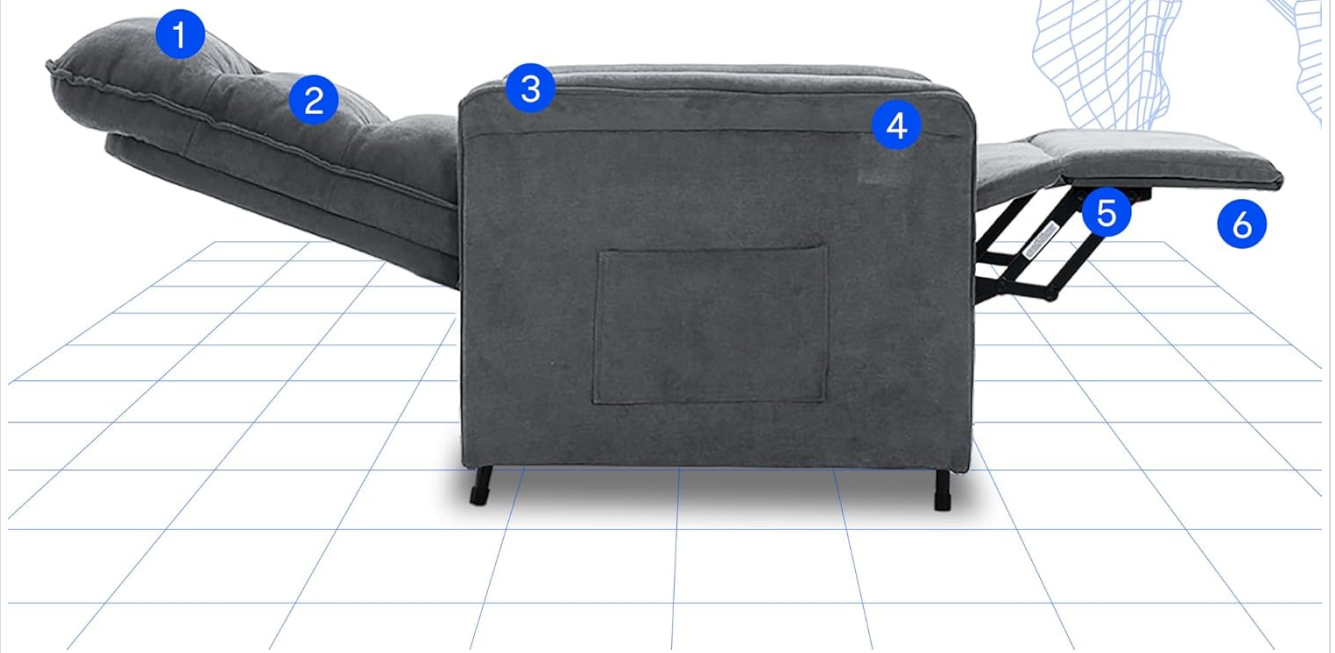


Image: A diagram illustrating the ergonomic design of the recliner, highlighting key support points for the head, shoulders, waist, thighs, calves, and ankles.

High-Density, Comfortable Foam Seat Cushion



Soft, durable, and
skin-friendly fabric



High resilience,
instantly rebounds
after pressure



Generous padding
for ultimate comfort

Image: A close-up view of the high-density, comfortable foam seat cushion, demonstrating its soft, durable, and skin-friendly fabric, high resilience, and generous padding.

9. WARRANTY INFORMATION

FLEXISPOT is committed to providing high-quality products. For specific warranty details regarding your Electric Recliner, please refer to the warranty card included with your purchase or visit the official FLEXISPOT website. Warranty terms typically cover manufacturing defects and material flaws under normal use.

10. CUSTOMER SUPPORT

Should you require further assistance, have questions about your recliner, or need to report an issue, please contact FLEXISPOT customer support. You can typically find contact information on the manufacturer's website or through the retailer where you purchased the product.

For more information and to explore other FLEXISPOT products, visit the official [FLEXISPOT Store](#).

