

Lenco TCD-2571

Lenco TCD-2571 Multifunction Music System User Manual

Your comprehensive guide to setting up, operating, and maintaining your Lenco TCD-2571.



IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before operating the unit and retain them for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- Do not expose this appliance to dripping or splashing water.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

PACKAGE CONTENTS

Ensure all items are present and in good condition upon unpacking:

- Lenco TCD-2571 Multifunction Music System
- Dust Cover
- 45 RPM Adapter
- Power Cable

- Remote Control (with 2 AAA batteries included)
- User Manual (this document)

PRODUCT OVERVIEW

The Lenco TCD-2571 is a versatile music system designed to play various audio formats, combining vintage aesthetics with modern functionality. It features a 3-speed belt-drive turntable, Bluetooth 5.0 connectivity, DAB+ radio, a CD player, a cassette recorder, and USB playback/recording capabilities.



Figure 1: Front view of the Lenco TCD-2571.

The unit is housed in an elegant engineered wood cabinet, providing a classic look that complements any interior. It includes integrated speakers for a complete audio experience.

SETUP

1. Unpacking and Placement

- Carefully remove the unit from its packaging.
- Place the unit on a stable, flat surface away from direct sunlight, heat sources, and excessive dust or moisture.
- Ensure adequate ventilation around the unit.

2. Power Connection

- Connect the supplied power cable to the AC IN socket on the rear of the unit.
- Plug the other end of the power cable into a suitable wall outlet (AC 230V ~ 50Hz).



Figure 2: Rear panel connections.

3. Initial Setup

- Install the dust cover by aligning its hinges with the slots on the back of the unit.
- Extend the FM antenna for optimal radio reception.
- Insert the included AAA batteries into the remote control, observing polarity.

OPERATING INSTRUCTIONS

1. Turntable Operation

- Lift the dust cover.
- Place a record on the turntable platter. Use the 45 RPM adapter for singles if needed.
- Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch.
- Release the tone arm lock and gently lift the tone arm.
- Position the stylus over the desired track on the record and slowly lower the tone arm.
- The record will begin playing. Adjust the volume using the VOLUME knob.
- To stop playback, lift the tone arm and return it to its rest.



Figure 3: Turntable ready for playback.

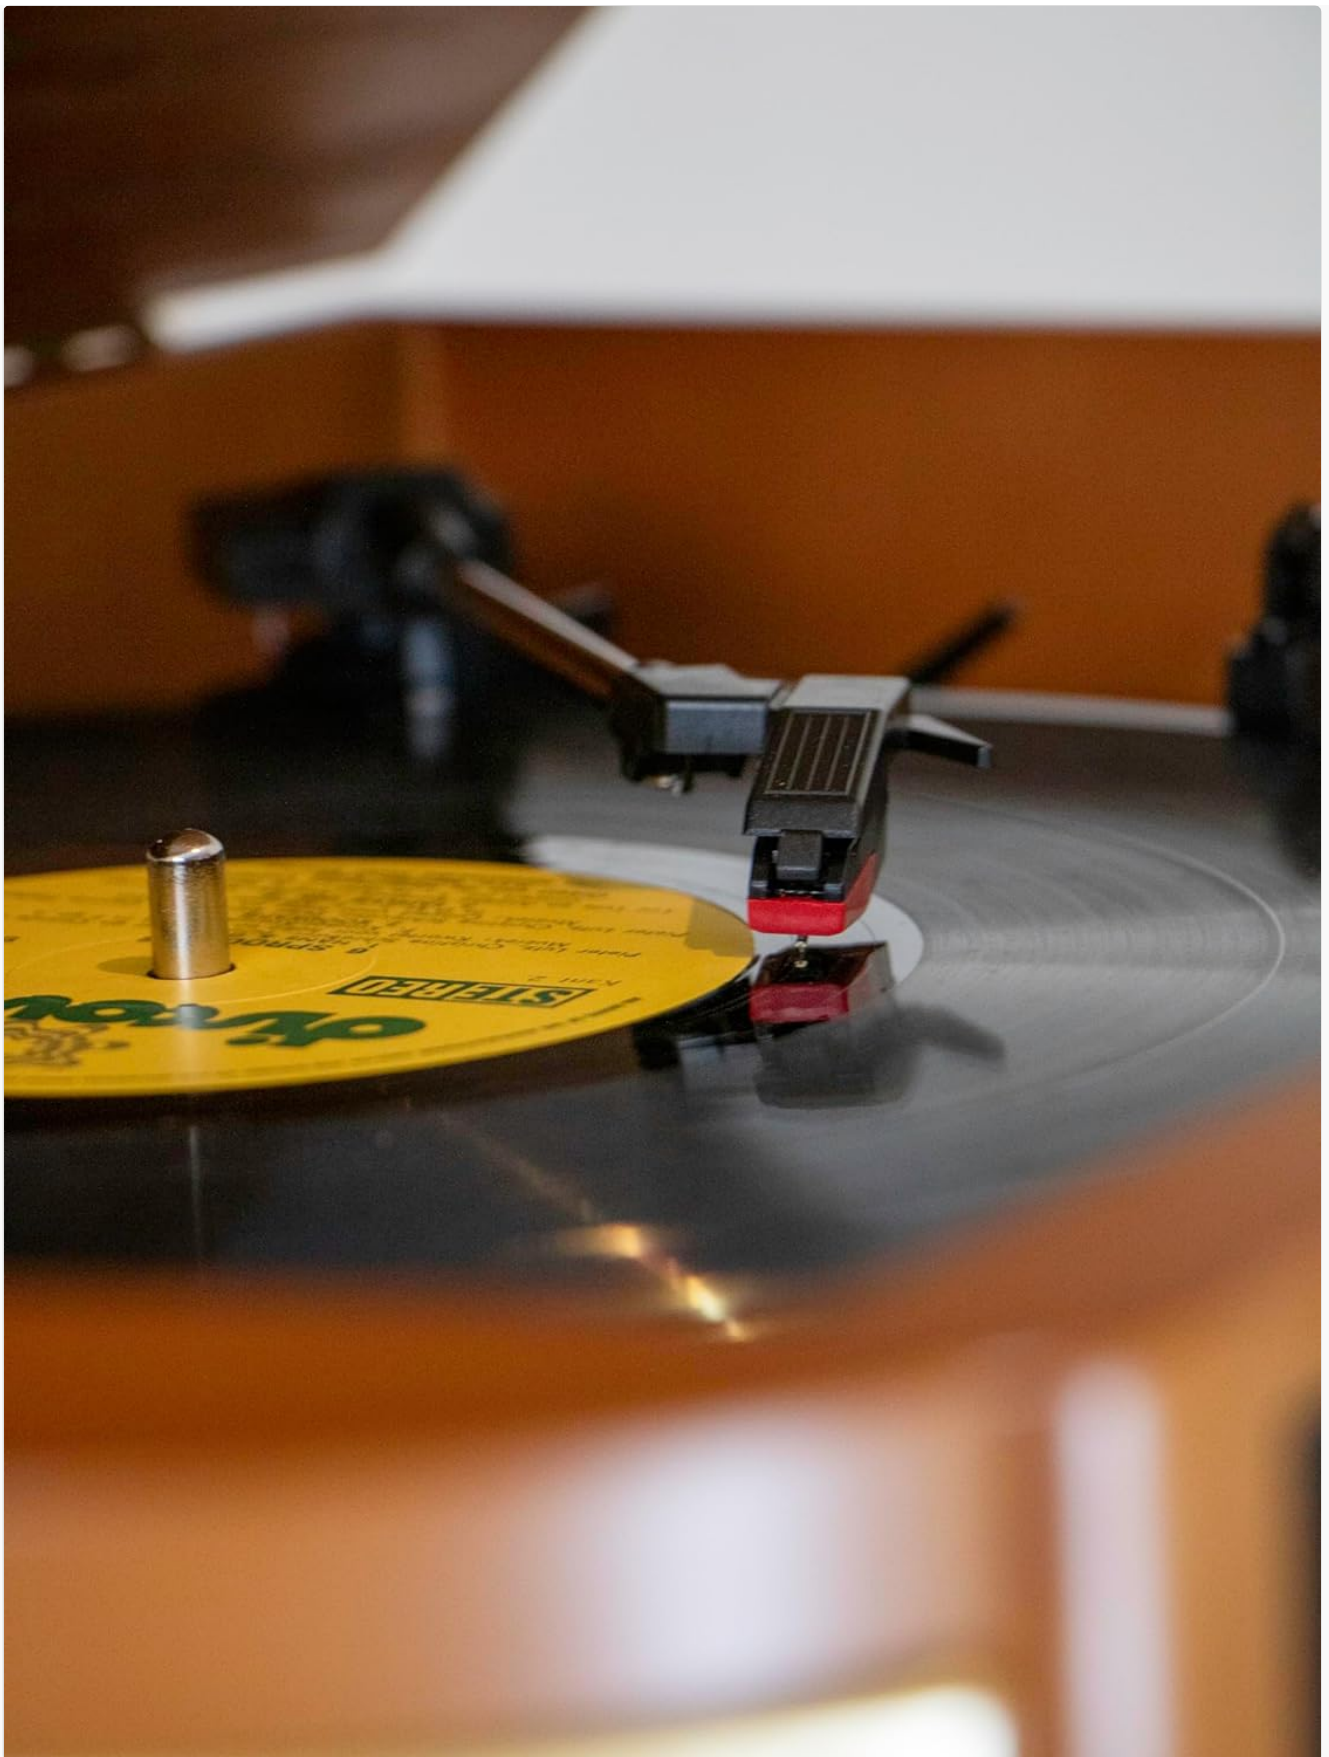


Figure 4: Stylus on record.

2. Bluetooth Connectivity

- Press the FUNCTION button to select Bluetooth mode. The display will show "Bluetooth".
- On your mobile device (smartphone, tablet), enable Bluetooth and search for available devices.
- Select "Lenco TCD-2571" from the list. Once paired, you will hear a confirmation sound.

- You can now stream audio from your device to the music system.

3. DAB+ Radio

- Press the FUNCTION button to select DAB+ mode.
- The system will automatically scan for available DAB+ stations.
- Use the TUNING/PLAY MODE knob or the PRESET buttons on the remote to navigate through stations.
- To save a station as a preset, press and hold the PRESET button until the display shows "Preset Store". Use the TUNING knob to select a preset number, then press ENTER.

4. CD Player

- Press the FUNCTION button to select CD mode.
- Press the OPEN/CLOSE button to open the CD tray.
- Place a CD with the label side facing up into the tray.
- Press the OPEN/CLOSE button again to close the tray. The CD will load and begin playing automatically.
- Use the PLAY/PAUSE, STOP, SKIP FORWARD, and SKIP BACKWARD buttons for playback control.



Figure 5: Inserting a CD.

5. Cassette Recorder

- Insert a cassette tape into the cassette deck on the side of the unit.
- Press the PLAY button to start playback.
- Use the FAST FORWARD and REWIND buttons to navigate the tape.

- Press the STOP button to stop playback.



Figure 6: Cassette deck.

6. USB Playback and Recording

- Insert a USB flash drive into the USB port on the front panel.
- Press the FUNCTION button to select USB mode.
- The system will automatically detect and play compatible audio files (e.g., MP3).
- To record from vinyl, CD, or cassette to USB, ensure the USB drive is inserted and the desired source is playing. Press the RECORD button. Press RECORD again to stop.



Figure 7: USB and AUX inputs.

7. Remote Control

- The included remote control provides convenient access to all functions from a distance.
- Ensure there are no obstructions between the remote control and the unit's IR sensor.
- Replace batteries when the remote's range decreases.



Figure 8: Remote control for the TCD-2571.

MAINTENANCE

- **Cleaning the Unit:** Use a soft, dry cloth to wipe the exterior of the unit. Do not use abrasive cleaners or solvents.
- **Dust Cover:** Regularly wipe the dust cover with a soft, damp cloth to keep it clean and prevent scratches.
- **Stylus Care:** The stylus (needle) is delicate. Clean it gently with a soft brush designed for stylus cleaning, brushing from back to front. Replace the stylus if sound quality deteriorates or if it appears damaged.
- **CD/Cassette Player:** Avoid touching the lens of the CD player. For the cassette deck, periodically clean the tape heads with a cotton swab lightly dampened with isopropyl alcohol.

TROUBLESHOOTING

If you encounter issues with your Lenco TCD-2571, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active	Ensure power cord is securely plugged in; Try a different outlet.
No sound from speakers	Volume too low; Incorrect function selected; Mute activated	Increase volume; Press FUNCTION to select correct source; Check if mute is on.
Turntable speed incorrect	Wrong speed selected	Adjust the speed selector switch to match the record's RPM (33, 45, or 78).
Bluetooth pairing fails	Device too far; Bluetooth not enabled on device; Unit not in pairing mode	Move device closer; Enable Bluetooth on your device; Ensure unit is in Bluetooth mode.
CD not playing	CD inserted incorrectly; CD is dirty or scratched; Disc format not supported	Reinsert CD correctly; Clean CD with a soft cloth; Ensure it's an audio CD.
Poor radio reception	Antenna not extended; Weak signal	Fully extend the FM antenna; Reposition the unit for better signal.

SPECIFICATIONS

Key technical specifications for the Lenco TCD-2571:

Feature	Detail
Model Name	TCD-2571
Brand	Lenco
Dimensions (L x W x H)	56.2 x 40 x 30.1 cm
Weight	9.3 kg
Power Supply	AC 230V ~ 50Hz
Turntable Speeds	33, 45, 78 RPM
Drive Type	Belt Drive
Bluetooth Version	5.0
Radio Tuner	DAB+, FM
CD Player	Yes
Cassette Player/Recorder	Yes
USB Port	Yes (for playback and MP3 recording)

Feature	Detail
Speakers	2 x 5 Watt RMS integrated speakers
Additional Features	AUX Input, Headphone Output, Remote Control
Material	Engineered Wood

Warranty Information

Lenco products are manufactured to high quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please retain your proof of purchase for warranty claims.

For detailed warranty information, please refer to the warranty card included with your product or visit the official Lenco website.

Customer Support

Should you require further assistance or have questions not covered in this manual, please contact Lenco customer support.


- Online Support:** Visit the official Lenco website for FAQs, product registration, and support contact information.
- Service Centers:** Information on authorized service centers can be found on the Lenco website.

When contacting support, please have your product model number (TCD-2571) and purchase details ready.



© 2024 Lenco. All rights reserved.

Related Documents - TCD-2571

<div><p>Model: TCD-2551</p></div> <div><p>Lenco TCD-2551 User Manual: Your Guide to a Classic Sound Experience</p><p>Discover the Lenco TCD-2551, a versatile wooden turntable with Bluetooth, USB encoding, AM/FM radio, CD, and cassette player. This user manual provides comprehensive instructions for setup, operation, and maintenance.</p></div>	
--	--

 


[Lenco TCD-2550 User Manual: Turntable, Radio, CD, Cassette Player](#)

Comprehensive user manual for the Lenco TCD-2550, a wooden turntable with USB encoding, AM/FM radio, CD player, and cassette player. Includes setup, operation, safety precautions, and specifications.

Lenco

Model: L-3808



Lenco L-3808 Direct Drive Turntable with USB Recording User Manual

Comprehensive user manual for the Lenco L-3808 direct drive turntable. Learn about setup, operation, features like USB recording, safety precautions, and maintenance for your Lenco turntable.

Lenco

Lenco LSA-071



[Lenco LSA-071 User Manual: Fully Automatic Vertical Turntable](#)

Explore the Lenco LSA-071, a fully automatic vertical turntable, offering a unique way to enjoy vinyl. This comprehensive user manual provides essential safety instructions, setup guides, operational details, troubleshooting tips, and technical specifications in multiple languages.

Lenco

Model: L-455



[Lenco L-455 User Manual: Audiophile Belt Drive Turntable](#)

Comprehensive user manual for the Lenco L-455 audiophile belt drive turntable, covering setup, operation, safety precautions, maintenance, and troubleshooting. Available in multiple languages.

Lenco



[Lenco L-3808 User Manual: Direct Drive Turntable with USB Recording](#)

This user manual provides comprehensive instructions for the Lenco L-3808 Direct Drive Turntable, covering setup, operation, safety guidelines, and USB recording features with Audacity software.