

DEMULLER ANHUI-BCD001

DEMULLER 100L Retro Mini Fridge User Manual

Model: ANHUI-BCD001

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the DEMULLER 100L Retro Mini Fridge. This compact refrigerator with a separate freezer compartment is designed for convenience and efficiency in small spaces. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.

Key features include a 3.5 cubic feet total capacity, dual doors for separate freezer and refrigerator access, a 7-level adjustable thermostat, an interior LED light, and a quiet, energy-efficient R600a compressor.



Image: Overview of the DEMULLER Retro Mini Fridge highlighting its 3.5 cu.ft capacity, double doors, 7-temperature adjustment, and 2 adjustable feet.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Ensure the appliance is properly grounded.

- Do not use extension cords or ungrounded adapters.
- Unplug the refrigerator before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance uses R600a refrigerant, which is flammable. Handle with care during transportation and installation to avoid damage to the refrigerant circuit.
- Do not damage the refrigerant circuit.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x DEMULLER Mini Refrigerator
- 1 x Removable Crisper Drawer
- 2 x Storage Shelves (Glass)
- 1 x User Manual



PACKAGE INCLUDE

MEET YOUR IDEAL MINI TWO-DOOR REFRIGERATOR



1* Refrigerator



1* Removable Drawe



2* Storage Shelves



1* User Manual



365*Online Service

Image: Visual representation of the package contents, including the refrigerator, removable drawer, storage shelves, user manual, and 365-day online service information.

4. SETUP AND INSTALLATION

4.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the refrigerator for any damage during transit. Keep packaging materials until you are satisfied with the product.

4.2 Placement

- Place the refrigerator on a flat, stable surface.
- Allow at least 4 inches (10 cm) of space around the back and sides for proper air circulation.
- Avoid direct sunlight or heat sources (e.g., stove, heater).
- The appliance is designed for freestanding installation only.

4.3 Leveling

The refrigerator features adjustable feet at the bottom. Rotate the feet to level the appliance, ensuring stability and proper door sealing.



**7 TEMP CONTROL
WITH LED LIGHTS**



**TWO RETRO
HANDLES**



**MUTE METAL
HINGE**



**BOTTOM
ADJUSTABLE FEET**



Image: Close-up views of the refrigerator's features, including the 7-level temperature control, retro handles, mute metal hinge, and bottom adjustable feet.

4.4 Power Connection

Plug the refrigerator into a dedicated, grounded 110V AC outlet. Allow the appliance to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

4.5 Initial Startup

After plugging in, set the thermostat to a medium setting (e.g., '4'). Allow the refrigerator to cool for several hours before placing food inside.

COMPACT SIZE & SPACE-SAVING

Perfect size for home, office, dorm



Image: The DEMULLER mini fridge with its dimensions: 17.72 inches (width), 18.2 inches (depth), and 35.63 inches (height).

5. OPERATING INSTRUCTIONS

5.1 Temperature Control

The refrigerator features a 7-level adjustable thermostat located inside the fresh food compartment. Turn the dial to adjust the temperature. Higher numbers indicate colder settings.

- **Freezer Temperature Range:** -4°F to 32°F (-20°C to 0°C)
- **Refrigerator Temperature Range:** 32°F to 50°F (0°C to 10°C)

For optimal performance, start with a medium setting and adjust as needed based on ambient temperature and food load.

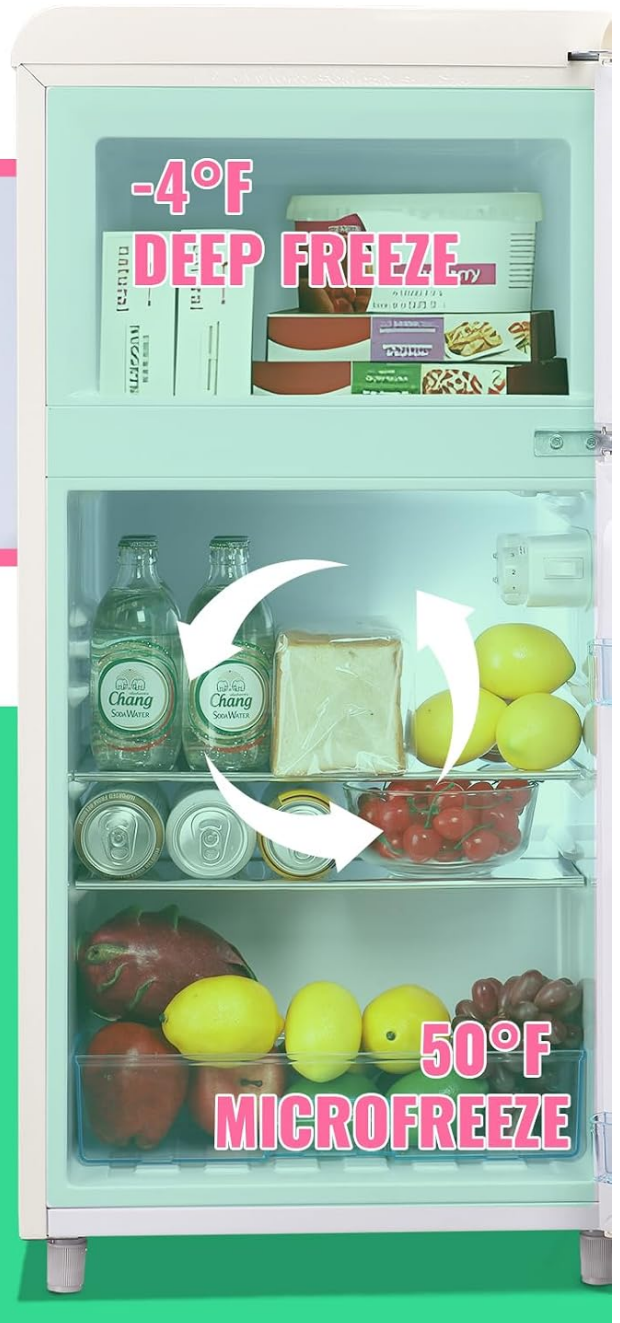
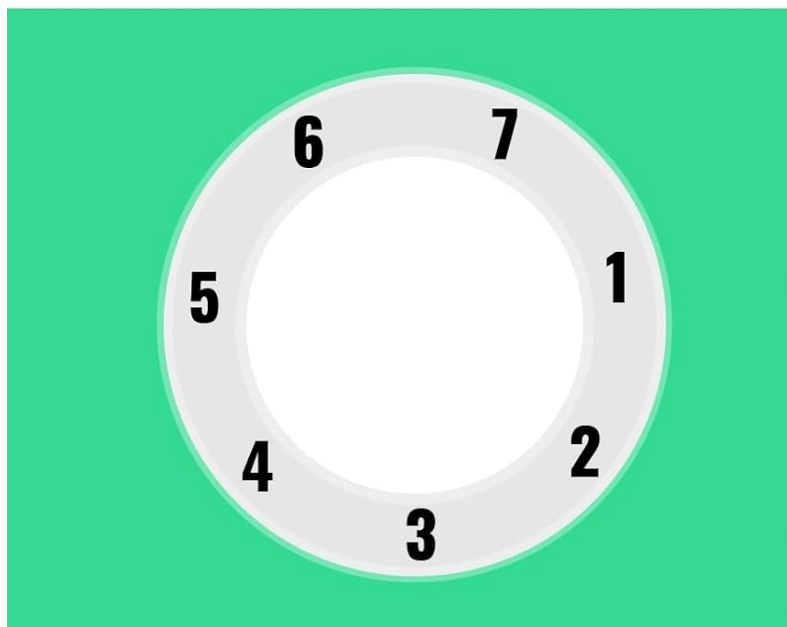


Image: Close-up of the 7-level thermostat control dial, showing settings from 'OFF' to '7'.

5.2 Food Storage Guidelines

The refrigerator has a total capacity of 3.5 cubic feet, with a 1.0 cubic feet freezer and a 2.5 cubic feet refrigerator section.

**3.5
CU.FT**

CAPACITY FOR 2-4 PERSONS



FREEZER

TEMP RANGE: -4-32°F



REFRIGERATOR

TEMP RANGE: 32-50°F



Image: Internal view of the refrigerator showing the 1.0 cu.ft freezer section (top) with a temperature range of -4°F to 32°F, and the 2.5 cu.ft refrigerator section (bottom) with a temperature range of 32°F to 50°F.

Freezer Section (1.0 CU.FT)

Suitable for storing frozen foods such as meat, fish, ice cream, and other items requiring freezing temperatures.



Image: Examples of items that can be stored in the freezer section, including fish, meat, ice cream, and frozen vegetables.

Refrigerator Section (2.5 CU.FT)

Ideal for fresh foods, beverages, fruits, and vegetables. The crisper drawer helps maintain humidity for produce.

MORE FOOD STORAGE OPTIONS ABOUT THE REFRIGERATOR SECTION



Image: Examples of items that can be stored in the refrigerator section, such as fruits, vegetables, cakes, and beverages.

5.3 Removable Shelves and Crisper Drawer

The glass storage shelves and crisper drawer can be removed for cleaning or to accommodate larger items. To remove, gently lift and pull out.

Your browser does not support the video tag.

Video: A demonstration of the Cream Mini Fridge's retro and compact design, showcasing its interior and features.

Your browser does not support the video tag.

Video: A user demonstrating the features and capacity of their retro dorm fridge from DEMULLER.

6. MAINTENANCE AND CLEANING

6.1 Defrosting

This appliance features a manual defrost system. Frost will accumulate on the freezer walls. When the frost layer becomes about 0.2 inches (5 mm) thick, defrost the freezer compartment.

1. Turn the thermostat to 'OFF' and unplug the refrigerator.
2. Remove all food items from both compartments and store them in a cooler.
3. Leave the doors open to allow frost to melt. Place towels at the bottom to absorb water.
4. Once defrosted, clean and dry the interior thoroughly.
5. Plug the refrigerator back in and return the thermostat to the desired setting after it has cooled down.

6.2 Cleaning

- **Interior:** Clean the interior with a mild detergent and warm water solution. Rinse and dry thoroughly. Do not use abrasive cleaners or sharp objects.
- **Exterior:** Wipe the exterior with a soft cloth and mild detergent.
- **Door Gaskets:** Clean door gaskets regularly to ensure a tight seal.

7. TROUBLESHOOTING

Before contacting support, review the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; thermostat set to 'OFF'.	Check power connection; reset circuit breaker; adjust thermostat.
Temperature is not cold enough.	Thermostat setting too warm; door opened too frequently; warm food placed inside; poor ventilation.	Adjust thermostat to a colder setting; minimize door openings; allow hot food to cool before storing; ensure adequate clearance around the unit.
Excessive noise.	Refrigerator not level; items vibrating inside; compressor noise.	Adjust leveling feet; rearrange items; compressor noise is normal during operation.
Water on floor.	Drain tube clogged or dislodged; excessive humidity.	Check and clear drain tube; ensure proper door sealing.

The DEMULLER mini fridge is equipped with an advanced R600a compressor designed for quiet and efficient operation.



Image: Diagram illustrating the energy-saving and low-noise design of the refrigerator, highlighting the R600 compressor and insulation layers.

8. SPECIFICATIONS

Feature	Specification
Model Number	ANHUI-BCD001
Product Dimensions (D x W x H)	17.72" x 18.2" x 35.63"
Total Capacity	3.5 Cubic Feet
Freezer Capacity	1.0 Cubic Feet
Refrigerator Net Capacity	2.5 Cubic Feet
Voltage	110 Volts
Defrost System	Manual Defrost
Refrigerant	R-600A
Number of Doors	2
Shelf Type	Glass
Item Weight	48.5 Pounds
Color	Cream

9. WARRANTY AND SUPPORT

DEMULLER provides a one-year warranty for all parts of the machine, effective from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical assistance or warranty inquiries, please refer to the contact information provided with your product packaging or visit the official DEMULLER website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKMRBVDF>

More documents and user manuals: <https://manuals.plus/>