

[Manuals.plus](#) /

› [TISHLED](#) /

› TISHLED V20 Typewriter Style Mechanical Gaming Keyboard User Manual

TISHLED V20


TISHLED V20 Typewriter Style Mechanical Gaming Keyboard User Manual

Model: V20

INTRODUCTION

This manual provides instructions for the TISHLED V20 Typewriter Style Mechanical Gaming Keyboard. Please read this manual carefully before using the product to ensure proper operation and longevity.

V20 Wired Retro Typewriter Style Mechanical Keyboard



Please note: It's not wireless. The detachable usb cable is just for convenient storage and replacement.

Image: The TISHLED V20 Typewriter Style Mechanical Gaming Keyboard, featuring retro round keycaps and a Matcha Green finish.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x TISHLED V20 Wired Mechanical Keyboard
- 1 x USB-C Detachable Cable

Your browser does not support the video tag.

Video: An unboxing demonstration of the V20 keyboard, showing the contents of the package.

SETUP

Follow these steps to set up your TISHLED V20 keyboard:

1. Unpack the keyboard and the USB-C cable from the box.
2. Connect the USB-C end of the cable to the port on the keyboard.
3. Connect the USB-A end of the cable to an available USB port on your computer (PC, Laptop, iMac) or gaming console.

4. The keyboard will be automatically recognized by your operating system. No additional drivers are typically required.




Image: A close-up view of the keyboard's USB-C port with the detachable cable connected, highlighting the wired connection.

OPERATING INSTRUCTIONS

Basic Functions

The TISHLED V20 is a full-size 104-key mechanical keyboard. It features N-Key Rollover (NKRO) and anti-ghosting, ensuring that every keystroke is registered accurately, even during rapid typing or intense gaming sessions.

LED Backlight Control

The keyboard features white LED backlighting with multiple effects:

- **Change Lighting Effects:** Press **Fn** + **Ins** to cycle through 19 different lighting effects.
- **Game Backlight Modes:** Press **Fn** + **1** through **8** to select specific game backlight modes.
- **Adjust Brightness:** Press **Fn** + **Up Arrow** / **Down Arrow** to adjust the backlight brightness (5 levels).
The backlight can be turned off at the lowest setting.

- **Adjust Speed:** Press **Fn** + **Left Arrow** / **Right Arrow** to adjust the speed of dynamic lighting effects.




Image: A detailed view of the keyboard's elegant white LED backlighting, illuminating the round keycaps.

Your browser does not support the video tag.

Video: A demonstration of the keyboard's appearance, various lighting effects, and key features.

Volume Knob and Multimedia Keys

The keyboard includes a dedicated volume knob and three multimedia buttons for convenient control:

- **Volume Knob:** Rotate to adjust the system volume.
- **Multimedia Buttons:** Use the dedicated buttons for media playback control (e.g., Play/Pause, Next Track, Previous Track).

Volume Knob & Multimedia Buttons

Humanized Design and More Convenient



Image: A close-up of the keyboard's golden ring volume knob and adjacent multimedia control buttons.

Mechanical Switches

The V20 keyboard is equipped with custom pink mechanical switches. These switches offer a smooth linear feeling with minimal resistance, providing fast action without a tactile bump. The sound produced during light presses is quiet.

Smooth Pink Switches & NKRO

All 104 Keys Anti-Ghosting
Minimal Resistance, Linear Feeling, Fast Response



Image: An exploded view illustrating the internal components of the smooth pink mechanical switches and the NKRO functionality.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your keyboard:

- **Cleaning:** Regularly clean the keycaps and the keyboard surface with a soft, dry cloth. For deeper cleaning, you may use a slightly damp cloth with mild soap, ensuring no liquid enters the keyboard.
- **Dust Removal:** Use compressed air to remove dust and debris from between the keycaps and switches.
- **Avoid Liquids:** Do not spill liquids on the keyboard. If a spill occurs, immediately disconnect the keyboard and allow it to dry completely before reconnecting.
- **Storage:** Store the keyboard in a clean, dry environment away from extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your keyboard, refer to the following common problems and solutions:

Problem	Solution
---------	----------

Problem	Solution
Keyboard is not responding.	<ul style="list-style-type: none"> • Ensure the USB-C cable is securely connected to both the keyboard and the computer. • Try connecting the keyboard to a different USB port on your computer. • Test the keyboard on another computer to rule out system-specific issues.
Keys are not registering or are repeating characters.	<ul style="list-style-type: none"> • Clean around the affected keycaps to ensure no debris is obstructing the switch. • Ensure the keyboard is connected directly to the computer and not through a faulty USB hub. • If the issue persists, contact customer support.
Backlight is not working or is dim.	<ul style="list-style-type: none"> • Adjust the brightness using Fn + Up Arrow. • Cycle through lighting effects using Fn + Ins. • Ensure the keyboard is receiving sufficient power from the USB port.

SPECIFICATIONS

Feature	Detail
Model Number	V20
Brand	TISHLED
Keyboard Type	Mechanical
Number of Keys	104
Switch Type	Linear (Pink Switches)
Connectivity	Wired USB-C (Detachable)
Backlighting	White LED, Single Color, 19 effects
Special Features	Ergonomic, Round Keycaps, Volume Roller, Multimedia Buttons, Anti-Ghosting
Compatible Devices	Gaming Console, Laptop, PC, iMac
Product Dimensions	44.2L x 14.2W x 3H Centimetres
Item Weight	1.8 Pounds (816.47 g)
Enclosure Material	Aluminum

Feature	Detail
Keyboard Plate Material	Aluminum

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact TISHLED customer service directly. Keep your purchase receipt for warranty claims.