

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [CANEOE](#) /
- › CANEOE LED Ceiling Light Fixture User Manual

CANEOE GDD-SF-N

CANEOE LED Ceiling Light Fixture User Manual

Model: GDD-SF-N

INTRODUCTION

Thank you for choosing the CANEOE LED Ceiling Light Fixture. This modern and energy-efficient lighting solution is designed to provide bright, neutral light (4500K) for various indoor spaces. Please read this manual carefully before installation and use to ensure proper operation and safety.



Figure 1: CANEOE Black Square LED Ceiling Light Fixture.

SPECIFICATIONS

Feature	Detail
Brand	CANEOE
Model Name	LED Ceiling Light
Part Number	GDD-SF-N
Color	Black, 4500K
Material	Acrylic, Aluminum, Silicone (Shade)
Product Dimensions	15.75"L x 9.8"W x 4.3"H (40cm x 25cm x 11cm)

Light Source Type	LED
Color Temperature	4500 Kelvin (Neutral Light)
Power	25W
Lumen	2000LM
Voltage	110 Volts
Installation Type	Semi Flush Mount
Special Feature	Energy Efficient
Included Components	Mounting Hardware



Figure 2: Product Dimensions and Materials.

SETUP AND INSTALLATION

The internal wiring of the light fixture has been completed. Follow these steps for installation:

1. **Safety First:** Before beginning installation, ensure the power supply to the circuit you are working on is turned off at the circuit breaker or fuse box.
2. **Unpack:** Carefully remove all components from the packaging. Verify that all included components, especially the mounting hardware, are present.
3. **Assemble (if necessary):** The lamp body may require splicing or minor assembly. Follow the specific instructions provided in the packaging for connecting the lamp body components.
4. **Mounting:** Securely fix the light fixture's mounting plate to the ceiling using the provided mounting hardware. Ensure it is firmly attached to a joist or suitable electrical box.
5. **Wiring:** Connect the household electrical wires to the fixture's wires according to local electrical codes. Typically, this involves connecting live to live, neutral to neutral, and ground to ground. Use wire nuts to secure connections.
6. **Attach Fixture:** Once wiring is complete, carefully attach the main body of the light fixture to the mounting plate on the ceiling. Ensure all connections are tucked safely inside the electrical box.
7. **Test:** Restore power at the circuit breaker. Turn on the light switch to test the fixture.

Warning: For your safety, it is recommended that installation be performed by a qualified electrician if you are not familiar with electrical wiring.

OPERATING INSTRUCTIONS

The CANEOE LED Ceiling Light Fixture is designed for simple operation via a standard wall switch.

- **Turning On/Off:** Use your existing wall switch to turn the light fixture on or off.
- **Light Quality:** The fixture provides 4500K neutral light, which is suitable for various environments such as bathrooms, bedrooms, kitchens, balconies, stairs, and hallways.
- **Energy Efficiency:** This fixture utilizes a built-in LED chip light source, offering high brightness with low power consumption, contributing to energy savings.



Figure 3: Light Fixture On and Off States.

MAINTENANCE

To ensure the longevity and optimal performance of your CANEOE LED Ceiling Light Fixture, follow these simple maintenance guidelines:

- **Cleaning:** Before cleaning, ensure the power to the fixture is turned off. Use a soft, dry cloth to wipe down the fixture. For stubborn dirt, a slightly damp cloth can be used, but avoid abrasive cleaners or solvents that could damage the finish or acrylic.
- **No Bulb Replacement:** This fixture uses integrated LED technology, meaning there are no bulbs to replace. The LED chip light source has a long lifespan of up to 50,000 hours.
- **Regular Inspection:** Periodically check the fixture for any loose connections or signs of wear. If any issues are found, turn off the power and consult a qualified electrician.

TROUBLESHOOTING

If you encounter any issues with your CANEOE LED Ceiling Light Fixture, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none">• No power to the fixture.• Loose wiring connection.• Faulty wall switch.	<ul style="list-style-type: none">• Check circuit breaker/fuse.• Ensure all wire connections are secure (power off first).• Test or replace the wall switch.
Light flickers or dims.	<ul style="list-style-type: none">• Loose wiring.• Incompatible dimmer switch (if applicable).• Power fluctuations.	<ul style="list-style-type: none">• Check and secure all wiring connections (power off first).• Ensure dimmer switch is LED compatible.• Consult an electrician if power fluctuations persist.
Light is not as bright as expected.	<ul style="list-style-type: none">• Dust accumulation on the fixture.• Incorrect voltage supply.	<ul style="list-style-type: none">• Clean the fixture with a soft cloth (power off first).• Verify voltage supply matches specifications.

If the problem persists after trying these solutions, please contact customer support.



Figure 4: Flicker-Free Lighting for Eye Comfort.

WARRANTY INFORMATION

The CANEOE LED Ceiling Light Fixture comes with a **Lifetime Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the product packaging or contact CANEOE customer support.

CUSTOMER SUPPORT

Your satisfaction is extremely important to us. If you have any questions, comments, or require assistance with your CANEOE LED Ceiling Light Fixture, please do not hesitate to contact our customer service team.

We are committed to providing a quick response and friendly customer service to address all your needs.

Contact Information:

Website: [Visit the CANEOE Store on Amazon](#)

Email: [Please refer to product packaging for specific email or contact form]

Phone: [Please refer to product packaging for specific phone number]