

[Manuals.plus](#) /

> [AIDITIYMI](#) /

> Instruction Manual for AIDITIYMI RC-518M Replacement Remote Control Compatible with Onkyo AV Receiver

## AIDITIYMI ADSUNCTY-RC-518M-GAIX

# Instruction Manual for AIDITIYMI RC-518M Replacement Remote Control

Model: ADSUNCTY-RC-518M-GAIX

## INTRODUCTION

This manual provides comprehensive instructions for the AIDITIYMI RC-518M Replacement Remote Control, designed for use with various Onkyo AV Receiver models. This remote is a direct replacement and requires no programming or pairing. Simply install batteries, and it is ready for operation.

## SETUP

### 1. Battery Installation

The RC-518M remote control operates on two (2) AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 1: Battery compartment of the RC-518M remote control.

## 2. Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Point the remote directly at your Onkyo AV Receiver and begin operation.

## OPERATING INSTRUCTIONS

The RC-518M remote control provides full functionality for compatible Onkyo AV Receivers. Ensure a clear line of sight between the remote's infrared (IR) emitter and the receiver's IR sensor.





Figure 2: Front view of the RC-518M remote control.

### Compatible Onkyo AV Receiver Models:

- HT-R410, HT-R420, HT-R500, HT-R510, HT-R650
- HT-S65, HT-S650, HT-S653DV, HT-S655DVC, HT5760
- HT-S660, HT-S660S, HT-S667C, HT-S670, HT-S670S, HT-S760, HT-S760S, HT-S767S
- TX-NR5007, TX-NR501, TX-NR901
- TX-SR201, TX-SR500, TX-SR501, TX-SR501E, TX-SR501S, TX-SR502, XNR3007
- HTR410, HTR420, HTR500, HTR510, HTR650, HTS65, HTS650, HTS653DV, HTS655DVC
- HTS660, HTS660S, HTS667C, HTS670, HTS670S, HTS760, HTS760S, HTS767S
- TXNR5007, TXNR501, TXNR901, TXSR201, TXSR500, TXSR501, TXSR501E, TXSR501S, TXSR502

### Key Functions:

- **STANDBY/ON:** Powers the AV Receiver on or off.
- **TV/VCR/CABLE/SAT/CD/DVD:** Selects the input source.
- **DSP/SLEEP/DIMMER:** Controls various audio processing, sleep timer, and display brightness functions.
- **AUDIO SEL:** Cycles through audio input options.
- **TOP MENU/MENU/RETURN/EXIT:** Navigates through receiver menus.
- **VOLUME +/-:** Adjusts the master volume level.
- **CH SEL/LEVEL:** Selects channels or adjusts individual speaker levels.
- **MUTING:** Mutes or unmutes the audio output.
- **VIDEO1/VIDEO2/VIDEO3/DVD/CD/TAPE/TUNER:** Direct input selection buttons.
- **RCVR/TAPE/AUDIO SEL/PRESET:** Additional input and function controls.
- **DIRECT/STEREO/SURROUND/A.STEREO/CINE FLTR:** Audio mode selection.
- **Number Pad (0-9, +10):** Direct input for channels or settings.
- **DISC/OK:** Confirms selections or controls disc playback.
- **Playback Controls (CH-, CH+, Rewind, Play, Fast Forward, Stop, Pause, Skip Back, Skip Forward):** Controls playback for connected media devices.

## MAINTENANCE

### Battery Replacement:

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning:

To clean the remote control, wipe it with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid getting liquids inside the remote.

### Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly installed batteries.	Replace batteries with new 1.5V AAA alkaline batteries, ensuring correct polarity.
Remote has short range or intermittent response.	Weak batteries; Obstruction between remote and receiver; Remote not pointed directly at receiver.	Replace batteries; Remove any objects blocking the signal path; Point the remote directly at the receiver's IR sensor.
Certain buttons do not respond.	Dirty contacts under the button; Remote damage.	Try cleaning the remote (see Maintenance); If problem persists, the remote may be damaged and require replacement.

## SPECIFICATIONS

- **Model Number:** ADSUNCTY-RC-518M-GAIX
- **Brand:** AIDITIYMI
- **Compatible Devices:** Onkyo AV Receivers (specific models listed in Operating Instructions)
- **Power Source:** 2 x AAA Batteries (1.5V, Alkaline recommended)
- **Product Dimensions (L x W x H):** 7.87 x 1.97 x 0.59 inches
- **Item Weight:** 2.82 ounces
- **Special Feature:** Ergonomic
- **Color:** Black
- **Max Number of Supported Devices:** 1

## WARRANTY AND SUPPORT

This replacement remote control is designed for reliable performance. For any issues or inquiries, please refer to the seller's return policy or contact the seller directly through the platform where the purchase was made. Keep your purchase receipt for reference.

The standard return policy for this product is 30 days from purchase. For specific warranty details, please consult the product listing or contact the manufacturer/seller.

