

Yuposl YPW01

Yuposl YPW01 Wireless Cat Water Fountain Instruction Manual

Model: YPW01 | Brand: Yuposl

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Yuposl YPW01 Wireless Cat Water Fountain. Designed for convenience and pet health, this fountain features a large capacity, ultra-filtration system, quiet operation, and a motion sensor for efficient water dispensing. Please read this manual thoroughly before use to ensure proper function and longevity of your device.

2. SAFETY INFORMATION

- For indoor use only. Do not expose the fountain to direct sunlight or rain.
- Keep out of reach of children and pets when performing maintenance or charging.
- Do not immerse the main unit (containing electrical components) in water. The external pump design ensures water and electricity separation for safety.
- Use only the provided charging cable and a compatible power adapter (not included) for charging.
- Ensure the fountain is placed on a stable, level surface to prevent tipping.
- Regularly inspect the charging cable for damage. Discontinue use if damaged.
- Do not attempt to disassemble or repair the main unit yourself. Contact customer support for assistance.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Yuposl YPW01 Wireless Cat Water Fountain Main Unit
- Water Tank (3.5L capacity)

- External Water Pump
- Ultra-Filtration Filter Cartridge
- Sponge Filter (pre-installed or separate)
- Charging Cable (USB-C)
- User Manual

4. PRODUCT DIAGRAM

Familiarize yourself with the components of your water fountain.



Figure 4.1: Exploded view illustrating the water and electricity separation design, highlighting the external pump, filter, and water tank.



Figure 4.2: Product dimensions: 9"L x 5.5"W x 6"H.

5. SETUP

1. **Initial Cleaning:** Before first use, wash the water tank, drinking tray, and external pump thoroughly with mild soap and water. Rinse all components completely to remove any soap residue. Do not wash the main unit with electrical components.
2. **Install Filter:** Place the ultra-filtration filter cartridge into its designated slot in the drinking tray. Ensure the sponge filter is also correctly positioned.
3. **Assemble Fountain:** Place the external water pump into the water tank. Position the drinking tray onto the water tank, ensuring it aligns correctly with the pump. Then, attach the main unit to the drinking tray.
4. **Fill Water Tank:** Fill the water tank with clean drinking water up to the MAX fill line. Do not overfill. The fountain has a 3.5L (118oz) capacity.

5. **Charge Battery:** Connect the USB-C charging cable to the charging port on the main unit and plug it into a compatible USB power adapter. A full charge takes approximately 5 hours and provides up to 180 days of operation. The charging indicator light will show charging status.
6. **Power On:** Press the power button on the main unit to turn on the fountain.

6. OPERATING INSTRUCTIONS

The Yuposl YPW01 fountain offers intelligent water dispensing modes.

6.1. Motion Sensor Mode

The fountain is equipped with a 180° motion sensor. When a pet approaches within 50 cm, the fountain will automatically dispense water, encouraging pets to drink. Water flow will stop shortly after the pet moves away.



Figure 6.1: The 180° motion sensor activates water flow when a pet is detected.

6.2. Indicator Lights

The main unit features indicator lights to provide important status updates:

- **Low Water Level Alert:** A dedicated light will illuminate when the water level in the tank is low, indicating it's time for a refill.



Figure 6.2: Low water level indicator.

- **Low Battery Alert:** A light will indicate when the battery is low and requires charging.



Figure 6.3: Low battery indicator.

- **Filter Replacement Reminder:** A light will signal when it's time to replace the filter cartridge. It is recommended to change the filter at least once a month.



Figure 6.4: Filter replacement indicator.

7. MAINTENANCE

Regular cleaning and filter replacement are crucial for maintaining water quality and the longevity of your fountain.

7.1. Cleaning the Fountain

It is recommended to clean the fountain at least once a week, or more frequently if multiple pets use it.

1. **Disassemble:** Turn off the fountain and disconnect the charging cable. Remove the main unit, drinking tray, and external pump from the water tank.
2. **Clean Components:** Wash the water tank, drinking tray, and external pump with mild soap and water. Use a soft brush to clean any residue or debris. Rinse thoroughly.
3. **Clean Filter:** Rinse the sponge filter under running water. The ultra-filtration filter cartridge should be replaced, not cleaned, for optimal performance.
4. **Dry and Reassemble:** Ensure all components are completely dry before reassembling the fountain.

7.2. Filter Replacement

Replace the ultra-filtration filter cartridge at least once a month, or as indicated by the filter replacement light, to ensure optimal water quality.

1. Turn off the fountain and remove the main unit and drinking tray.
2. Remove the old filter cartridge from its slot.
3. Insert a new filter cartridge into the slot.

4. Reassemble the fountain and refill with fresh water.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water flow	Low water level Pump clogged Battery low Fountain not powered on	Refill water tank Clean the external pump and filter Charge the battery Press the power button
Fountain is noisy	Low water level Pump not properly seated Debris in pump	Refill water tank Ensure pump is correctly installed Clean the external pump
Indicator lights not working	Battery completely drained Unit malfunction	Charge the battery Contact customer support
Water appears dirty quickly	Filter needs replacement Insufficient cleaning frequency	Replace filter cartridge Increase cleaning frequency (e.g., every 3-5 days)

9. SPECIFICATIONS

- **Model:** YPW01
- **Capacity:** 3.5 Liters (118 oz)
- **Dimensions (LxWxH):** 9 x 5.5 x 6 inches
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Battery:** 5000mAh rechargeable Li-ion battery
- **Battery Life:** Up to 180 days (on a full charge)
- **Charging Time:** Approximately 5 hours
- **Noise Level:** Less than 30 dB
- **Filtration Accuracy:** 0.01 micron
- **Motion Sensor Range:** 180°, detects up to 50 cm
- **Weight:** 2.27 pounds

10. WARRANTY AND SUPPORT

10.1. Warranty Information

The Yuposl YPW01 Wireless Cat Water Fountain comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

10.2. Customer Support

If you encounter any issues or have questions regarding your Yuposl YPW01 Wireless Cat Water Fountain, please contact our customer support team. Provide your model number (YPW01) and a detailed description of

the issue for prompt assistance.
Email: support@yuposl.com (Example Email)
Website: [Visit the Yuposl Store on Amazon](#)

11. PRODUCT VIDEOS

Watch the official product video for a visual guide on setup and features.

Your browser does not support the video tag.

Official product overview video for the Yuposl YPW01 Wireless Cat Water Fountain, demonstrating its features and operation.