

Uiosmuph U58

Uiosmuph U58 Rechargeable Wireless Mouse User Manual

Model: U58

1. PRODUCT OVERVIEW

The Uiosmuph U58 is a 2.4G wireless optical mouse designed for portability and quiet operation. It features a rechargeable battery, adjustable DPI settings, and broad compatibility with various operating systems.

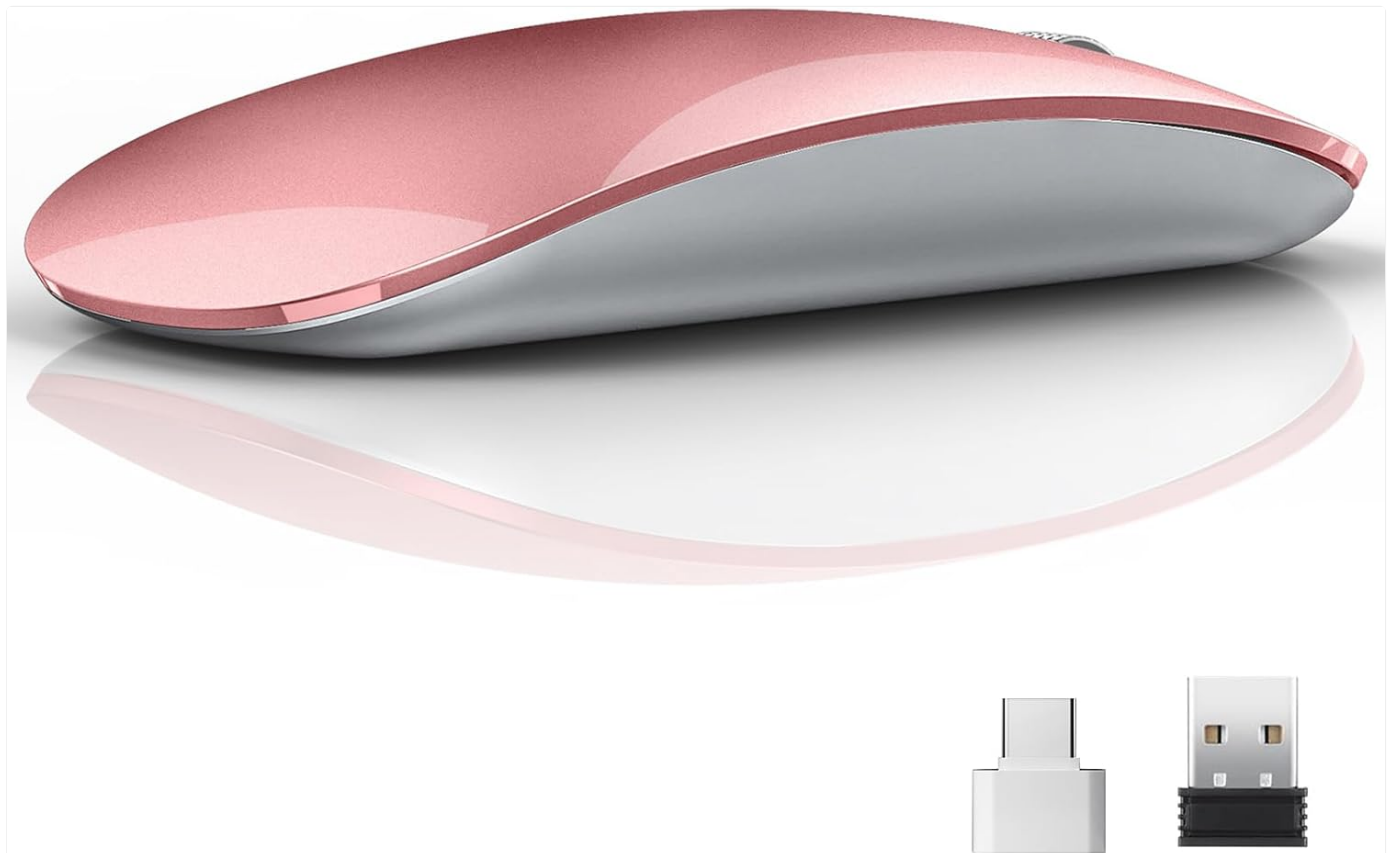


Image 1.1: Uiosmuph U58 Wireless Mouse in Rose Gold.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x Uiosmuph U58 Wireless Mouse
- 1 x USB Receiver (integrated into the mouse)
- 1 x Type-C Adapter
- 1 x USB Charging Cable
- 1 x User Manual

3. SETUP INSTRUCTIONS

3.1 Connecting the Mouse

1. **Locate the USB Receiver:** The 2.4G USB receiver is stored in a compartment on the underside of the mouse. Gently slide open the cover to retrieve it.
2. **Insert the Receiver:** Plug the USB receiver directly into an available USB-A port on your computer, laptop, or tablet. If your device only has USB-C ports, use the provided Type-C adapter.
3. **Power On the Mouse:** Locate the ON/OFF switch on the underside of the mouse and slide it to the 'ON' position.
4. **Automatic Connection:** The mouse will automatically connect to your device. No additional drivers or software installation is required.



Image 3.1: The mouse is portable and lightweight, making it easy to carry.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

The Uiosmuph U58 mouse features standard left and right click buttons and a scroll wheel. The primary left and right click buttons are designed for silent operation, minimizing noise in quiet environments.



Image 4.1: The mouse features noiseless clicks for quiet use.

4.2 Adjusting DPI Sensitivity

The mouse offers three adjustable DPI (Dots Per Inch) levels to suit different speed and precision requirements. To change the DPI setting:

- Press the 'DPI' button located on the underside of the mouse.
- Each press will cycle through the available DPI settings: 1000 DPI, 1200 DPI, and 1600 DPI.
- Select the DPI level that best matches your preference and task.



Image 4.2: The mouse offers 3 adjustable DPI levels (1000, 1200, 1600) for varied cursor speed.

5. CHARGING AND POWER MANAGEMENT

5.1 Charging the Battery

The Uiosmuph U58 mouse features a built-in rechargeable lithium metal battery. To charge the mouse:

- Connect the provided USB charging cable to the charging port on the front of the mouse.
- Plug the other end of the USB charging cable into a USB power source (e.g., computer USB port, USB wall adapter).
- The battery indicator lights on the underside of the mouse will illuminate during charging.
- **Important:** Do not use fast charger adapters to charge the mouse. Use standard USB charging ports.

USB C Charging Mouse



Note: Do not use fast charger adapter to charging the mouse

Image 5.1: The mouse charges via a USB-C cable. Avoid using fast chargers.

5.2 Battery Indicator

The mouse is equipped with a battery indicator to show the remaining charge level. Refer to the indicator lights on the underside of the mouse to monitor battery status.

Battery Indicator

Say goodbye to battery anxiety



Image 5.2: Battery indicator lights on the mouse's underside show charge level.

5.3 Power Saving Mode

To conserve battery life, the mouse will automatically enter sleep mode after 8 minutes of inactivity. To reactivate the mouse, simply move it gently.

6. MAINTENANCE

To ensure optimal performance and longevity of your Uiosmuph U58 mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device.
- **Avoid Liquids:** Do not expose the mouse to liquids or excessive moisture.
- **Storage:** When not in use for extended periods, store the mouse in a cool, dry place. Consider turning off the mouse to further conserve battery.
- **Receiver Care:** When transporting the mouse, store the USB receiver in its designated compartment to prevent loss or damage.

7. TROUBLESHOOTING

If you encounter issues with your Uiosmuph U58 wireless mouse, please refer to the following common solutions:

Problem	Solution
Mouse not responding	Ensure the mouse is turned ON. Check if the USB receiver is securely plugged into the computer's USB port. Try plugging the receiver into a different USB port. Ensure the mouse battery is charged. Connect the charging cable if needed. Restart your computer.
Cursor movement is erratic or slow	Change the DPI setting using the DPI button on the underside of the mouse. Ensure the mouse is used on a clean, non-reflective surface. Check for any obstructions between the mouse and the receiver. Ensure the battery is sufficiently charged.
Mouse disconnects frequently	Ensure the mouse is within the 10-meter operating range of the receiver. Avoid using the mouse near strong electromagnetic interference sources. Ensure the battery is charged.
Mouse not charging	Verify the charging cable is properly connected to both the mouse and the power source. Try a different USB charging port or cable. Ensure the power source is active.

8. SPECIFICATIONS

Feature	Detail
Model Number	U58
Connectivity Technology	2.4 GHz Wireless (USB Receiver)
Sensor Technology	Optical
DPI Levels	1000 / 1200 / 1600 DPI (Adjustable)
Number of Buttons	3 (Left, Right, Scroll Wheel)
Click Type	Silent (Left and Right buttons)
Power Source	Rechargeable Lithium Metal Battery (1 included)
Charging Port	USB-C
Operating Range	Up to 10 meters (33 feet)

Feature	Detail
Compatibility	Windows 7/8/10/XP, Vista 7/10, Linux, macOS, iOS (for devices with USB port)
Dimensions (L x W)	11.5 cm x 6.3 cm (4.53 in x 2.48 in)
Hand Orientation	Ambidextrous
Country of Origin	China

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Uiosmuph customer service through the retailer where the product was purchased. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question