

WOCKODER R612

WOCKODER R612 Record Player User Manual

Model: R612

1. INTRODUCTION

Thank you for purchasing the WOCKODER R612 Record Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

The WOCKODER R612 is a versatile record player featuring a 3-speed belt-driven turntable, dual stereo speakers, wireless connectivity, Aux-in, USB playback, and RCA output. It is designed to provide an enjoyable audio experience for your vinyl collection and digital music.

2. SAFETY INSTRUCTIONS

- Read all instructions before operating the device.
- Keep the manual for future reference.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x WOCKODER R612 Turntable Unit
- 2 x External Speakers
- 1 x Power Adapter
- 1 x 45 RPM Adapter
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your WOCKODER R612 Record Player.



Figure 1: WOCKODER R612 Record Player Components

1. Speakers
2. 45 RPM Adapter

3. Tonearm Raise Lever
4. Tonearm
5. Tonearm Lock
6. Auto Stop Button
7. 3 Speed LP Selector (33 1/3, 45, 78 RPM)
8. Power Button and Volume Control
9. Stylus
10. Aux Input Jack
11. USB Playback Port
12. Power Adaptor Jack
13. RCA Output Jack for Active Speakers

5. SETUP

1. **Placement:** Place the record player on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibration. Position the external speakers on either side of the main unit for optimal stereo sound.
2. **Connect Speakers:** Connect the included external speakers to the speaker output ports on the back of the turntable unit. Ensure a secure connection for both left and right channels.
3. **Power Connection:** Insert the DC plug of the power adapter into the Power Adaptor Jack (12) on the back of the unit. Plug the AC end of the adapter into a wall outlet.
4. **Dust Cover:** Carefully place the removable dust cover onto the hinges at the back of the turntable unit. This protects the platter and tonearm from dust when not in use.

6. OPERATING INSTRUCTIONS

6.1 Playing Records



Figure 2: Support for 7", 10", and 12" Records

1. **Power On:** Rotate the Power Button and Volume Control (8) clockwise to turn on the unit. The power indicator light will illuminate.
2. **Select Speed:** Set the 3 Speed LP Selector (7) to the appropriate speed (33 $\frac{1}{3}$, 45, or 78 RPM) for your record. For 45 RPM records, place the 45 RPM Adapter (2) on the center spindle.
3. **Place Record:** Carefully place a vinyl record on the turntable platter.
4. **Unlock Tonearm:** Release the Tonearm Lock (5) to free the Tonearm (4).
5. **Raise Tonearm:** Gently lift the Tonearm using the Tonearm Raise Lever (3).
6. **Position Tonearm:** Move the Tonearm over the desired starting track of the record.
7. **Lower Tonearm:** Slowly lower the Tonearm using the Tonearm Raise Lever (3) onto the record. The platter will begin to rotate and playback will start.
8. **Adjust Volume:** Rotate the Power Button and Volume Control (8) to adjust the sound level.
9. **Auto Stop Function:** The Auto Stop Button (6) controls whether the turntable stops spinning automatically when the

record reaches its end. Set to ON for automatic stop, or OFF for continuous spin.

10. **End Playback:** At the end of the record, or when you wish to stop, use the Tonearm Raise Lever (3) to lift the Tonearm, return it to its rest, and secure it with the Tonearm Lock (5). Rotate the Power Button and Volume Control (8) counter-clockwise to turn off the unit.

6.2 Wireless Connection

The WOCKODER R612 can receive audio wirelessly from compatible devices.



Figure 3: Wireless Streaming Functionality

1. **Activate Wireless Mode:** Turn on the record player. The unit will automatically enter wireless pairing mode, indicated by a flashing light.
2. **Enable Wireless on Device:** On your smartphone, tablet, or other wireless-enabled device, activate its wireless function.
3. **Pair Device:** Search for "WOCKODER" or a similar device name in your device's wireless settings and select it to pair.

4. **Playback:** Once paired, you can play audio from your device through the record player's speakers. Adjust volume using the record player's volume control and your device's volume.

6.3 Aux-in Playback

Connect external audio sources using the Aux Input Jack (10).

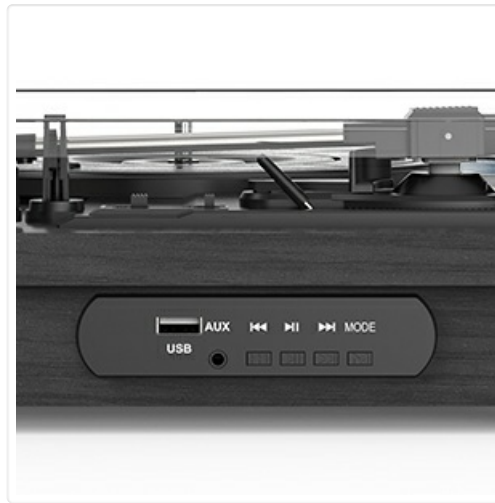


Figure 4: USB and AUX Input Ports

1. **Connect Cable:** Use a 3.5mm audio cable (not included) to connect your external audio device (e.g., MP3 player, smartphone) to the Aux Input Jack (10) on the front of the record player.
2. **Select Aux Mode:** The unit should automatically switch to Aux-in mode. If not, cycle through modes using the mode button (if available, otherwise it's usually automatic).
3. **Playback:** Play audio from your connected device. Adjust volume using the record player's volume control and your device's volume.

6.4 USB Playback

Play audio files directly from a USB flash drive using the USB Playback Port (11).

1. **Insert USB Drive:** Insert a USB flash drive into the USB Playback Port (11) on the front of the record player.
2. **Select USB Mode:** The unit should automatically switch to USB playback mode. If not, cycle through modes using the mode button (if available).
3. **Control Playback:** Use the control buttons (e.g., play/pause, next/previous track) on the unit to manage USB audio playback.
4. **Adjust Volume:** Rotate the Power Button and Volume Control (8) to adjust the sound level.

6.5 RCA Output

Connect the record player to external active speakers or an amplifier using the RCA Output Jacks (13).

1. **Connect RCA Cables:** Connect RCA cables (not included) from the RCA Output Jacks (13) on the back of the record player to the corresponding input jacks on your external amplifier or active speakers.
2. **Select Input:** On your amplifier or active speakers, select the input source corresponding to where you connected the record player.
3. **Playback:** Play a record on the WOCKODER R612. Audio will be routed through your external audio system. Adjust volume via the external system.

7. MAINTENANCE

7.1 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the dust cover closed when not in use to prevent dust accumulation on the platter and stylus.

7.2 Stylus Care

- Handle the stylus (needle) with extreme care. Avoid touching it with your fingers.
- Clean the stylus periodically with a soft brush designed for stylus cleaning, brushing gently from back to front.
- A worn stylus can damage records and degrade sound quality. Replace the stylus when signs of wear are observed (e.g., distorted sound, skipping).

7.3 Record Care

- Keep records clean and free of dust and fingerprints. Use a record cleaning brush before each play.
- Store records vertically in their sleeves in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues with your record player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not active.	Ensure power adapter is securely connected to the unit and a working power outlet.
No sound from speakers	Volume too low; speakers not connected; incorrect mode selected.	Increase volume. Check speaker connections. Ensure correct input mode (Phono, Wireless, Aux, USB) is selected.
Record skipping	Record is dirty or damaged; stylus is worn or dirty; unit is not level.	Clean the record. Clean or replace the stylus. Ensure the record player is on a stable, level surface.
Wireless pairing failure	Device too far; wireless not enabled on source device; incorrect pairing procedure.	Ensure source device is within range. Enable wireless on source device. Follow pairing instructions in section 6.2.
Record plays too fast/slow	Incorrect speed selected.	Adjust the 3 Speed LP Selector (7) to match the record's speed (33 1/3, 45, or 78 RPM).

9. SPECIFICATIONS

The following are the technical specifications for the WOCKODER R612 Record Player:

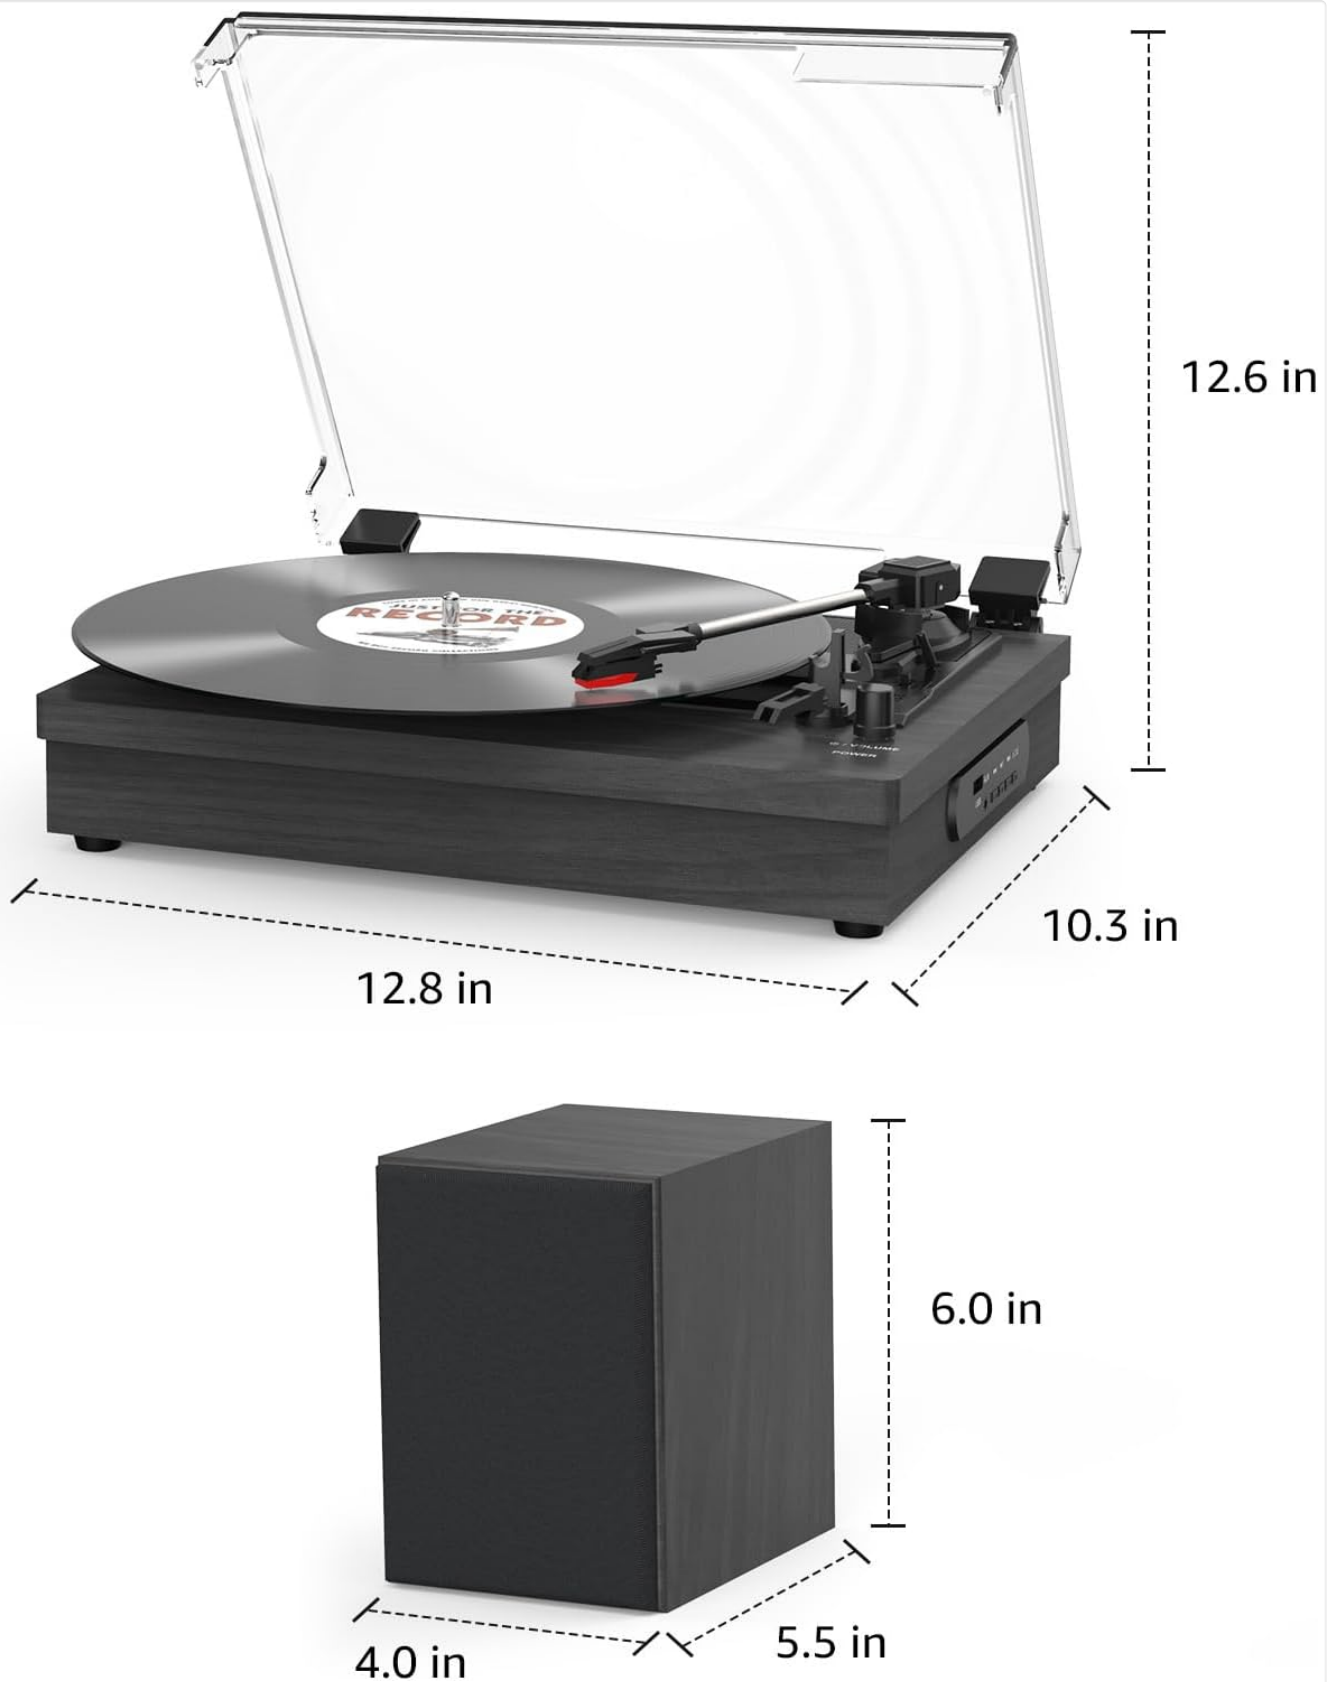


Figure 5: Product Dimensions

Feature	Detail
Brand	WOCKODER
Model Name	R612
Turntable Speeds	33 1/3, 45, 78 RPM

Feature	Detail
Record Sizes Supported	7", 10", 12"
Connectivity	Wireless, Aux-in, USB, RCA Output
Speakers	Dual Full Range External Speakers
Material	Wood
Item Weight	9.53 pounds (4.33 Kilograms)
Package Dimensions	15.31 x 12.01 x 11.38 inches
Included Components	1* turntable, 2* speakers, 1* adapter, 1* user manual

10. WARRANTY AND SUPPORT

WOCKODER products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or contact WOCKODER customer support directly. Keep your purchase receipt as proof of purchase.

For technical assistance or further inquiries, please visit the official WOCKODER website or contact their customer service department. Contact details are typically provided in the product packaging or on the manufacturer's website.

© 2023 WOCKODER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question