

[Manuals.plus /](#)

[› E-YOOSO /](#)

[› E-YOOSO Wireless Keyboard and Mouse Combo User Manual](#)

E-YOOSO E-787-02

E-YOOSO Wireless Keyboard and Mouse Combo User Manual

Model: E-787-02

1. INTRODUCTION

Thank you for choosing the E-YOOSO Wireless Keyboard and Mouse Combo. This product is designed to provide a comfortable and efficient computing experience with its ergonomic design, stable 2.4GHz wireless connection, and intelligent power-saving features. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new device.



Image 1.1: The E-YOOSO Wireless Keyboard and Mouse Combo, featuring a full-sized keyboard with a wrist rest and a contoured mouse, both in white.

2. PACKAGE CONTENTS


- 1 x E-YOOSO Wireless Keyboard
- 1 x E-YOOSO Wireless Mouse
- 1 x USB Receiver (stored in the mouse battery compartment)
- 1 x User Manual

3. SETUP GUIDE

Follow these steps for the initial setup of your E-YOOSO Wireless Keyboard and Mouse Combo:

1. Install Batteries:

- For the mouse: Open the battery compartment on the underside of the mouse. Insert one AA battery (not included), ensuring correct polarity.
- For the keyboard: Open the battery compartment on the underside of the keyboard. Insert one AA battery (not included), ensuring correct polarity.

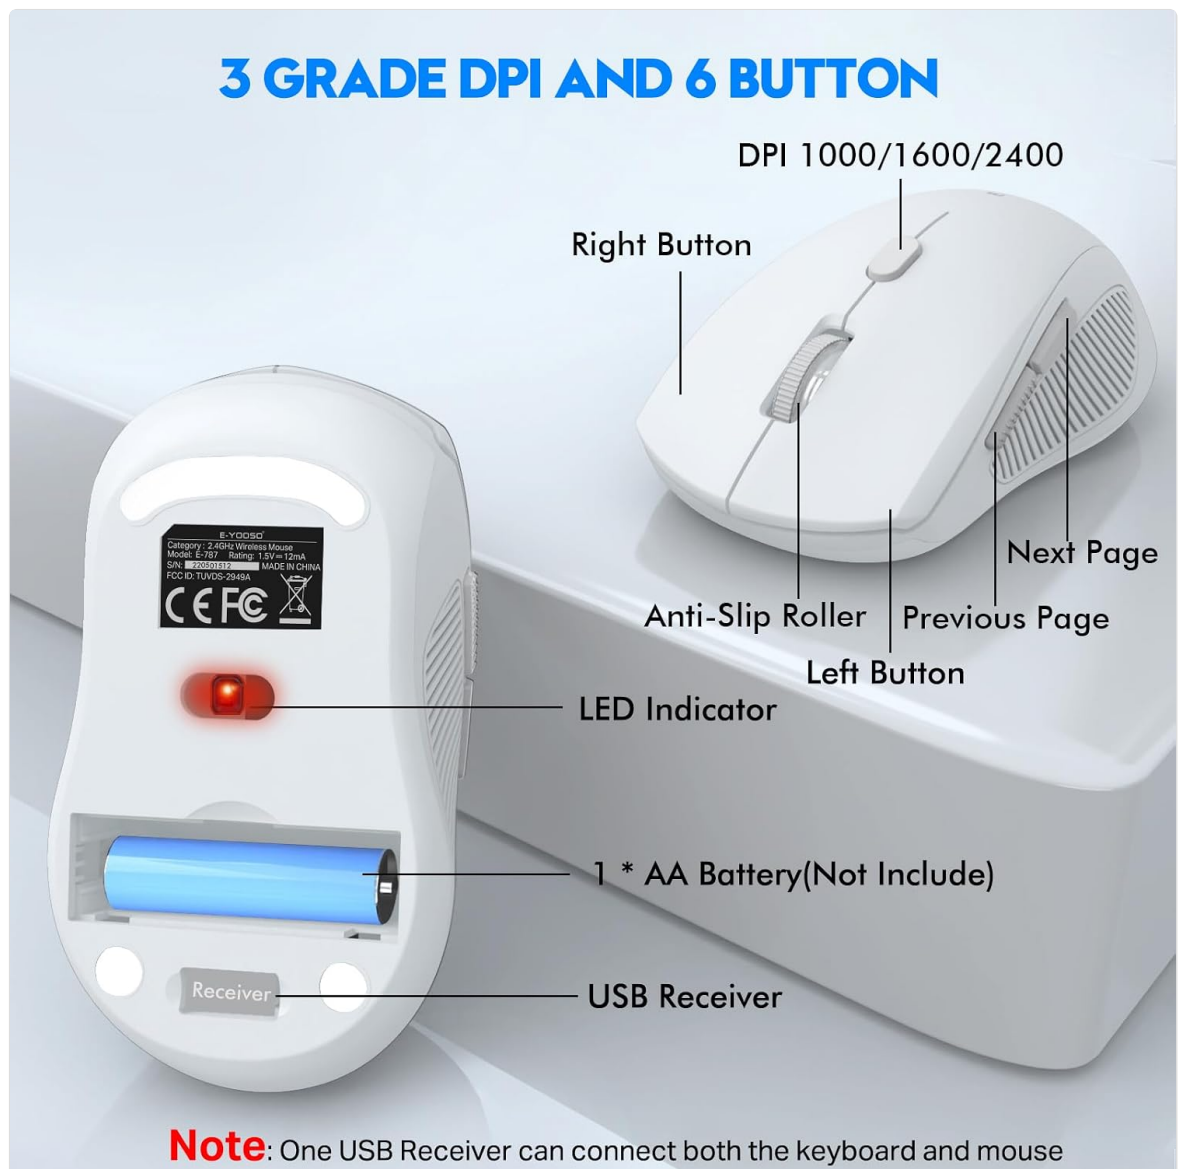


Note: One USB Receiver can connect both the keyboard and mouse

Image 3.1: Underside of the mouse, illustrating the battery compartment and the dedicated slot for the USB receiver.

AUTOMATIC POWER SAVING FUNCTION

Note: Type or double click any button to wake up

 12 Months Battery Life

 8 Min Auto Sleep


 Press any key to active



Image 3.2: The keyboard's battery compartment, located on its underside, ready for AA battery insertion.

- 2. Retrieve USB Receiver:** The USB receiver is conveniently stored within the mouse's battery compartment. Gently pull it out.
- 3. Connect Receiver:** Plug the USB receiver into an available USB port on your computer.
- 4. Power On:** Ensure both the keyboard and mouse are switched on (if they have an on/off switch). The devices are plug-and-play and should connect automatically within a few seconds.



Image 3.3: The compact USB receiver, which establishes a stable 2.4GHz wireless connection for both the keyboard and mouse.

4. OPERATING INSTRUCTIONS

4.1 Keyboard Features

- **Ergonomic Design with Palm Rest:** The keyboard features an integrated palm rest and folding holders to provide a comfortable typing experience and reduce wrist fatigue during extended use.

EFFORTLESS AND EFFICIENT TYPING

Palm Rest help reduce wrist fatigue and keep your hand comfortable even after long hours



Feel Comfortable



Ergonomic Design



Crater Switch



Image 4.1: The ergonomic design of the keyboard, highlighting the integrated palm rest for enhanced comfort.

- **Spill-Proof Design:** The keyboard is designed with a waterproof conductive membrane and multiple drainage holes, allowing liquids to drain out easily in case of accidental spills.

DURABLE AND SPILL-RESISTANT

Easy to wipe it clean after accidental water splashes

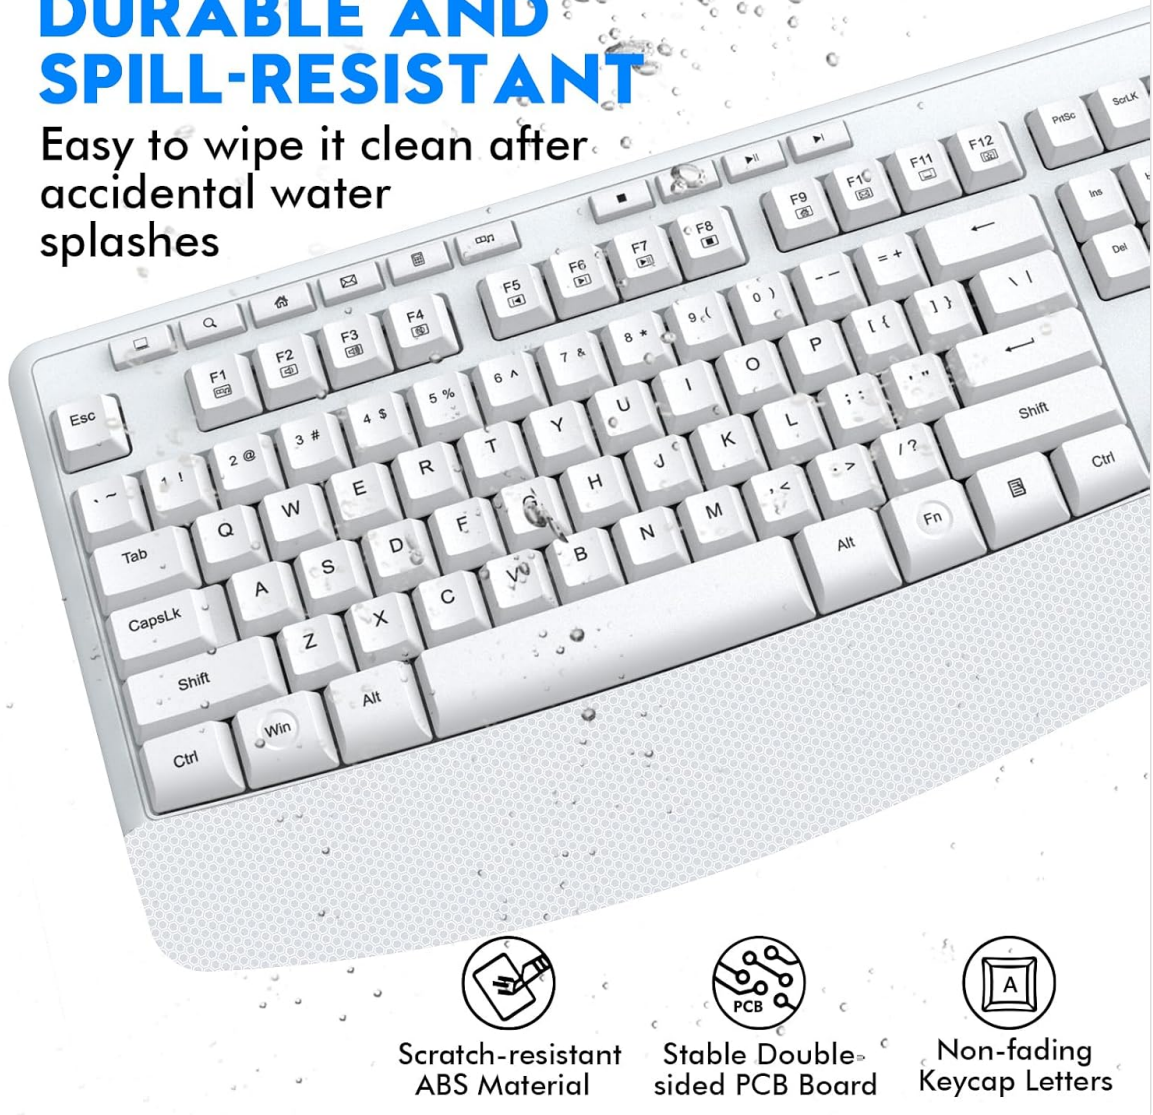


Image 4.2: Demonstration of the keyboard's spill-resistant feature, showing water droplets on its surface.

- **Multimedia Hotkeys:** Access common functions quickly using the dedicated multimedia hotkeys. (Note: Some multimedia functions may not be available with Mac OS).
 - FN+F1: Media Player
 - FN+F2: Volume Down
 - FN+F3: Volume Up
 - FN+F4: Mute
 - FN+F5: Previous Track
 - FN+F6: Next Track
 - FN+F7: Play/Pause
 - FN+F8: Stop
 - FN+F9: Homepage
 - FN+F10: Email
 - FN+F11: My Computer
 - FN+F12: Favorites

Smart Sleep Mode

Type or click any keys to wake up



Idle For 8 Mins- Keyboard Sleep
Idle For 8 Mins- Mouse Sleep



365 Days Standby Time
400 Hours Working Time



Note: Both the keyboard and mouse share the same one USB Receiver

Image 4.3: The keyboard layout highlighting the multimedia hotkeys (F1-F12) accessible via the Function (FN) key.

4.2 Mouse Features

- **Adjustable DPI:** The optical wireless mouse offers 3 adjustable DPI levels (1000/1600/2400) to suit your sensitivity preferences. Press the DPI button located on top of the mouse to cycle through the settings.
- **6 Buttons:** The mouse includes standard left and right click buttons, a scroll wheel, a DPI adjustment button, and dedicated forward and backward buttons on the side for enhanced navigation.

3 GRADE DPI AND 6 BUTTON



Image 4.4: Detailed view of the mouse, indicating the DPI button and the arrangement of its six functional buttons.

4.3 Power Saving Function

To conserve battery life, both the keyboard and mouse feature an automatic power-saving mode:

- The keyboard will enter sleep mode after 5 minutes of inactivity.
- The mouse will enter sleep mode after 2 minutes of inactivity.

To wake up the devices, simply press any key on the keyboard or move/click any button on the mouse.

AUTOMATIC POWER SAVING FUNCTION

Note: Type or double click any button to wake up



12 Months Battery Life



8 Min Auto Sleep



Press any key to active



1 x AA Battery
Batteries are not included

Image 4.5: Visual representation of the automatic power-saving function, detailing sleep modes for both keyboard and mouse.

5. MAINTENANCE AND CARE

- **Cleaning:** For general cleaning, use a soft, damp cloth. For the keyboard, due to its splash-proof design, you can gently shake off any liquid after a spill and wipe it clean. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** When the devices stop responding or show signs of low power, replace the AA batteries in both the keyboard and mouse. Refer to Section 3.1 for battery installation instructions.
- **Storage:** When not in use for extended periods, it is recommended to turn off the devices to further conserve battery life. Store the USB receiver in the mouse's dedicated compartment to prevent loss.

6. TROUBLESHOOTING

If you encounter any issues with your E-YOOSO Wireless Keyboard and Mouse Combo, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Keyboard/Mouse not responding	Low battery; USB receiver not connected or recognized; devices are in sleep mode.	Replace batteries. Ensure USB receiver is securely plugged into a working USB port. Move or click the mouse/press any key on the keyboard to wake from sleep. Try a different USB port.
Lag or intermittent connection	Distance from receiver; interference from other wireless devices.	Ensure devices are within the 10m (33 feet) wireless range. Move the receiver closer to the keyboard and mouse. Minimize interference from other 2.4GHz devices.
Mouse cursor erratic or not moving smoothly	Dirty optical sensor; unsuitable surface; low battery.	Clean the optical sensor on the underside of the mouse. Use the mouse on a clean, non-reflective surface or a mouse pad. Replace batteries.
DPI setting not changing	DPI button not pressed correctly.	Ensure you are pressing the dedicated DPI button on the mouse. Cycle through all three settings to confirm.

If the problem persists after trying these solutions, please contact E-YOOSO customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Model Number	E-787-02
Connectivity Technology	2.4G Wireless
Wireless Range	Up to 10 meters (33 feet)
Keyboard Dimensions (L x W x H)	17.51 x 8.03 x 1.16 inches (445 x 204 x 35 mm)
Item Weight	1.92 pounds
Mouse DPI Levels	1000 / 1600 / 2400 DPI
Mouse Buttons	6 Buttons
Power Source	1 x AA Battery (Keyboard), 1 x AA Battery (Mouse)
Compatible Devices	Personal Computer (Windows 7/8/10/XP/Vista, Linux, Mac)
Special Features	Ergonomic Palm Rest, Spill-Proof Design, Auto Power Saving
Color	White
Manufacturer	E-YOOSO
Country of Origin	China

FULL-SIZE WIRELESS KEYBOARD COMBO

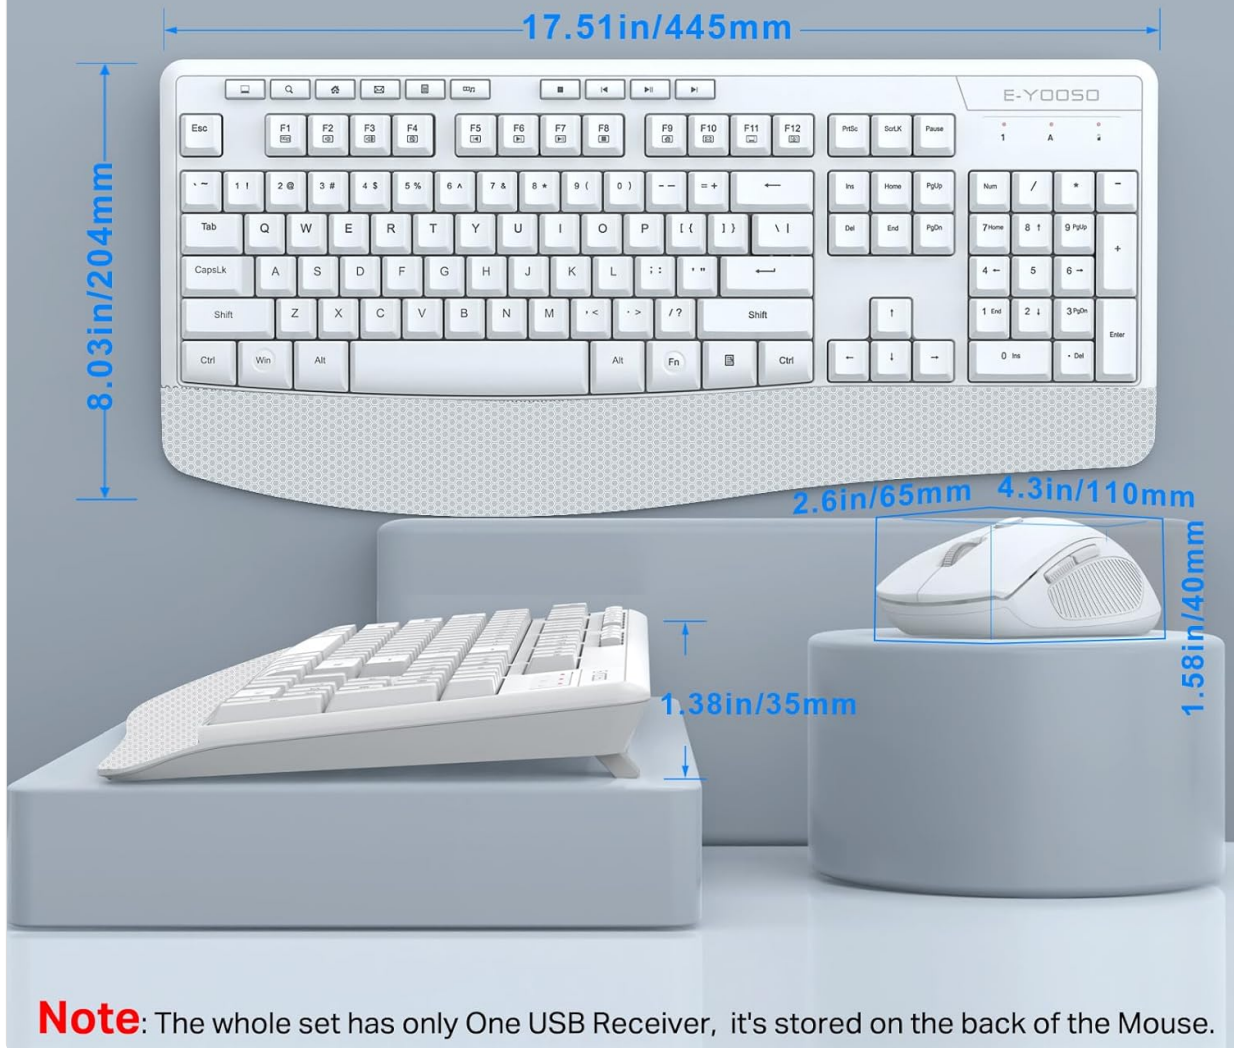


Image 7.1: Detailed dimensions of the E-YOOSO Wireless Keyboard and Mouse Combo.



Image 7.2: Compatibility information for the E-YOOSO Wireless Keyboard and Mouse Combo, showing support for Mac, Windows, and Vista.

8. WARRANTY AND SUPPORT

The E-YOOSO Wireless Keyboard and Mouse Combo comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product functions as intended under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact E-YOOSO customer service. Contact details can typically be found on the product packaging or the official E-YOOSO website.

We are committed to providing excellent customer service and will assist you promptly.