

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bush Home](#) /

› [Bush Furniture Westbrook Tall 5 Shelf Bookcase with Glass Doors User Manual](#)

## Bush Home WBB132V2R-03

# Bush Furniture Westbrook Tall 5 Shelf Bookcase with Glass Doors User Manual

Model: WBB132V2R-03

## INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Bush Furniture Westbrook Tall 5 Shelf Bookcase with Glass Doors. Please read this manual thoroughly before beginning assembly or use to ensure proper installation and safe operation.

The Bush Furniture Westbrook Tall 5 Shelf Bookcase features a modern farmhouse style with windowpane glass doors and matte black handles. It offers versatile storage with two fixed shelves and three adjustable shelves, designed to accommodate various items. The unit includes Tip Guard™ safety features for enhanced stability.

## IMPORTANT SAFETY INFORMATION

### WARNING: Failure to follow these safety instructions could result in injury or property damage.

- Always anchor the bookcase to the wall using the provided Tip Guard™ safety hardware to prevent tipping. This is crucial for household safety, especially in homes with children or pets.
- Each shelf supports a maximum weight of 50 pounds. Do not exceed this weight limit to prevent structural damage or collapse.
- Ensure all fasteners are securely tightened during assembly. Periodically check and re-tighten fasteners as needed.
- Do not climb on or stand on the bookcase.
- Keep small parts and assembly hardware away from children during assembly to prevent choking hazards.
- Assemble the unit on a soft, clean surface to prevent scratching.

For additional safety information, refer to the [product page](#) or contact Bush Furniture customer support.

## PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present. If any items are missing or damaged, do not proceed with assembly. Contact customer service for replacement parts.

### Components:

- Side Panels (2)
- Top Panel (1)
- Bottom Panel (1)
- Fixed Shelves (2)
- Adjustable Shelves (3)
- Back Panel (1)
- Glass Doors (2)
- Door Handles (2)
- Assembly Hardware (screws, dowels, cam locks, shelf pins, wall anchor kit)

#### **Tools Required (Not Included):**

- Phillips Head Screwdriver
- Hammer
- Measuring Tape
- Level
- Drill (for wall anchoring)

## **SETUP AND ASSEMBLY**

---

Assembly is required for this product. It is recommended to have two people for assembly. Follow the step-by-step instructions provided in the packaging. Below are general guidelines and important considerations.

### **Step 1: Prepare the Area**

Clear a spacious area for assembly. Lay down a blanket or cardboard to protect both the furniture components and your flooring from scratches.

### **Step 2: Assemble the Frame**

Attach the side panels to the bottom panel using the specified hardware. Ensure all cam locks and dowels are properly aligned and secured. Then, attach the fixed shelves.



*Image: Front view of the assembled Bush Furniture Westbrook Tall 5 Shelf Bookcase.*

### **Step 3: Install Back Panel and Top Panel**

Carefully align and attach the back panel. Ensure it is square with the frame before securing it with small nails. Then, attach the top panel.



*Image: Diagram showing the dimensions of the Bush Furniture Westbrook Tall 5 Shelf Bookcase.*

#### **Step 4: Install Adjustable Shelves and Doors**

Insert shelf pins into the desired holes for the adjustable shelves. Place the adjustable shelves onto the pins. Attach the glass doors using the provided hinges and install the matte black handles.



*Image: Diagram highlighting key features of the bookcase, including wall attachment hardware, modern farmhouse styling, attractive windowpane glass doors, long matte black handles, and three adjustable shelves.*

## Step 5: Wall Anchoring (Crucial Safety Step)

**It is mandatory to anchor the bookcase to a wall to prevent tipping. Use the included Tip Guard™ safety hardware. Locate a wall stud for secure attachment or use appropriate wall anchors for your wall type.**

1. Position the bookcase in its final desired location.
2. Mark the wall where the anti-tip strap will attach.
3. Drill a pilot hole if necessary and secure the wall bracket.
4. Attach the strap to the bookcase and then to the wall bracket, ensuring it is taut.

## OPERATING INSTRUCTIONS

---

Your Westbrook Bookcase is designed for organizing and displaying items in your home office or living room.

- **Adjustable Shelves:** To adjust a shelf, remove all items from it, then carefully lift the shelf and remove the shelf

pins. Reinsert the pins into the desired holes and place the shelf back on the pins. Ensure pins are fully seated before placing items on the shelf.

- **Glass Doors:** The glass doors provide enclosed storage. Use the handles to open and close them gently. Avoid slamming the doors to prevent damage to hinges or glass.
- **Weight Distribution:** Distribute weight evenly across shelves. Place heavier items on lower shelves for better stability. Do not overload any single shelf beyond 50 pounds.

## MAINTENANCE

---

Regular maintenance will help prolong the life and appearance of your bookcase.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish. For glass doors, use a standard glass cleaner.
- **Hardware:** Periodically check all screws, bolts, and cam locks to ensure they are tight. Re-tighten as necessary.
- **Environmental Conditions:** Avoid placing the bookcase in direct sunlight or near heat sources, as this can cause fading or warping. Maintain a stable room temperature and humidity.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Bookcase feels wobbly or unstable.	Loose hardware; not properly anchored to wall; uneven floor.	Ensure all assembly hardware is tightened. Verify wall anchoring is secure. Use shims under the base if the floor is uneven.
Doors do not close properly or are misaligned.	Hinges are loose or improperly adjusted; frame is not square.	Check and tighten hinge screws. Adjust hinges as needed (refer to hinge manufacturer's instructions if available). Ensure the bookcase frame is square.
Shelf sags or bows.	Shelf is overloaded.	Reduce the weight on the shelf. Ensure weight does not exceed 50 pounds per shelf. Distribute items more evenly.

## SPECIFICATIONS

---

- **Model:** WBB132V2R-03
- **Brand:** Bush Home
- **Approximate Dimensions (W x D x H):** 31.22" x 12.52" x 72.01" (79.3 cm x 31.8 cm x 182.9 cm)
- **Weight:** 93.1 Pounds
- **Material:** Engineered Wood, Glass (doors)
- **Color:** Vintage Black/Restored Tan Hickory
- **Number of Shelves:** 5 (2 fixed, 3 adjustable)
- **Weight Limit per Shelf:** 50 Pounds
- **Assembly Required:** Yes
- **Special Features:** Adjustable Shelves, Wall Mount (Tip Guard™ safety features)

## WARRANTY INFORMATION

---

This Bush Furniture product is backed by the Bush Furniture 1 Year Manufacturer's Warranty. This warranty covers

defects in materials and workmanship under normal use. For specific terms, conditions, and to make a warranty claim, please refer to the official Bush Furniture website or contact their customer service department.

## CUSTOMER SUPPORT

---

If you have any questions regarding assembly, missing parts, or product functionality, please contact Bush Furniture customer support:

- **Website:** Visit the [Bush Home Store on Amazon](#) for more information and contact options.
- **Phone:** Refer to the contact information provided in your product packaging or on the official Bush Furniture website.

## PRODUCT VIDEOS

---

### Bush Furniture Westbrook Collection Overview

Your browser does not support the video tag.

*Description: This video provides an overview of the Bush Furniture Westbrook Collection, showcasing various furniture pieces including desks and bookcases, highlighting their design and functionality.*



© 2024 Bush Furniture. All rights reserved.

This manual is for informational purposes only. Bush Furniture reserves the right to make changes to products without prior notice.