

One For All URC7966

One For All Urc7966 Smart Control Pro 6 Universal Remote

INSTRUCTION MANUAL

Model: URC7966 | Brand: One For All

Introduction

The One For All Urc7966 Smart Control Pro 6 is a universal remote control designed to simplify your home entertainment experience. It allows you to control up to 6 audio/video devices from various brands with ease. This manual provides detailed instructions on setting up, operating, and troubleshooting your remote.



Image: The Urc7966 remote in use, demonstrating control over multiple devices in a home entertainment setup.

Setup

The Urc7966 Smart Control Pro 6 offers multiple methods for setup, including a dedicated smartphone app, SimpleSet, and traditional code entry. The recommended method for the easiest and most comprehensive setup is via the My Nevo App.

1. App Setup (Recommended)

The My Nevo App, available on the Apple App Store and Google Play Store, allows for seamless setup and ensures 100% compatibility with your devices. The app communicates with your remote via Bluetooth Smart.

- **Download the App:** Install the 'My Nevo App' on your smartphone or tablet.
- **Grant Bluetooth Permission:** Open the app and grant permission to use Bluetooth for communication between your phone and the remote.
- **Select Your Remote:** When the app starts, choose 'Smart Control Pro' as your remote.
- **Pairing:** The app will instruct you to hold down the 'OK' key on the remote for 3 seconds. The blue LED under the TV key will start blinking. Then, click 'Search for remote' in the app to begin the pairing process.
- **Add Devices:** Once successfully connected, the app will guide you through adding your devices (TV, STB, Blu-ray, Audio, Game, Media, Soundbar). You can search by brand/model or test functions.

How to set up TV with Google to use voice on the Smart Control Pro

If you have a TV running the Google TV Operating System, for example a Sony or TCL TV, most of the functionality works by infrared (IR). But in order to use voice search, it is necessary to pair the remote with the TV using Bluetooth Low Energy (BLE). To do this:

Step 1 – Set up your TV

Firstly install the My Nevo app and follow the instructions to communicate with the Smart Control Pro remote. The app will check to see if your remote has the latest firmware and if it doesn't it will automatically update the remote.

Once this has been done you will be prompted to set up your TV. Select the brand of your TV and the app will ask you to test some keys to see if it works. You can test all the keys on your remote, including for example the Netflix key to make sure you have exactly the right code. If there is a key you have on your original remote that is not working on the Smart Control Pro, select Try Next. Once the keys work, select Keys Work. Your TV is now set up.



Step 2 – Pair the remote with the TV via Bluetooth

Once your TV has been set up, the next step is to pair the remote with the TV via Bluetooth. To do this, select the option to add another device, and select Streaming Device. Next select Google TV.

The next step is to prepare your TV to be paired with the Smart Control. Please use your TV's ORIGINAL remote control to do the following:

- Select the Setting icon on your TV (generally speaking a cog on the top right) and scroll to the setting for adding remotes and/or accessory.
- Select the option for adding an accessory - the TV should start searching for a new accessory.
- Following the instructions on the app, hold down the Home key on the Smart Control Pro for 10 seconds, until the blue Stream LED starts blinking.



- The remote should appear in the list of accessories to pair it should appear as "AR". If it does not appear in a few seconds, press back on the original remote and search again.
- Once the AR remote appears press OK / Select on the original remote control. The TV should then pair with the remote.

Using the Voice search

Once the procedure has been completed, you can use Voice Search on your TV by selecting the Stream Device mode, or the Watch Movie Activity mode. Then when want to use Voice, hold down the Menu/Mic button and speak into the hole in the top center of the remote.

Image: The Urc7966 remote control shown with its instruction manual, illustrating the setup process.

2. SimpleSet

SimpleSet allows for quick setup of popular brands using a single digit. This method can set up your remote in under 30 seconds for most common devices.

3. Code Setup

For devices not covered by SimpleSet or the app's direct search, you can use the standard code setup method. This involves entering a specific code from the provided code list (or online database) for your device's brand and type.

Setup Video Guide

Video: Official 'One For All Smart Control Pro - Getting Started' guide, demonstrating initial setup steps.

Operating the Remote

The Urc7966 Smart Control Pro 6 offers intuitive control over your devices through various modes and features.

1. Device Mode

In Device Mode, the remote behaves exactly as your original remote. All keys will control the device you have selected. To control a device, just press the key that corresponds to the device type you set up (e.g., TV, STB, BLU, AUD, S.BAR, STREAM).

2. Activities

Activities are combinations of devices. Up to 3 devices can be combined into one activity. These typically include your TV, an audio device (like a soundbar), and a source device (like a streaming box or Blu-ray player). The Smart Control Pro features 3 activities: Watch TV, Watch Movie, and Listen to Music.

When you press an activity key, the remote ensures the devices you want to control are powered on and the correct input on your TV is selected. For example, if you set up a streaming box and select 'Watch Movie', the remote will power on your TV, streaming box, and soundbar, and ensure the TV is on the correct HDMI input.

3. Macros

A macro is a series of functions or commands programmed into a single key. This allows you to execute multiple actions with just one press of a button. For example, you could program a macro to switch inputs on your TV and AV receiver, and then press play on your Blu-ray player.

4. App Shortcut Keys

The remote features four dedicated app shortcut keys (Netflix, Prime Video, Disney+, YouTube) that can be programmed to directly launch your favorite streaming services. These keys are designed to resemble the icons of the respective apps.



Image: The remote's dedicated app shortcut buttons for popular streaming services.

Features

1. Full Backlight

The Urc7966 remote features a full backlight, making it easy to use in dimly lit environments. The keys illuminate to improve visibility and user experience.



Image: The backlit keys of the Urc7966 remote, enhancing visibility in low light.

2. Remote Finder

If you misplace your remote, the My Nevo App includes a 'Remote Finder' function. Simply tap a button in the app, and your remote will emit a beeping sound, helping you locate it.

Specifications

- **Product Dimensions:** 10 x 5.8 x 1.3 inches
- **Item Weight:** 6.2 ounces
- **Item Model Number:** URC7966
- **Brand:** One For All
- **Special Feature:** Backlit
- **Color:** Black
- **Max Number of Supported Devices:** 6
- **Compatible Devices:** Television, Streaming Device, Soundbar, Set Top Box, SKY Q, Blu-ray, Gaming Console, Media Device

Troubleshooting

If you encounter issues with your Urc7966 Smart Control Pro 6 remote, please refer to the following common problems and solutions:

- **App Connectivity Issues:** Some users report difficulty connecting the remote to the My Nevo App, especially with certain phone models. Ensure your phone's Bluetooth is enabled and try restarting both the app and the remote. If issues persist, try using a different compatible device for initial setup.
- **Device Compatibility:** While the remote is designed to be universal, some specific devices (e.g., certain soundbars, older set-top boxes) may not be fully supported or may require manual code entry/learning. If a device is not responding correctly, try alternative codes or use the learning function.
- **Learning Function Failures:** If learned commands are forgotten or do not work precisely, ensure the original remote is functioning correctly and that the remote is placed correctly during the learning process. Try repeating the learning process.
- **Battery Drain:** If the remote consumes batteries quickly, ensure you are using fresh, high-quality batteries. The remote is designed for efficient power usage, but frequent use of backlit keys or

complex macros may impact battery life.

- **Wi-Fi Requirement:** Note that the app-based setup and some smart features may require a stable Wi-Fi connection.

Warranty and Support

For warranty information, technical support, or to access the latest code lists and FAQs, please visit the official One For All website or contact their customer service. Keep your proof of purchase for warranty claims.
