

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [WHYKJTEK](#) /
- > [WHYKJTEK G18 Wireless Earbuds User Manual](#)

WHYKJTEK G18

WHYKJTEK G18 Wireless Earbuds User Manual

Model: G18

1. INTRODUCTION

Thank you for choosing the WHYKJTEK G18 Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual carefully before use.



Image 1.1: WHYKJTEK G18 Wireless Earbuds in their charging case, displaying battery levels on the LED screen.

2. PACKAGE CONTENTS

- WHYKJTEK G18 Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- User Manual

3. PRODUCT OVERVIEW

The G18 earbuds feature a compact design with advanced Bluetooth 5.3 technology, 13mm dynamic drivers for clear audio, and an IPX7 waterproof rating. The charging case includes an LED digital display to show battery status.

3.1 LED Digital Display

The charging case is equipped with a clear LED digital display that shows the remaining battery percentage of the charging case and the individual charge levels of each earbud. This allows for easy monitoring of power status.



Image 3.1: The charging case's LED display indicating full charge (100%) for the case and both earbuds.

4. CHARGING THE EARBUDS AND CASE

To ensure optimal performance, fully charge the earbuds and charging case before first use.

4.1 Charging the Earbuds

1. Place the earbuds into the charging case. Ensure they are correctly seated in their respective slots (L for left, R for right).
2. The earbuds will automatically begin charging. The LED display on the case will show their individual charge status.

4.2 Charging the Case

1. Connect the provided USB-C charging cable to the charging port on the case.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED display will show the charging progress of the case. When fully charged, the display will indicate 100%.

A single charge provides approximately 8 hours of listening time for the earbuds. The charging case provides an additional 5 charges, extending total playtime to up to 40 hours.



Image 4.1: Illustration of the G18 earbuds' battery life, indicating 6 hours on a single charge and 40 hours total with the charging case.

5. PAIRING AND CONNECTION

The G18 earbuds utilize Bluetooth 5.3 technology for stable and efficient connections.

5.1 Initial Pairing

1. Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "G18" in the list of available Bluetooth devices and select it to connect.
4. Once connected, a voice prompt will confirm successful pairing.

5.2 Automatic Reconnection

After the initial pairing, the earbuds will automatically connect to the last paired device when removed from the charging case, provided Bluetooth is enabled on the device and it is within range.

ONE STEP PARING & WIDE COMPATIBILITY

Auto Pairing When Open the Charging Case After First Connection. Easy Connection with Bluetooth <G18> Compatible with iOS/ Android/ Windows etc.



Image 5.1: Illustration of the one-step pairing process, showing the earbuds connecting to a smartphone via Bluetooth.

6. WEARING THE EARBUDS

For optimal sound quality and comfort, ensure the earbuds are properly seated in your ears.

1. Identify the Left (L) and Right (R) earbuds.
2. Gently insert each earbud into the corresponding ear canal.
3. Adjust the earbud until it feels secure and comfortable. The lightweight design (3.5g per earbud) is intended for extended wear without discomfort.

LIGHTWEIGHT AND COMFORTABLE

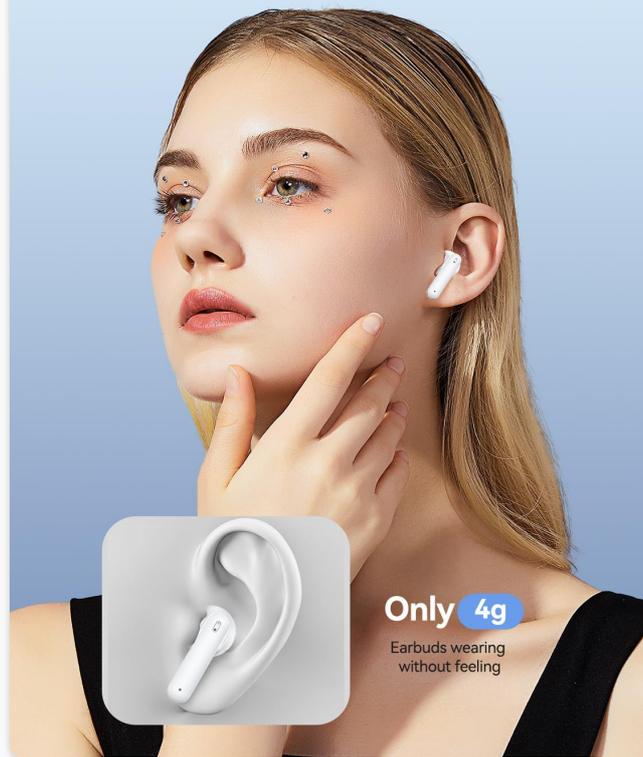


Image 6.1: A user wearing the G18 earbud, demonstrating its comfortable and lightweight fit.

7. TOUCH CONTROLS

The G18 earbuds feature intuitive touch controls on each earbud for managing audio playback, calls, and voice assistant activation.

Action	Left Earbud	Right Earbud
Play/Pause Music	Single tap	Single tap
Next Track		Tap twice
Previous Track	Tap twice	
Volume Up		Long press for 2s
Volume Down	Long press for 2s	
Answer/End Call	Single tap	Single tap
Reject Call	Tap twice	Tap twice
Activate Voice Assistant (Siri)	Triple tap	Triple tap

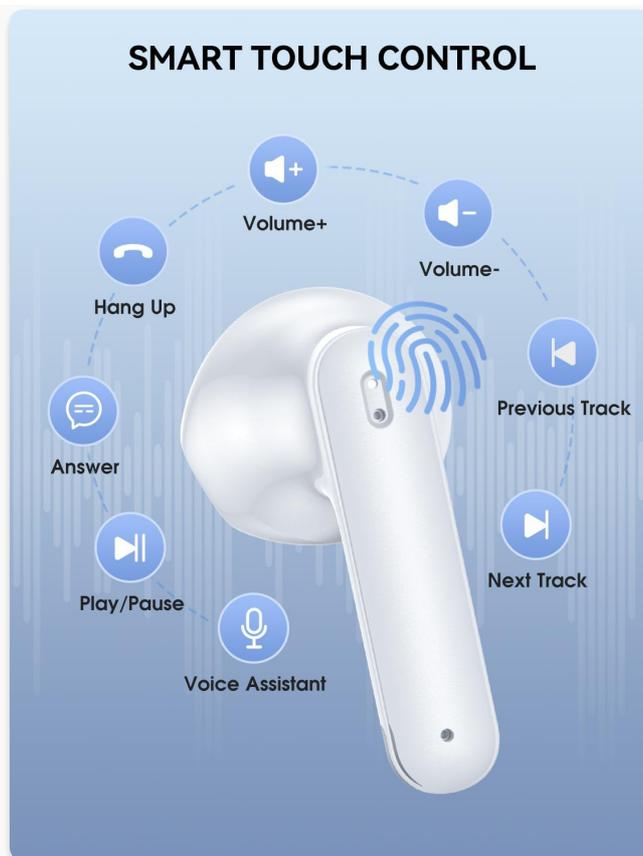


Image 7.1: Visual guide to the touch control functions on each earbud.

8. WATER RESISTANCE (IPX7)

The G18 earbuds are rated IPX7 waterproof, meaning they are protected against immersion in water up to 1 meter for up to 30 minutes. This makes them suitable for daily splashes, sweat, and rain.

Important Note:

- The IPX7 rating applies to the earbuds only, not the charging case.
- Do not use the earbuds while swimming, as sound transmission is significantly impaired underwater.
- Avoid exposing the earbuds to hot water, steam, or saltwater.
- Ensure the earbuds are completely dry before placing them back into the charging case to prevent damage.

9. MAINTENANCE

9.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Gently remove any earwax or debris from the earbud mesh using a small, soft brush.

9.2 Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store the device in a cool, dry place, away from extreme temperatures and direct sunlight.

10. TROUBLESHOOTING

If you encounter any issues with your WHYKJTEK G18 earbuds, please refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing	<ul style="list-style-type: none">◦ Ensure earbuds are charged.◦ Place earbuds back in the case, close, then reopen to re-enter pairing mode.◦ Turn off and on Bluetooth on your device.◦ Forget/delete "G18" from your device's Bluetooth list and try pairing again.
Only one earbud working	<ul style="list-style-type: none">◦ Ensure both earbuds are charged.◦ Place both earbuds back in the charging case, close the lid, wait a few seconds, then open the lid and try again.◦ Reset the earbuds (refer to manufacturer's website for specific reset instructions if needed).
Low volume or poor sound quality	<ul style="list-style-type: none">◦ Adjust the volume on both your device and the earbuds.◦ Ensure earbuds are clean and free of debris.◦ Check for proper fit in your ears.◦ Ensure there are no obstructions between the earbuds and your device.
Charging case not charging	<ul style="list-style-type: none">◦ Ensure the USB-C cable is securely connected to both the case and the power source.◦ Try a different USB-C cable or power adapter.◦ Ensure the charging port on the case is clean.

11. SPECIFICATIONS

Below are the technical specifications for the WHYKJTEK G18 Wireless Earbuds:

Feature	Detail
Model Name	G18
Brand	WHYKJTEK
Connectivity Technology	Wireless (Bluetooth 5.3)
Driver Size	13mm Dynamic
Playtime (Earbuds)	Up to 8 hours
Total Playtime (with Case)	Up to 40 hours
Water Resistance Rating	IPX7 (Earbuds only)

Feature	Detail
Earbud Weight	Approx. 3.5g per earbud
Control Method	Touch
Microphones	4 (with ENC for calls)
Compatible Devices	Desktops, Phones, Laptops, Tablets
Battery Composition	Lithium-polymer



Image 11.1: Internal view of an earbud highlighting the 13mm dynamic driver responsible for audio output.

12. SAFETY INFORMATION

- Do not disassemble, repair, or modify the product.
- Keep the product away from extreme temperatures, direct sunlight, and open flames.
- Avoid dropping or subjecting the product to strong impacts.
- Keep out of reach of children and pets.
- Do not use the earbuds at high volume for extended periods to prevent hearing damage.
- Be aware of your surroundings when using earbuds, especially in traffic or hazardous environments.

13. WARRANTY AND SUPPORT

Information regarding product warranty and availability of spare parts is not provided in the current product data. For support or further inquiries, please refer to the retailer or manufacturer's official contact channels.

© 2023 WHYKJTEK. All rights reserved.