

[Manuals.plus](#) /

› [wolezek](#) /

› Wolezek BL-C30C 3-Head Full Spectrum LED Grow Light Instruction Manual

wolezek BL-C30C

Wolezek BL-C30C 3-Head Full Spectrum LED Grow Light Instruction Manual

PRODUCT OVERVIEW

The Wolezek BL-C30C 3-Head Full Spectrum LED Grow Light is designed to provide optimal lighting for indoor plants at all growth stages. Equipped with 660nm/3000K/6000K LED chips, it mimics natural sunlight to promote photosynthesis, germination, growth, flowering, and fruiting. This grow light features a convenient auto on/off timer, multiple light modes, and dimmable brightness levels, making it adaptable for various plant needs.



Image: Wolezek 3-Head Full Spectrum LED Grow Light with clip and adjustable goosenecks.

WHAT'S IN THE BOX

- Wolezek BL-C30C 3-Head LED Grow Light with integrated controller
- USB Power Adapter
- User Manual



Image: The grow light components including the clip, goosenecks, LED bars, controller, USB connector, and power adapter.

SETUP INSTRUCTIONS

1. **Attach the Grow Light:** Secure the non-slip clamp to a stable surface such as a table, shelf, or plant stand. Ensure the clamp is firmly attached to prevent accidental falls.
2. **Adjust Goosenecks:** Position the 360-degree adjustable goosenecks to direct the light bars towards your plants. Adjust the height and angle to ensure optimal light coverage for all plants.
3. **Connect Power:** Insert the USB connector into the provided USB power adapter. Plug the adapter into a standard electrical outlet.
4. **Power On:** Press the Power Button on the inline controller to turn on the grow light.



Image: A Wolezek grow light with its flexible goosenecks positioned over several potted plants on a shelf.

OPERATING INSTRUCTIONS

The Wolezek grow light offers various settings to customize lighting for your plants.

Controller Functions:

- **Power Button:** Turns the grow light ON or OFF.
- **Brightness Adjustable Button:** Adjusts the light intensity through 5 levels (20%, 40%, 60%, 80%, 100%).
- **Switch Lighting Color Button:** Cycles through 3 light modes:
 - **White Light Only:** Promotes plant growth and chlorophyll synthesis.
 - **Warm White + Red Light:** Enhances flowering, fruiting, and photosynthesis.
 - **Full Spectrum:** Combines all wavelengths for comprehensive plant development.
- **Timing Switch Button:** Sets the automatic timer for 6, 12, or 16 hours. Once set, the light will automatically turn on and off daily at the selected interval.




3 Lighting Modes

Flexible for different growth stages




5 Dimming Levels

Options of different brightness for 20%-100%

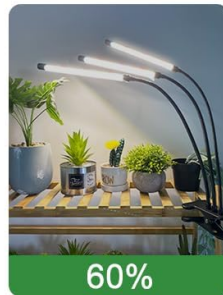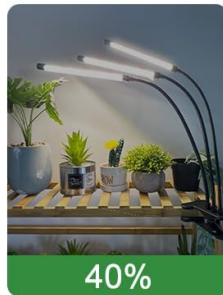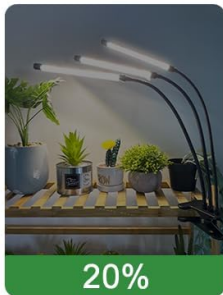

3 Timing Settings

Over 12 hours timer settings

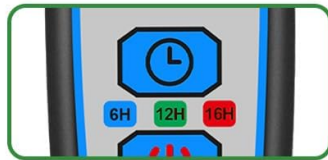

6 Hours



12 Hours



16 Hours

Image: Visual representation of the three lighting modes (Full Spectrum, White+Red, White), five dimming levels (20% to 100%), and three timing settings (6H, 12H, 16H).

Cycle Memory Timer

Takes Good Care of Plant Growth when You are Busy on Work or Have a Vacation



Image: Close-up of the inline controller showing buttons for brightness adjustment, light mode selection, timer settings, and power.

Video: Wolezek 6000K Grow Light with Clip

Video Description: An official product video demonstrating the features and usage of the Wolezek 6000K Grow Light with Clip, including its flexible design and light settings.

MAINTENANCE

- **Cleaning:** Periodically wipe the LED bars and goosenecks with a soft, dry cloth to remove dust and debris. Ensure the device is unplugged before cleaning.
- **Placement:** Ensure the grow light is placed in a well-ventilated area to prevent overheating. Avoid exposing the device to water or high humidity.
- **Cable Management:** Keep the power cord and goosenecks tidy to prevent tangling or damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	No power supply; loose connection; faulty adapter.	Check if the power adapter is securely plugged into the outlet and the USB connector is firmly attached. Try a different outlet or USB adapter.
Timer function not working	Timer not set correctly.	Ensure the timer button is pressed to select the desired duration (6H, 12H, or 16H). The indicator light for the selected duration should be on.
Lights are dim or flickering	Brightness level too low; power fluctuation.	Increase the brightness using the Brightness Adjustable Button. Ensure the power supply is stable.

SPECIFICATIONS

Feature	Detail
Brand	wolezek
Model Name	BL-C30C
Light Source Type	LED
Light Color	White (Full Spectrum: 660nm/3000K/6000K)
Number of Light Sources	3 Heads
Brightness Levels	5 (20%, 40%, 60%, 80%, 100%)
Light Modes	3 (White Light Only, Warm White + Red Light, Full Spectrum)
Timer Function	6H / 12H / 16H (Auto On/Off)
Control Method	Inline Remote Control
Mounting Type	Clip-on
Material	Aluminum
Product Dimensions	13.46"D x 5.63"W x 1.42"H
Item Weight	1.32 pounds
Indoor/Outdoor Usage	Indoor use only

WARRANTY AND SUPPORT

Wolezek provides 24/7 customer service. If you encounter any problems or are not satisfied with your product, please contact us via Amazon for satisfactory service.

