

**Silvercrest SHBS 3.7 D5**

# Silvercrest SHBS 3.7 D5 Cordless Hair and Beard Trimmer User Manual

Model: SHBS 3.7 D5 | Brand: Silvercrest

## 1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in injury or damage to the device.

- **Warning:** Not suitable for use on infants.
- Keep the device away from water sources. Do not use near bathtubs, showers, basins, or other vessels containing water.
- Always follow the recommended cleaning and maintenance procedures.
- The use of precision-ground stainless steel blades can cause skin irritation or eye injuries if not handled properly. Exercise caution.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## 2. PRODUCT OVERVIEW

The Silvercrest SHBS 3.7 D5 is a versatile 5-in-1 cordless hair and beard trimmer designed for comprehensive grooming. It features precision-ground stainless steel blades for a clean and accurate cut. The device can be operated cordlessly using its integrated rechargeable battery or directly from the mains power supply (Direct-Drive function).







Figure 2.1: Front view of the Silvercrest SHBS 3.7 D5 trimmer, showcasing its ergonomic design and control buttons.

## Key Features:

- **5-in-1 Functionality:** Includes attachments for cutting, trimming, contouring, styling, and shaving.
- **Precision-Ground Stainless Steel Blades:** Ensures sharp and durable cutting performance.
- **Fine Adjustment Slider:** For precise hair and beard cutting.
- **Cordless or Corded Operation:** Use with the rechargeable battery or directly from the power outlet.
- **Adjustable Comb Attachment:** A dedicated comb attachment with a dial for setting cutting lengths from 1 to 10 mm for the hair cutting attachment.
- **Precision Trimming Attachment:** Specifically designed for contouring mustaches, eyebrows, and sideburns.

## 3. PACKAGE CONTENTS

Carefully unpack all items and check for completeness and any signs of damage. If any parts are missing or damaged, contact your retailer.



Figure 3.1: Overview of all components included in the package, such as various trimmer heads, comb attachments, charging stand, and cleaning accessories.

## The package typically includes:

- 1x Silvercrest SHBS 3.7 D5 Trimmer Unit
- 1x Hair Cutting Attachment
- 1x Beard Trimming Attachment

- 1x Precision Trimming Attachment
- 1x Nose/Ear Hair Trimmer Attachment
- 1x Shaver Attachment
- 1x Adjustable Comb Attachment (1-10 mm)
- Multiple Fixed Comb Attachments (various lengths)
- 1x Charging Stand
- 1x Power Adapter
- 1x Cleaning Brush
- 1x Blade Oil
- 1x Hair Comb
- 1x Scissors
- 1x Storage Pouch

## 4. SETUP

---

### 4.1 Initial Charging

Before first use, fully charge the trimmer's battery. This ensures optimal performance and battery longevity.

1. Place the trimmer into the charging stand. Ensure it is seated correctly.
2. Connect the power adapter to the charging stand.
3. Plug the power adapter into a suitable wall outlet.
4. The charging indicator light on the stand will illuminate (e.g., red for charging, green for fully charged).
5. Allow the trimmer to charge for approximately 8-12 hours for the first charge, or until the indicator shows a full charge.





Figure 4.1: The trimmer placed in its charging stand, showing the charging indicator lights.

## 4.2 Attaching and Detaching Trimmer Heads

The trimmer comes with various interchangeable heads for different grooming needs.

- **To Attach:** Align the desired trimmer head with the main unit and gently push it down until it clicks securely into place.
- **To Detach:** Hold the main unit firmly and push the release button (if present) or gently pull the head upwards until it detaches. Refer to the specific instructions for each head if unsure.

## 5. OPERATION

### 5.1 Powering On/Off

To turn the trimmer on or off, press the power button located on the front of the device.

## 5.2 Using Different Attachments

Select the appropriate attachment based on your grooming requirements.



Figure 5.1: The trimmer unit displayed with its range of interchangeable heads, including hair, beard, precision, and nose/ear trimmer attachments.

- **Hair Cutting Attachment:** Use for general hair cutting. Attach the adjustable comb (1-10 mm) or fixed combs for desired length.
- **Beard Trimming Attachment:** Ideal for shaping and maintaining beard length.
- **Precision Trimming Attachment:** Perfect for detailing sideburns, necklines, mustaches, and eyebrows.
- **Nose/Ear Hair Trimmer Attachment:** For safe and comfortable removal of unwanted nose and ear hair.
- **Shaver Attachment:** For a close finish on small areas.

## 5.3 Adjusting Cutting Length (Hair Cutting Attachment)

For the hair cutting attachment, you can precisely adjust the cutting length:

- Attach the adjustable comb to the hair cutting head.
- Use the dial on the comb attachment to select a cutting length between 1 mm and 10 mm.
- For shorter lengths or specific styles, use the fixed comb attachments provided.



Figure 5.2: A detailed view of the precision-ground stainless steel blade, highlighting its sharp teeth and robust construction.

## 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your trimmer.

### 6.1 Cleaning the Blades

1. Turn off the trimmer and detach the cutting head.
2. Use the provided cleaning brush to remove any hair clippings from the blades and the trimmer body.
3. For a more thorough clean, some heads may be rinsed under running water (refer to specific head instructions for water resistance). Ensure the main unit is never exposed to water.
4. Allow all parts to air dry completely before reassembling.

### 6.2 Oiling the Blades

To maintain the sharpness and smooth operation of the blades, apply a small amount of the provided blade oil

regularly (e.g., after every few uses).

1. Apply 1-2 drops of oil to the teeth of the blade.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

### 6.3 Storage

When not in use, store the trimmer and its accessories in the provided storage pouch in a dry, cool place, away from direct sunlight and moisture.

## 7. TROUBLESHOOTING

If you encounter issues with your Silvercrest SHBS 3.7 D5 trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully. Use the Direct-Drive function if immediate use is needed.
Trimmer cuts poorly or pulls hair.	Blades are dirty or not oiled.	Clean the blades thoroughly and apply blade oil.
Attachment does not fit securely.	Incorrect alignment or debris.	Ensure the attachment is correctly aligned and push firmly until it clicks. Check for any obstructions.
Charging indicator not working.	Power adapter or charging stand issue.	Check power connections. Try a different outlet. Ensure trimmer is correctly seated in the stand.

If the problem persists after attempting these solutions, please contact customer support.

## 8. TECHNICAL SPECIFICATIONS

Specification	Detail
Model Name	SHBS 3.7 D5
Brand	Silvercrest
Power Source	Battery Powered (Rechargeable) / Mains (Direct-Drive)
Blade Material	Precision-Ground Stainless Steel
Recommended Use	Hair and Beard Care
Color	Silver
Hair Type Compatibility	All Hair Types

Specification	Detail
Special Feature	5-in-1 Functionality
Target Group	Unisex
ASIN	B0CKTF74SP

## 9. WARRANTY AND SUPPORT

Specific warranty details for the Silvercrest SHBS 3.7 D5 are not provided in this manual. For information regarding warranty coverage, terms, and conditions, please refer to the documentation included with your purchase or contact the retailer or manufacturer directly.

For technical support, spare parts, or service inquiries, please contact the Silvercrest customer service department or your point of purchase. Keep your proof of purchase handy when contacting support.