

LEGAMI SAS0001

LEGAMI Super Arcade Station Mini Portable Console User Manual

1. INTRODUCTION

The LEGAMI Super Arcade Station is a compact, portable gaming console designed to provide entertainment with 152 classic games. Its vintage design and small size make it ideal for gaming on the go. This manual provides essential information for the safe and effective use of your console.

2. SAFETY INFORMATION

Please read all safety instructions before using the device to prevent injury or damage.

- **Choking Hazard:** This product contains small parts and is not suitable for children under 3 years of age. Adult supervision is recommended for all users.
- **Battery Safety:**
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries promptly.
 - Do not short-circuit the battery terminals.
 - Dispose of batteries responsibly according to local regulations.
- **Water Exposure:** Keep the console away from water and moisture.
- **Temperature:** Avoid exposing the console to extreme temperatures.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use liquid cleaners.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- LEGAMI Super Arcade Station Mini Portable Console
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the console's components and controls.



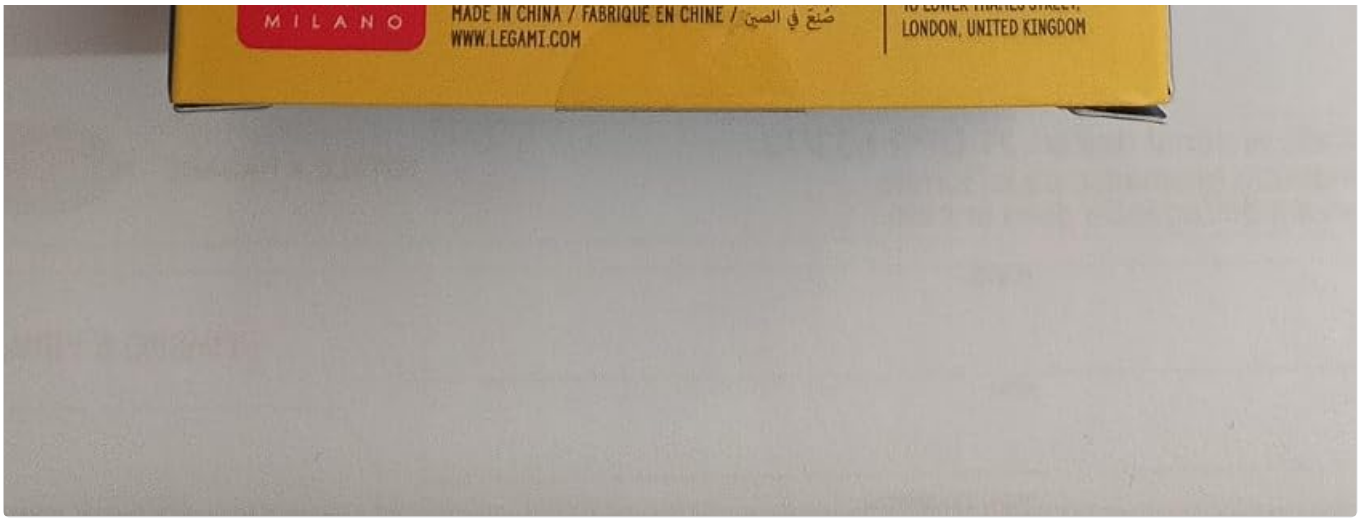


Image: Back of the console packaging illustrating the various controls and features.

- **1.8" TFT Screen:** Displays game visuals.
- **ON/OFF Switch:** Powers the console on or off.
- **VOLUME Dial:** Adjusts the sound level.
- **Directional Arrows (D-Pad):** Used for movement and menu navigation.
- **Action Buttons (A, B):** Used for in-game actions and selections.
- **RESET Button:** Restarts the console and returns to the game selection screen.
- **START/PAUSE Button:** Starts a game or pauses gameplay.
- **Speaker:** Outputs game audio.
- **Hole for Strap:** Allows attachment of a wrist strap (not included).

5. SETUP

5.1 Battery Installation

The console requires 3 AAA batteries (not included).

1. Locate the battery compartment cover on the back of the console.
2. Use a small screwdriver (not included) to unscrew the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

5.2 Powering On/Off

1. To power on the console, slide the ON/OFF switch to the 'ON' position.
2. To power off the console, slide the ON/OFF switch to the 'OFF' position.

6. OPERATING INSTRUCTIONS

6.1 Game Selection

1. Once powered on, the console will display the game selection menu.
2. Use the Directional Arrows to scroll through the list of 152 available games.
3. Press the 'A' or 'B' Action Button to select and start a game.

6.2 Playing Games

Controls vary by game, but generally:

- Use the Directional Arrows for character movement or navigation.
- Use the 'A' and 'B' Action Buttons for jumping, shooting, or other in-game actions.
- Press the START/PAUSE button to pause or resume gameplay.

6.3 Volume Adjustment

Rotate the VOLUME dial located on the side of the console to increase or decrease the sound level.

6.4 Resetting the Console

To return to the main game selection menu at any time, press the RESET button.

7. MAINTENANCE

- **Cleaning:** Wipe the console with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the console in a cool, dry place away from direct sunlight when not in use. If storing for an extended period, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the console or subjecting it to strong impacts.

8. TROUBLESHOOTING

If you encounter issues, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Console does not power on.	Batteries are dead or incorrectly inserted. ON/OFF switch is off.	Replace batteries with new ones, ensuring correct polarity. Slide ON/OFF switch to 'ON'.
No sound or low volume.	Volume dial is set too low. Speaker is obstructed.	Rotate the VOLUME dial to increase sound. Ensure speaker is clear of obstructions.
Screen is blank or frozen.	Temporary software glitch.	Press the RESET button. If issue persists, power off and on again.
Buttons are unresponsive.	Temporary software glitch.	Press the RESET button. If issue persists, power off and on again.

9. SPECIFICATIONS

Feature	Detail
Model Number	SAS0001
Dimensions (H x W x D)	9.4 cm x 5.7 cm x 2.2 cm
Weight	71 grams

Feature	Detail
Screen Size	1.8 inches
Display Type	TFT
Number of Games	152 classic games
Power Source	3 x AAA Batteries (not included)
Material	Plastic
Language	English
Controller Type	Button Control

10. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or further assistance, please contact the retailer where the product was purchased or visit the official LEGAMI website.

11. RECYCLING INFORMATION

Please dispose of this product and its batteries responsibly at the end of their life cycle. Do not dispose of electronic devices or batteries with household waste. Look for designated collection points or recycling facilities in your area.

For more information on recycling, you may visit the official LEGAMI recycling page:[LEGAMI Recycling Information](#)

This product complies with relevant international standards. For compliance details, you may refer to certifications such as those found via [GSO Certification](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question