

Trevi XR 8A01

Trevi XR 8A01 MINIPARTY Karaoke Speaker User Manual

Model: XR 8A01

1. INTRODUCTION

Thank you for purchasing the Trevi XR 8A01 MINIPARTY Karaoke Speaker. This portable amplified speaker is designed to provide entertainment with its wireless audio capabilities, karaoke function, and vibrant disco lights. Please read this manual carefully before using the product to ensure proper operation and to maximize your enjoyment.

2. PRODUCT OVERVIEW

2.1 Included Components

- Trevi XR 8A01 MINIPARTY Karaoke Speaker
- Wireless Microphone
- USB Type-C Charging Cable (not explicitly listed but implied by 'rechargeable via USB type C')
- User Manual
- Warranty Certificate

2.2 Speaker and Microphone Layout



Image 2.2.1: Front view of the Trevi XR 8A01 MINIPARTY speaker with its wireless microphone. The speaker features a central grille and a multi-color LED light frame. The microphone has power and volume controls.



Image 2.2.2: Top panel of the speaker showing control buttons for power, mode, volume, and playback functions, along with the Trevi logo.



Image 2.2.3: Rear panel of the speaker displaying the USB port, AUX-IN port, Micro SD card slot, and DC 5V USB Type-C charging port.

3. SETUP

3.1 Charging the Speaker and Microphone

1. Connect the provided USB Type-C charging cable to the DC 5V port on the speaker.
2. Connect the other end of the cable to a standard USB power adapter (not included) or a computer USB port.
3. The charging indicator will illuminate. Allow sufficient time for a full charge before first use.
4. The wireless microphone also has an internal rechargeable battery. Charge it using its dedicated USB Type-C port (if available) or as indicated in its separate instructions.

3.2 Initial Power On

1. Press and hold the **Power button** on the speaker for a few seconds to turn it on.
2. Press and hold the **Power button** on the wireless microphone to turn it on. The microphone should automatically pair with the speaker.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Connection

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED.

2. Enable Bluetooth on your smartphone, tablet, or other compatible device.
3. Search for available Bluetooth devices and select "**Trevi XR 8A01**" (or similar name) from the list.
4. Once connected, the speaker will emit a confirmation sound, and the LED indicator will stop flashing.

4.2 TWS (True Wireless Stereo) Function

The TWS function allows you to pair two Trevi XR 8A01 MINIPARTY speakers wirelessly for a stereo sound experience.

1. Ensure both XR 8A01 speakers are turned on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), press and hold the **TWS button** (if available, or a designated pairing button) for a few seconds.
3. The speakers will attempt to pair with each other. A confirmation sound will indicate successful pairing.
4. Once paired, connect your device to the primary speaker via Bluetooth as described in Section 4.1. Audio will now play through both speakers in stereo.

4.3 USB / Micro SD Playback

1. Insert a USB flash drive or a Micro SD card (with MP3 audio files) into the respective port on the speaker.
2. The speaker will automatically switch to USB/Micro SD mode and begin playing audio. If not, press the **Mode button** to cycle through input sources.
3. Use the **Play/Pause**, **Next Track**, and **Previous Track** buttons to control playback.

4.4 AUX-IN Connection

1. Connect one end of a 3.5mm audio cable (not included) to the AUX-IN port on the speaker.
2. Connect the other end to the audio output jack of your external device (e.g., MP3 player, laptop).
3. Press the **Mode button** on the speaker until it enters AUX-IN mode.
4. Control playback and volume from your external device.

4.5 Karaoke Function and Voice Effects

The speaker comes with a wireless microphone for karaoke performances.

1. Ensure the wireless microphone is turned on and paired with the speaker.
2. Play your desired backing track via Bluetooth, USB, Micro SD, or AUX-IN.
3. Sing into the microphone. Use the volume controls on the microphone to adjust your vocal level.
4. To activate or change voice effects, press the designated **Voice Effect button** on the speaker or microphone (refer to specific button labels).



Image 4.5.1: A user holding the wireless microphone next to the speaker, which displays dynamic multi-color disco lights, enhancing the karaoke experience.

4.6 Disco Light Function

The speaker features a multi-color disco light frame to enhance the party atmosphere.

1. The disco lights typically activate automatically when the speaker is turned on.
2. To cycle through different light modes or turn the lights off/on, press the **Light button** (if available) on the speaker.



Image 4.6.1: The speaker illuminated with a vibrant red disco light effect, demonstrating one of its visual modes.

5. MAINTENANCE

- Clean the speaker and microphone with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the device away from water, moisture, and extreme temperatures.
- Store in a cool, dry place when not in use.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.

6. TROUBLESHOOTING

6.1 No Power

- Ensure the speaker and microphone are fully charged.
- Check the charging cable and power source.

6.2 No Sound

- Increase the volume on both the speaker and your connected device.
- Ensure the correct input mode (Bluetooth, USB, AUX) is selected.

- For Bluetooth, ensure the device is properly paired. Try re-pairing.
- For microphone, ensure it is turned on and paired with the speaker.

6.3 Bluetooth Disconnection

- Ensure your device is within the effective range (typically 10 meters) of the speaker.
- Check for interference from other wireless devices.
- Try disconnecting and re-pairing the Bluetooth connection.

6.4 TWS Pairing Failure

- Ensure both speakers are fully charged and not connected to any other Bluetooth device.
- Place the speakers close to each other during the pairing process.
- Repeat the TWS pairing steps carefully.

7. SPECIFICATIONS

Feature	Detail
Model Name	XR 8A01
Brand	Trevi
Power Output	10 Watts
Connectivity Technology	Bluetooth, USB, Auxiliary
Wireless Communication Technology	Bluetooth
Compatible Devices	Smartphone, Tablet, Laptop, MP3 Player
Audio Output Mode	Stereo
Control Method	Touch
Special Features	Bluetooth, Lightweight, Portable
Product Dimensions (L x W x H)	7 x 14 x 9 cm
Product Weight	500 grams
Material	Plastic or plastic and other materials
Color	White
Power Source	Rechargeable Battery (USB Type-C)
Included Components	User manual, warranty certificate, wireless microphone

8. WARRANTY AND SUPPORT

This product is covered by a warranty as detailed in the included warranty certificate. Please refer to the certificate for specific terms and conditions.

For technical support or service inquiries, please contact your retailer or the official Trevi customer service channels.

