#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Beko /
- > BEKO Steam Iron SIM 3122 T User Manual

#### Beko SIM 3122 T

# **BEKO Steam Iron SIM 3122 T User Manual**

Model: SIM 3122 T

# IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your BEKO Steam Iron SIM 3122 T and retain them for future reference. Incorrect use may lead to electric shock, fire, or injury.

- Always unplug the iron from the power outlet when filling with water, emptying, or when not in use.
- Do not immerse the iron, power cord, or plug in water or other liquids.
- Keep the iron and its cord out of reach of children.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Use the iron only for its intended household purpose.
- The soleplate can become extremely hot. Avoid direct contact with skin.

#### **PRODUCT OVERVIEW**

Familiarize yourself with the components of your BEKO Steam Iron SIM 3122 T.



Image: Top view of the BEKO Steam Iron SIM 3122 T, showing the water tank, handle, temperature dial, and steam buttons. The iron is turquoise and white.

- 1. Water Spray Nozzle
- 2. Water Filling Inlet
- 3. Steam Control Slider
- 4. Spray Button
- 5. Steam Shot Button
- 6. Handle
- 7. Power Cord
- 8. Temperature Control Dial
- 9. Indicator Light
- 10. Soleplate (Ceramic)
- 11. Water Tank

# **S**ETUP

# **Before First Use**

- 1. Remove any labels or protective film from the soleplate.
- 2. It is recommended to iron an old piece of fabric first to ensure no residue is left on the soleplate.

# **Filling the Water Tank**

- Ensure the iron is unplugged from the power outlet.
- Set the steam control slider to the "Dry Ironing" position (no steam).
- Open the water filling inlet cover.
- Fill the water tank with clean tap water up to the "MAX" mark. Do not overfill.
- Close the water filling inlet cover securely.
- For optimal performance and to prevent limescale buildup, distilled or demineralized water is recommended, especially in hard water areas.





Image: Side view of the BEKO Steam Iron SIM 3122 T, highlighting the transparent water tank and the water filling inlet.

#### **OPERATING INSTRUCTIONS**

#### **Temperature Setting**

- 1. Plug the iron into a suitable power outlet.
- 2. Turn the temperature control dial to the desired setting based on the fabric type. Refer to the fabric care labels on your garments.
- 3. The indicator light will illuminate, indicating the iron is heating. It will turn off when the set temperature is reached.

#### **Dry Ironing**

- Set the steam control slider to the "Dry Ironing" position.
- Select the appropriate temperature for your fabric.
- · Once the indicator light turns off, the iron is ready for dry ironing.

#### **Steam Ironing**

- Ensure the water tank is filled.
- Set the temperature control dial to a setting suitable for steam (usually 2 dots or 3 dots, indicated on the dial). Steam ironing is not recommended for very low temperatures.
- Once the indicator light turns off, slide the steam control slider to the desired steam level.
- For a powerful burst of steam, press the Steam Shot button. This is useful for stubborn creases or vertical steaming.
- To spray water, press the Spray button. This helps to moisten fabric for easier ironing.

#### **Vertical Steaming**

- Hang the garment on a hanger.
- Set the iron to a high temperature setting and allow it to heat up fully.
- Hold the iron vertically, a few centimeters away from the fabric, and press the Steam Shot button repeatedly.

#### **Automatic Shut-off**

The iron is equipped with an automatic shut-off safety feature. If the iron is left unattended:

- Horizontally (on its soleplate) for approximately 30 seconds, it will automatically turn off.
- Vertically (on its heel rest) for approximately 8 minutes, it will automatically turn off.
- To reactivate the iron, simply move it.

# MAINTENANCE AND CARE

# **Cleaning the Soleplate**

- Ensure the iron is unplugged and completely cool.
- Wipe the ceramic soleplate with a damp cloth and a non-abrasive cleaner if necessary.
- Do not use abrasive scouring pads or harsh chemicals, as these can damage the soleplate.





Image: Underside view of the BEKO Steam Iron SIM 3122 T, showing the ceramic soleplate with steam vents.

#### **Self-Cleaning and Anti-Limescale Function**

The iron features a self-cleaning function and an anti-limescale system to prolong its lifespan and maintain steam performance.

- 1. Fill the water tank to the MAX level.
- 2. Set the steam control to "Dry Ironing" and the temperature dial to maximum.
- 3. Plug in the iron and wait for the indicator light to turn off.
- 4. Unplug the iron.
- 5. Hold the iron horizontally over a sink.
- 6. Press and hold the self-clean button (if available, otherwise use the steam shot button repeatedly while shaking gently) until all the water, steam, and impurities are expelled from the soleplate.
- 7. Release the button and allow the iron to cool completely.
- 8. Wipe the soleplate with a damp cloth.

#### **Storage**

- Ensure the iron is unplugged and completely cool.
- Empty any remaining water from the tank.
- Wrap the power cord neatly around the heel rest.
- Store the iron upright on its heel rest in a safe, dry place.

#### **TROUBLESHOOTING**

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in, power outage, automatic shut-off activated.	Check power connection. Move the iron to reactivate if auto-shutoff engaged.
No steam or insufficient steam.	Water tank empty, temperature too low, steam control set to dry, limescale buildup.	Fill water tank. Increase temperature. Adjust steam control. Perform self-cleaning.

Problem	Possible Cause	Solution
Water leakage from soleplate.	Temperature too low for steam, water tank overfilled, anti-drip system issue.	Ensure iron is hot enough for steam. Do not overfill. If problem persists, contact support.
White flakes coming from soleplate.	Limescale buildup.	Perform self-cleaning function. Use distilled water to prevent future buildup.

# **S**PECIFICATIONS

Brand	Beko
Model Number	SIM3122T
Power / Wattage	2200 watts
Voltage	240 Volts
Product Dimensions	12.6 x 14.3 x 28.4 cm
Item Weight	1.88 Kilograms
Auto Shutoff	Yes
Special Features	Limescale Prevention, Drip Stop
Base Material	Ceramic
Water Tank Volume	240 ml (approx.)


# WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact BEKO customer support. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual, or require further assistance, please contact BEKO customer service through their official website or the contact details provided in your product packaging.

© 2023 Beko. All rights reserved.

#### Related Documents - SIM 3122 T

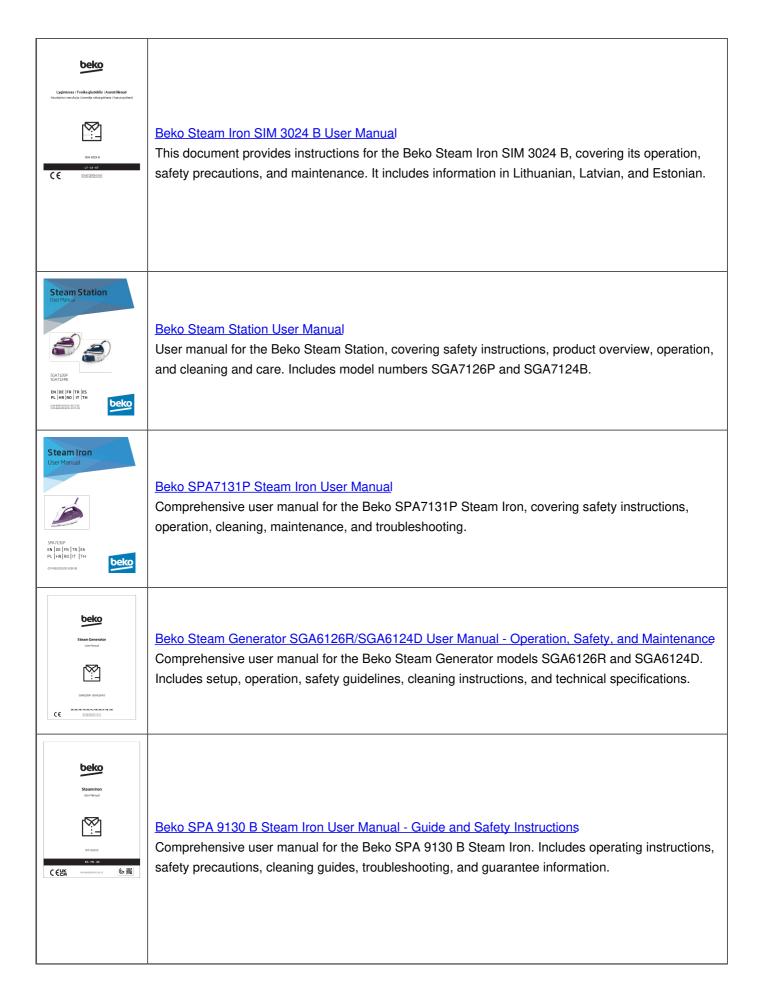



# Beko Steam Station User Manual - SGA 6126 R, SGA 6124 D

Comprehensive user manual for Beko Steam Station models SGA 6126 R and SGA 6124 D. Learn about safe operation, features like auto-off and self-cleaning, maintenance, and technical specifications for efficient garment care.