

[Manuals.plus](#) /

› [Accudart](#) /

› Accudart NOVA Electronic Dartboard User Manual

Accudart DA9450W

Accudart NOVA Electronic Dartboard User Manual

Model: DA9450W

INTRODUCTION

Thank you for purchasing the Accudart NOVA Electronic Dartboard. This manual provides detailed instructions for setting up, operating, and maintaining your dartboard to ensure optimal performance and enjoyment. Please read this manual thoroughly before use and retain it for future reference.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Accudart NOVA Electronic Dartboard with Cabinet
- AC Adapter
- 6 Soft Tip Darts with Replacement Tips
- Instruction Manual (this document)
- Mounting Hardware (screws, anchors)



Image: Accudart NOVA Electronic Dartboard with cabinet doors open, displaying the dartboard, integrated LED scoring display, and two sets of soft tip darts. The cabinet is black with a wood grain finish.

SETUP AND INSTALLATION

Mounting the Dartboard

The Accudart NOVA Electronic Dartboard is designed for wall mounting. Ensure the mounting surface is sturdy and capable of supporting the dartboard's weight.

1. **Choose Location:** Select a suitable wall location. The center of the dartboard (bullseye) should be 5 feet 8 inches (1.73 meters) from the floor. The throwing line should be 7 feet 9 ¼ inches (2.37 meters) from the face of the dartboard.
2. **Mark Holes:** Hold the dartboard cabinet against the wall at the desired height and mark the positions for the mounting screws. Use a level to ensure it is straight.
3. **Drill Holes:** Drill pilot holes at the marked locations. If mounting into drywall, insert the provided wall anchors.
4. **Secure Dartboard:** Insert screws into the pilot holes/anchors, leaving a small gap. Align the keyhole slots on the back of the dartboard cabinet with the screws and slide the dartboard down to secure it. Tighten the screws until the dartboard is firmly mounted.

Powering the Dartboard

The Accudart NOVA can be powered by either an AC adapter or AA batteries.

- **AC Adapter:** Plug the AC adapter into the DC input jack located on the dartboard. Plug the other end into a

standard electrical outlet.

- **Batteries:** Open the battery compartment (usually on the back or side) and insert three (3) AA batteries (not included), ensuring correct polarity (+/-).



Image: The Accudart NOVA Electronic Dartboard with its top-mounted LED lighting system illuminated, providing bright, shadow-free illumination of the dartboard surface. The lights activate automatically when the cabinet doors are opened.

OPERATING INSTRUCTIONS

Basic Operation

- **Power On/Off:** Press the **On/Off** button to turn the dartboard on or off.
- **LED Lighting:** The top-mounted LED lighting system automatically activates when the cabinet doors are opened and shuts off when they are closed.
- **Player Selection:** Use the **P 1/3/5/7** and **P 2/4/6/8** buttons to select the number of players (up to 8).
- **Game Selection:** Use the **Up** and **Down** buttons to scroll through the available game modes.

- **Start Game:** Press the **Enter** button to start the selected game.
- **Next Player/Turn:** Press the **Next** button to advance to the next player or turn.
- **Sound Control:** Press the **Sound** button to adjust or mute the dartboard's sound effects.



ADVANCED FEATURES

VIRTUAL OPPONENT GAME PLAY, DOUBLE IN/OUT OPTIONS,
HANDICAP AND MISSED DART FEATURES

ACCUDART

Image: Close-up view of the Accudart NOVA Electronic Dartboard's control panel, showing the LED scoring displays and various control buttons including On/Off, Up, Down, Enter, Next, Sound, Handicap, and Miss/Reset.



Image: Detailed view of the Accudart NOVA Electronic Dartboard's dual LED scoring displays, which track scores for up to eight players and include dedicated cricket scoring marks.

GAME MODES

The Accudart NOVA Electronic Dartboard features 35 game modes with 580 variations. Refer to the included game rule sheet (if separate) for detailed instructions on each game. Common game modes include:

- **301/501/701:** Standard '01 games where players subtract their score from a starting total.
- **Cricket:** A strategic game involving closing numbers 15-20 and the bullseye.
- **Count Up:** Players accumulate points to reach a target score.
- **Shanghai:** A game combining elements of '01 and Cricket.
- **Around the Clock:** Players must hit each number in sequence from 1 to 20.



Image: The Accudart NOVA Electronic Dartboard highlighting its extensive selection of 35 game modes and 580 variations, offering diverse gameplay options.

ADVANCED FEATURES

The NOVA dartboard includes several advanced features to enhance your gameplay:

- **Virtual Opponent:** Play against a computer-controlled opponent. Select difficulty levels to match your skill.
- **Double In/Out Options:** For '01 games, enable options requiring a double to start (Double In) or finish (Double Out) the game.
- **Handicap Feature:** Adjust starting scores or other game parameters to balance play between players of different skill levels. Press the **Handicap** button to activate and adjust.
- **Missed Dart Feature:** Allows for correction if a dart is thrown but not registered by the board. Press the **Miss/Reset** button to register a missed dart or reset the current turn.



Image: A hand interacting with the control panel of the Accudart NOVA Electronic Dartboard, specifically highlighting the 'Miss/Reset' button, which is part of the advanced features for game customization.

MAINTENANCE

Proper maintenance will extend the life of your Accudart NOVA Electronic Dartboard.

- **Cleaning:** Wipe the dartboard and cabinet with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Dart Tips:** Regularly check and replace soft tips on your darts as they wear down. The package includes replacement tips.
- **Storage:** When not in use, close the cabinet doors to protect the dartboard surface from dust and damage.
- **Battery Replacement:** If using batteries, replace them when the display dims or the dartboard functions erratically. Remove batteries if the dartboard will not be used for an extended period.



Image: Six soft tip darts, three black and three red, are displayed on a wooden surface, emphasizing that the product includes replacement tips for maintenance.

TROUBLESHOOTING

If you encounter issues with your dartboard, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dartboard does not power on.	No power, AC adapter not connected, batteries dead or incorrectly inserted.	Ensure AC adapter is securely plugged in. If using batteries, check polarity and replace if necessary.
Darts do not register.	Darts not thrown hard enough, broken dart tip, segment stuck.	Throw darts with sufficient force. Replace broken dart tips. Gently wiggle the segment to free it. Use the Miss/Reset button if a dart is missed.

Problem	Possible Cause	Solution
Display is dim or flickering.	Low battery power.	Replace batteries or use the AC adapter.
Sound is not working.	Sound is muted or volume is too low.	Press the Sound button to adjust volume or unmute.

SPECIFICATIONS

- **Model Name:** NOVA Electronic Dartboard
- **Model Number:** DA9450W
- **Brand:** Accudart
- **Material:** Plastic
- **Color:** Black
- **Game Modes:** 35 (580 variations)
- **Players:** Up to 8
- **Power Source:** AC Adapter (included) or 3 x AA Batteries (not included)
- **Dimensions (L x W x H):** Approximately 9.06 x 9.06 x 12.2 inches (Dartboard only)
- **Package Dimensions (L x W x H):** Approximately 27.5 x 25 x 4.2 inches
- **Package Weight:** Approximately 9.05 Kilograms

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Accudart customer service. Keep your purchase receipt as proof of purchase.
Visit the official Accudart store for more information:[Accudart Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CKTX5RWB>

More documents and user manuals: <https://manuals.plus/>