

V-028B

VGR Hair Trimmer (Model V-028B) User Manual

Brand: Generic | Model: V-028B

1. INTRODUCTION

Thank you for choosing the VGR Hair Trimmer Model V-028B. This user manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new hair trimmer. Please read this manual thoroughly before first use and keep it for future reference.

2. PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present and in good condition:

- 1 x VGR Hair Trimmer (Model V-028B)
- 2 x Guide Combs (different sizes)
- 1 x Cleaning Brush
- 1 x Lubricating Oil Bottle
- 1 x USB Charging Cable
- 1 x User Manual (this document)



Figure 2.1: VGR Hair Trimmer and included accessories.

3. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your VGR Hair Trimmer:



Figure 3.1: Key components of the VGR Hair Trimmer.

- **Professional Blade:** High-quality cutting blade for precise trimming.
- **Cutting Guides:** Two detachable combs for varying hair lengths.
- **ON/OFF Switch:** Powers the trimmer on or off.
- **Length Selector:** Rotary dial to adjust cutting length when using guide combs.
- **USB Charging Port:** For connecting the USB charging cable.
- **Charging Indicator Light:** Illuminates to show charging status.

4. SETUP AND INITIAL USE

4.1 Charging the Trimmer

Before first use, fully charge the trimmer. The device is equipped with a 1000mAh Lithium-Ion battery.

1. Ensure the trimmer is switched off.
2. Connect the USB charging cable to the trimmer's charging port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, laptop, USB wall adapter, power bank).
4. The charging indicator light will illuminate during charging. A full charge takes approximately 8 hours.
5. Once fully charged, the trimmer provides approximately 90 minutes of cordless operation.



Figure 4.1: Battery specifications and charging options.



4.2 Attaching Guide Combs

To achieve desired hair lengths, attach one of the provided guide combs:

- Ensure the trimmer is off.
- Align the chosen guide comb with the trimmer blade and push it firmly until it clicks into place.
- To remove, gently pull the comb away from the blade.

5. OPERATING THE TRIMMER

5.1 Turning On/Off

Press the ON/OFF switch located on the front of the trimmer to turn it on or off.

5.2 Adjusting Cutting Length

The VGR Hair Trimmer features a length selector dial for precise adjustments from 1mm to 20mm, with 0.5mm precision cutting.



Figure 5.1: Length selector dial.

- With a guide comb attached, rotate the length selector dial to your desired cutting length. The numbers on the dial correspond to millimeters.
- For trimming without a guide comb, the trimmer provides a close cut (approximately 0.5mm).

5.3 Trimming Techniques

For best results, follow these general guidelines:

- Ensure hair is clean and dry before trimming.
- Start with a longer length setting and gradually reduce it until the desired length is achieved.
- Move the trimmer against the direction of hair growth for an even cut.

- Use slow, controlled movements. Do not rush.
- Regularly tap or brush off accumulated hair from the blade during use to maintain performance.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your trimmer.

6.1 Cleaning the Blades

1. Turn off the trimmer and unplug it from any power source.
2. Remove the guide comb.
3. Use the provided cleaning brush to brush away any loose hair from the blades and the trimmer body.
4. For a more thorough clean, the blade head can typically be detached (refer to specific instructions if provided with the product for blade removal). Rinse the blade head under running water if it is washable (check product specifications for water resistance). **Do not submerge the main body of the trimmer in water.**
5. Allow the blade head to air dry completely before reattaching.

6.2 Oiling the Blades

To maintain blade sharpness and smooth operation, oil the blades regularly (after every few uses or as needed).

1. Apply 1-2 drops of the provided lubricating oil (or a suitable clipper oil) onto the blades.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

7. TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following table before seeking professional assistance:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully (approx. 8 hours).
Poor cutting performance / pulling hair.	Blades are dull or clogged with hair. Blades need oiling.	Clean the blades thoroughly. Apply lubricating oil to the blades.
Trimmer makes unusual noise.	Blades are not properly oiled or there's debris.	Clean and oil the blades. Ensure no foreign objects are lodged.
Charging indicator not lighting up.	Cable or power source issue. Trimmer already fully charged.	Check USB cable connection and try a different USB port/adaptor.

8. SPECIFICATIONS

Feature	Detail
Brand	Generic
Manufacturer	VGR
Model Number	V-028B

Feature	Detail
Battery Type	Lithium Ion (1 required, included)
Battery Capacity	1000mAh
Charge Time	Approx. 8 hours
Work Time	Approx. 90 minutes
Cutting Lengths	1mm - 20mm (with guide combs), 0.5mm (without comb)
Dimensions (Package)	20 x 13 x 5 cm
Weight (Package)	270 grams
ASIN	B0CKTY7Z44

9. SAFETY INFORMATION

Please observe the following safety precautions to reduce the risk of injury or damage:

- Keep the appliance dry. Do not use it near water or in wet conditions.
- Do not attempt to repair or disassemble the trimmer yourself. Contact qualified service personnel.
- Keep out of reach of children.
- Use only the provided charging cable.
- Do not use the trimmer if the blades are damaged, as this may cause injury.
- Avoid dropping the trimmer, as this may damage internal components.
- Store the trimmer in a cool, dry place when not in use.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact the seller/manufacturer directly. Ensure you have your purchase receipt and product model number (V-028B) ready when contacting support.

Manufacturer: VGR

